

CAUTION / NOTICE / HINT**CAUTION:**


- Wear protective gloves when removing the exhaust pipe assembly.
- The exhaust pipe assembly is extremely hot immediately after the engine has stopped.
- Confirm that the exhaust pipe assembly has cooled down before removing it.

PROCEDURE**1.REMOVE TAILPIPE ASSEMBLY****17430**

- Remove the 4 nuts and disconnect the 2 exhaust pipe support cushions.
- Remove the 2 bolts, 2 nuts and tailpipe assembly.

*A

*B

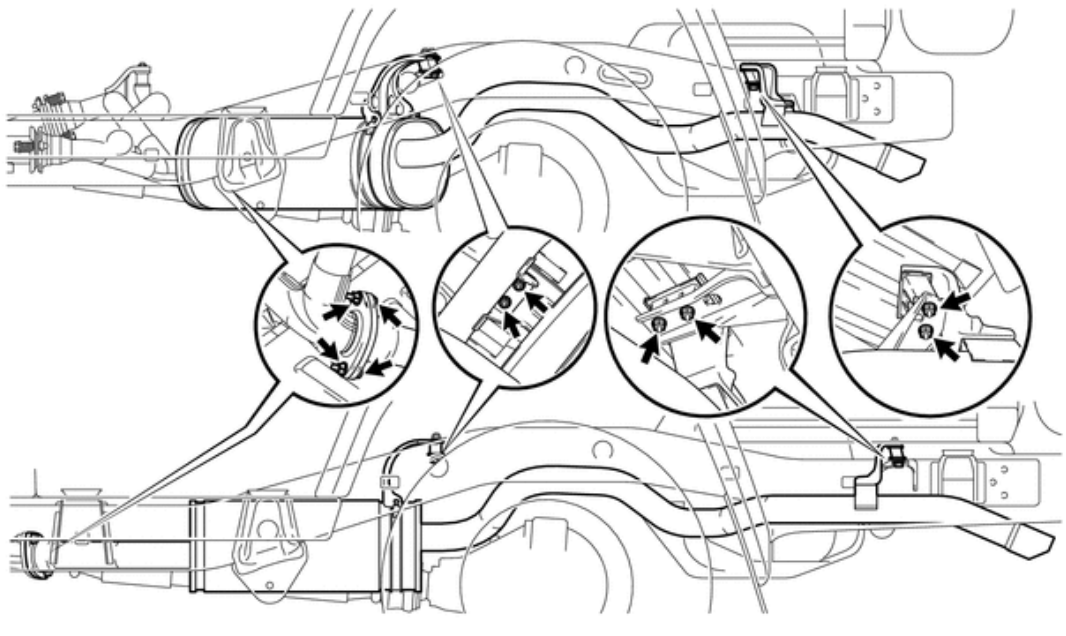


P

*A	for Model Code #J71 Series	*B	for Model Code #J76 Series
----	----------------------------	----	----------------------------

- Remove the gasket from the center exhaust pipe assembly.
- Remove the 2 nuts and exhaust pipe support cushion from the tailpipe assembly.
- Remove the 2 nuts and exhaust pipe support cushion from the No. 2 exhaust pipe support stay.
- Remove the 2 nuts, No. 2 exhaust pipe support stay and exhaust pipe clamp from the tailpipe assembly.


2.REMOVE CENTER EXHAUST PIPE ASSEMBLY**17403**

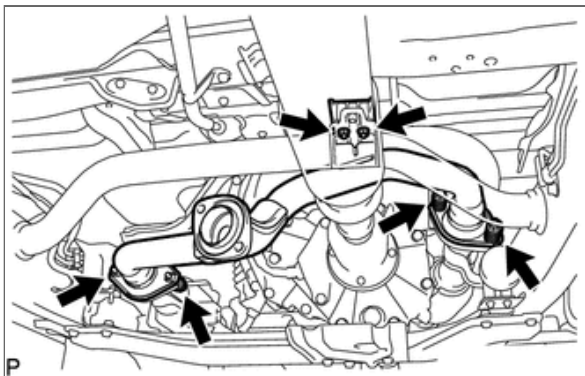

- a. Remove the 2 nuts and disconnect the exhaust pipe support cushion.
- b. Remove the 4 bolts, 4 compression springs and center exhaust pipe assembly.
- c. Remove the 2 gaskets from the front exhaust pipe assembly and No. 2 front exhaust pipe assembly.
- d. Remove the 2 nuts and exhaust pipe support cushion from the center exhaust pipe assembly.

3.REMOVE NO. 2 FRONT EXHAUST PIPE ASSEMBLY


17450

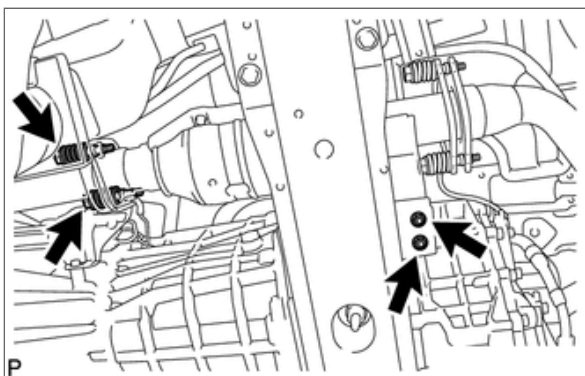

- a. Remove the 2 nuts and disconnect the exhaust pipe support cushion.
- b. Remove the 2 bolts, 2 compression springs and No. 2 front exhaust pipe assembly.
- c. Remove the gasket from the exhaust manifold sub-assembly LH.
- d. Remove the 2 nuts and exhaust pipe support cushion from the No. 2 front exhaust pipe assembly.

4.REMOVE FRONT EXHAUST PIPE ASSEMBLY

17410

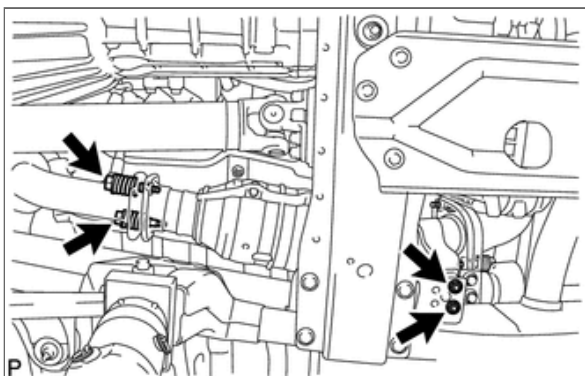

- a. Remove the 2 nuts and disconnect the exhaust pipe support cushion.
- b. Remove the 2 bolts, 2 compression springs and front exhaust pipe assembly.

- c.** Remove the gasket from the exhaust manifold sub-assembly RH.
- d.** Remove the 2 nuts and exhaust pipe support cushion from the front exhaust pipe assembly.
- e.** Remove the 2 nuts, 2 bolts and exhaust pipe damper from the front exhaust pipe assembly.