

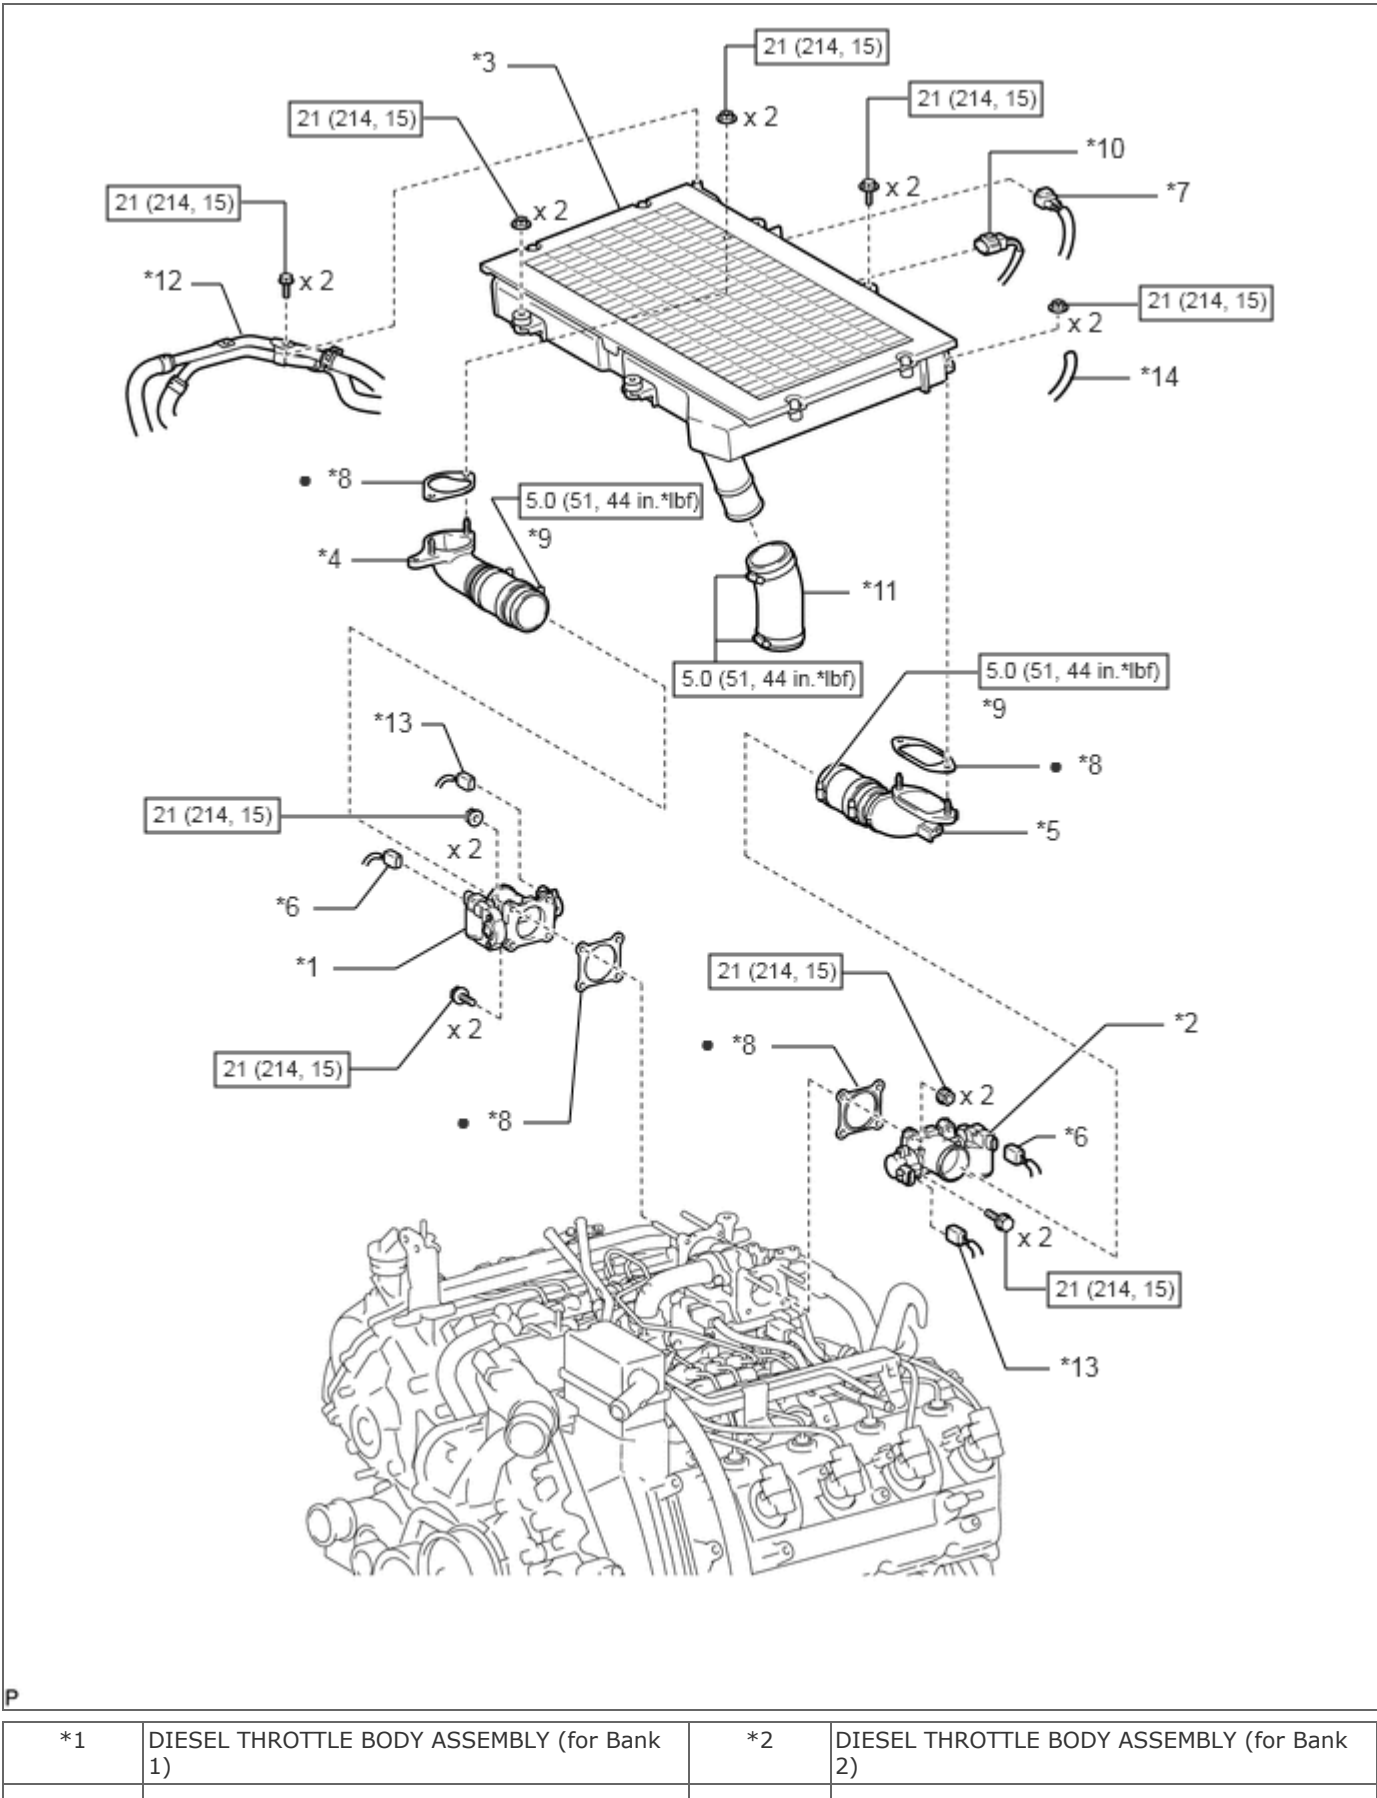


ILLUSTRATION



*3	INTERCOOLER ASSEMBLY	*4	NO. 1 COOL AIR INLET
*5	NO. 2 COOL AIR INLET	*6	DIESEL THROTTLE MOTOR CONNECTOR
*7	DIESEL TURBO PRESSURE SENSOR CONNECTOR	*8	GASKET
*9	HOSE CLAMP	*10	INTAKE AIR TEMPERATURE CONNECTOR
*11	NO. 1 AIR HOSE	*12	OUTLET HEATER WATER PIPE B
*13	THROTTLE POSITION SENSOR CONNECTOR	*14	VACUUM HOSE
 N*m (kgf*cm, ft.*lbf) : Specified torque		<ul style="list-style-type: none"> <li>• Non-reusable part</li> </ul>	


## ILLUSTRATION

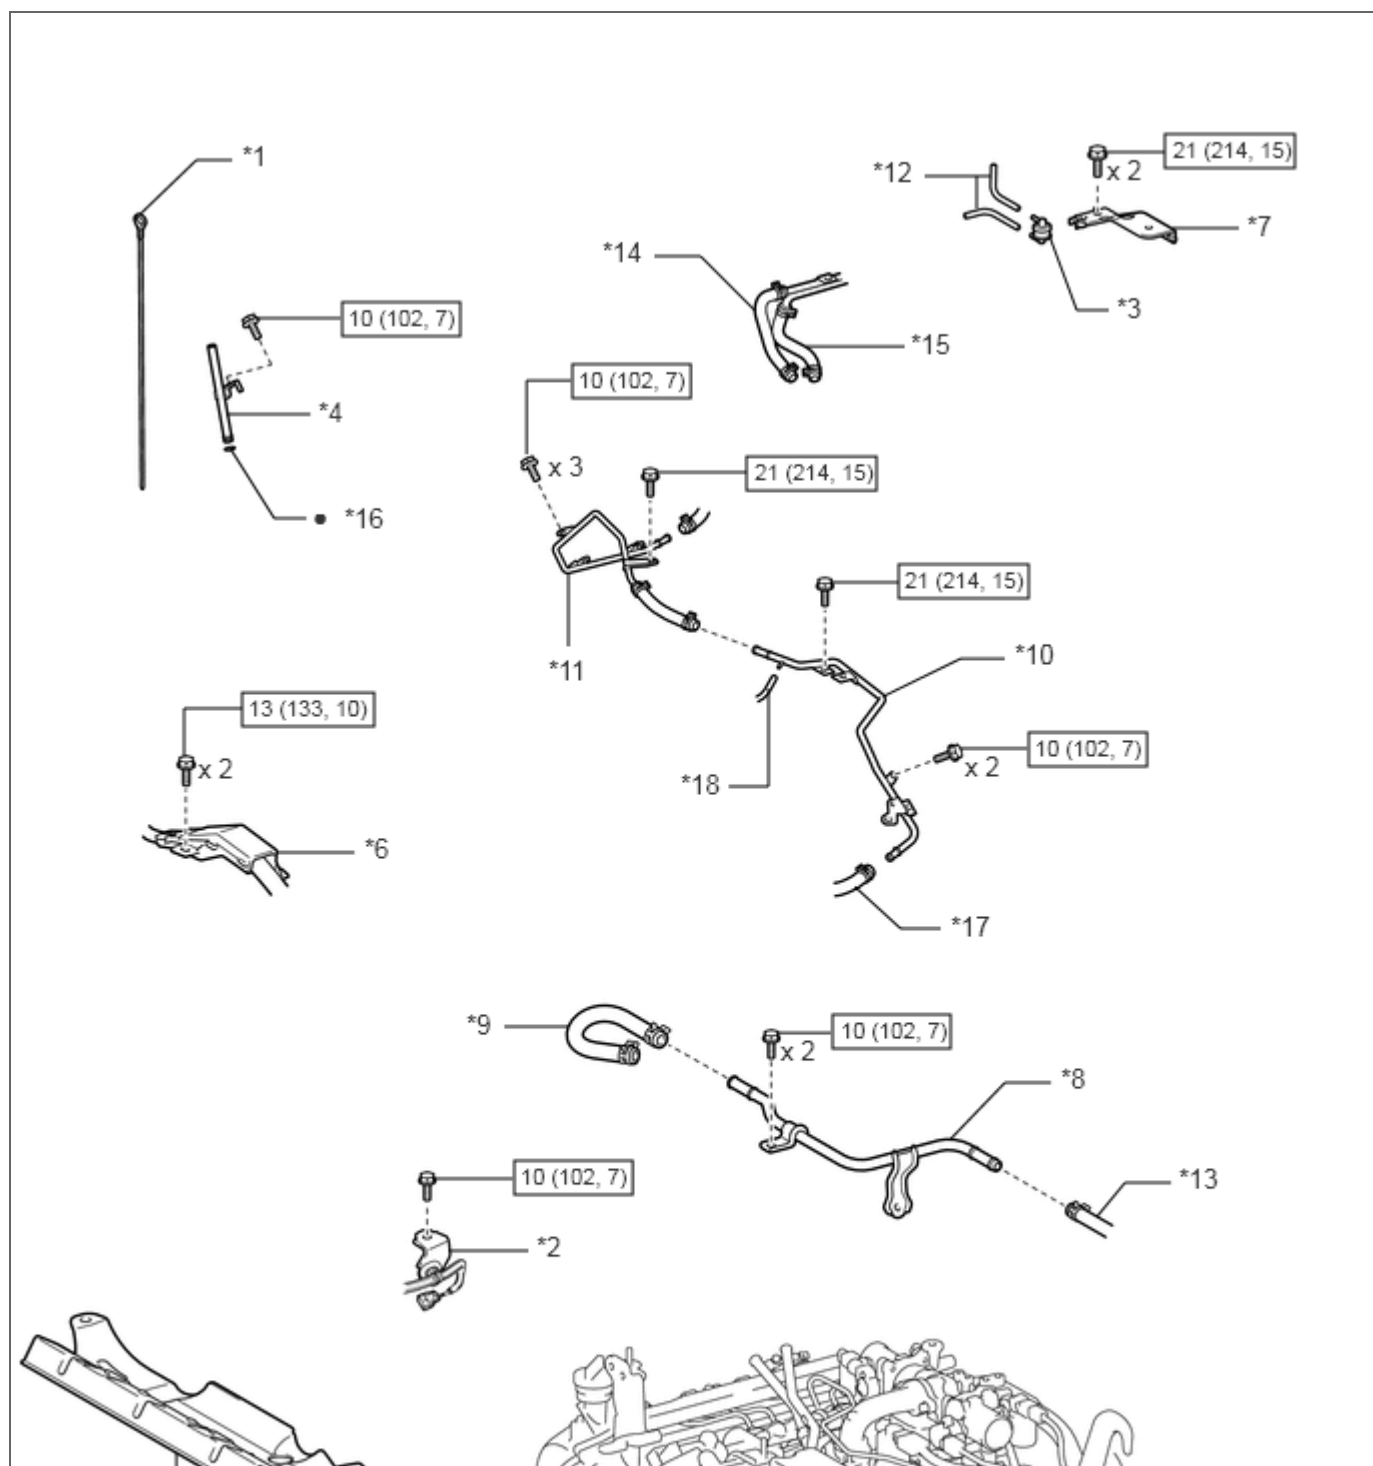




*1	ENGINE OIL LEVEL DIPSTICK	*2	FUEL PUMP MOTOR WIRE
*3	NO. 1 GAS FILTER	*4	NO. 2 ENGINE OIL LEVEL DIPSTICK GUIDE
*5	NO. 2 ENGINE UNDER COVER	*6	NO. 2 ENGINE WIRE
*7	NO. 3 INTERCOOLER SUPPORT BRACKET	*8	NO. 4 FUEL PIPE SUB-ASSEMBLY
*9	NO. 5 FUEL HOSE	*10	VACUUM PUMP TO CONNECTOR TUBE
*11	VACUUM RESERVOIR CONNECT TUBE	*12	HOSE
*13	NO. 2 FUEL HOSE	*14	NO. 2 WATER BY-PASS HOSE
*15	NO. 3 WATER BY-PASS HOSE	*16	O-RING
*17	UNION TO CONNECTOR TUBE HOSE	*18	VACUUM HOSE
<div><div></div></div> <p>N*m (kgf*cm, ft.*lbf) : Specified torque</p>		<ul style="list-style-type: none"><li>Non-reusable part</li></ul>	

ILLUSTRATION

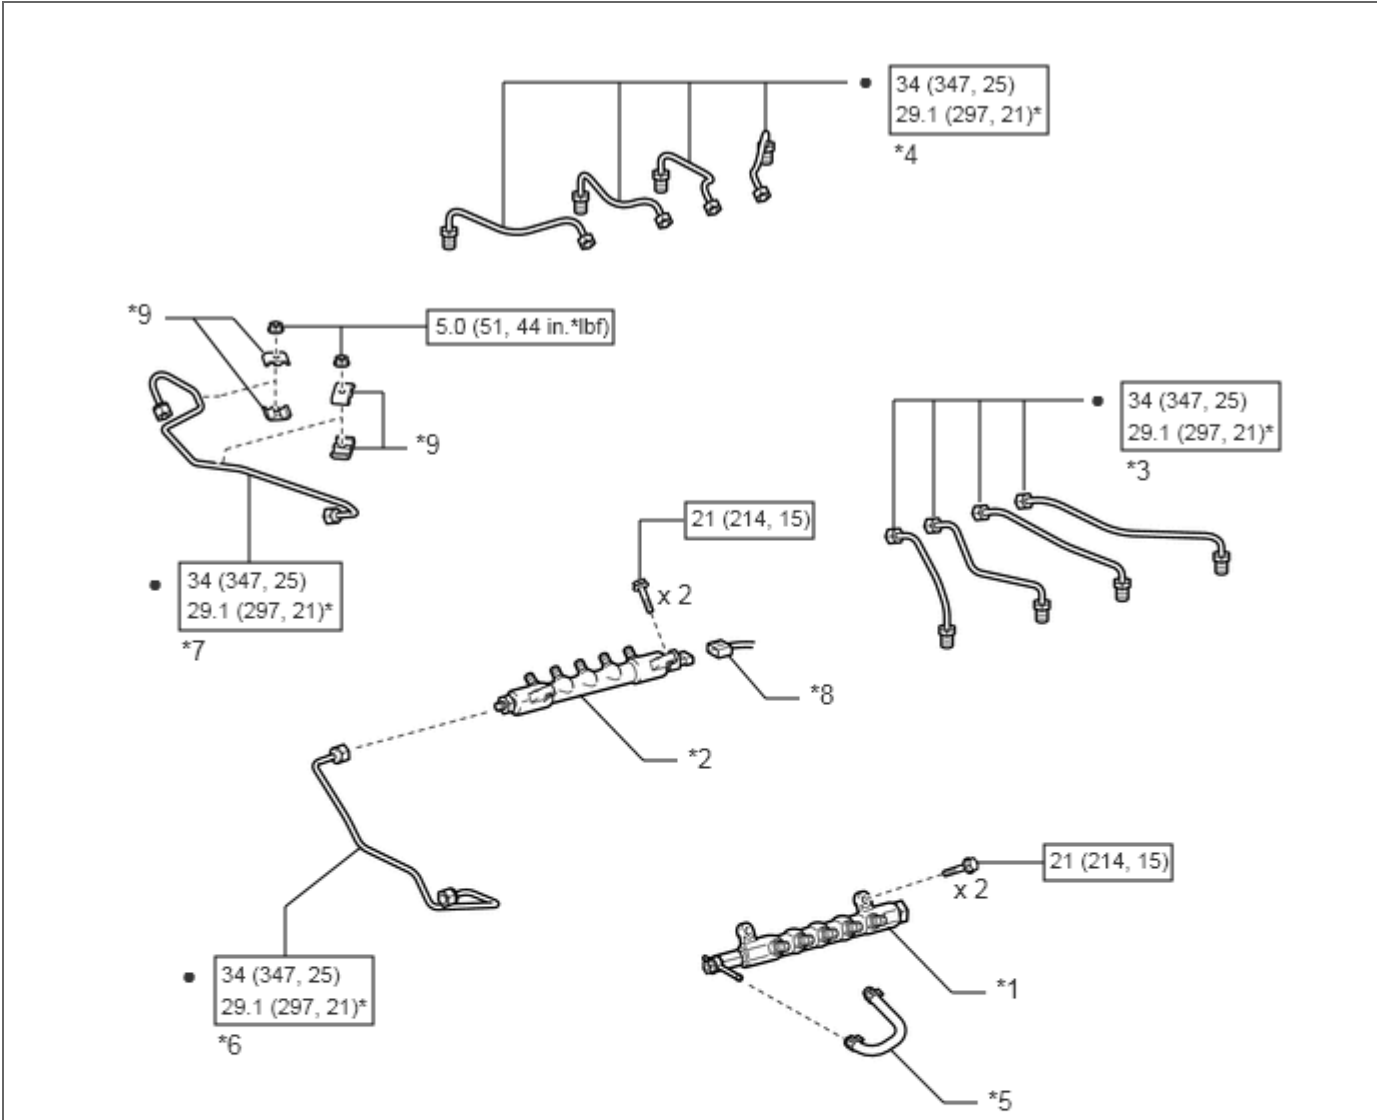


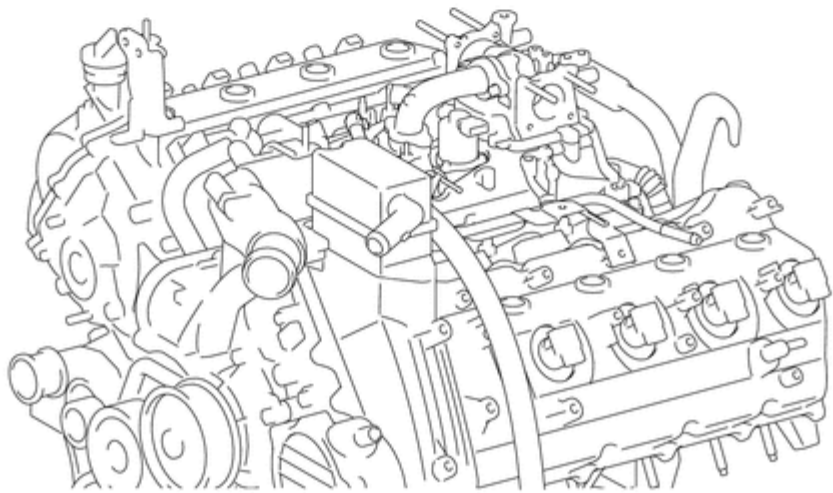


P

*1	COMMON RAIL LH	*2	COMMON RAIL RH
*3	INJECTION PIPE LH	*4	INJECTION PIPE RH
*5	NO. 1 FUEL HOSE	*6	NO. 5 INJECTION PIPE SUB-ASSEMBLY
*7	NO. 6 INJECTION PIPE SUB-ASSEMBLY	*8	FUEL PRESSURE SENSOR CONNECTOR
*9	NO. 2 INJECTION PIPE CLAMP	-	-
<div><div></div></div>	N*m (kgf*cm, ft.*lbf) : Specified torque	*	For use with union nut wrench
•	Non-reusable part	-	-

ILLUSTRATION

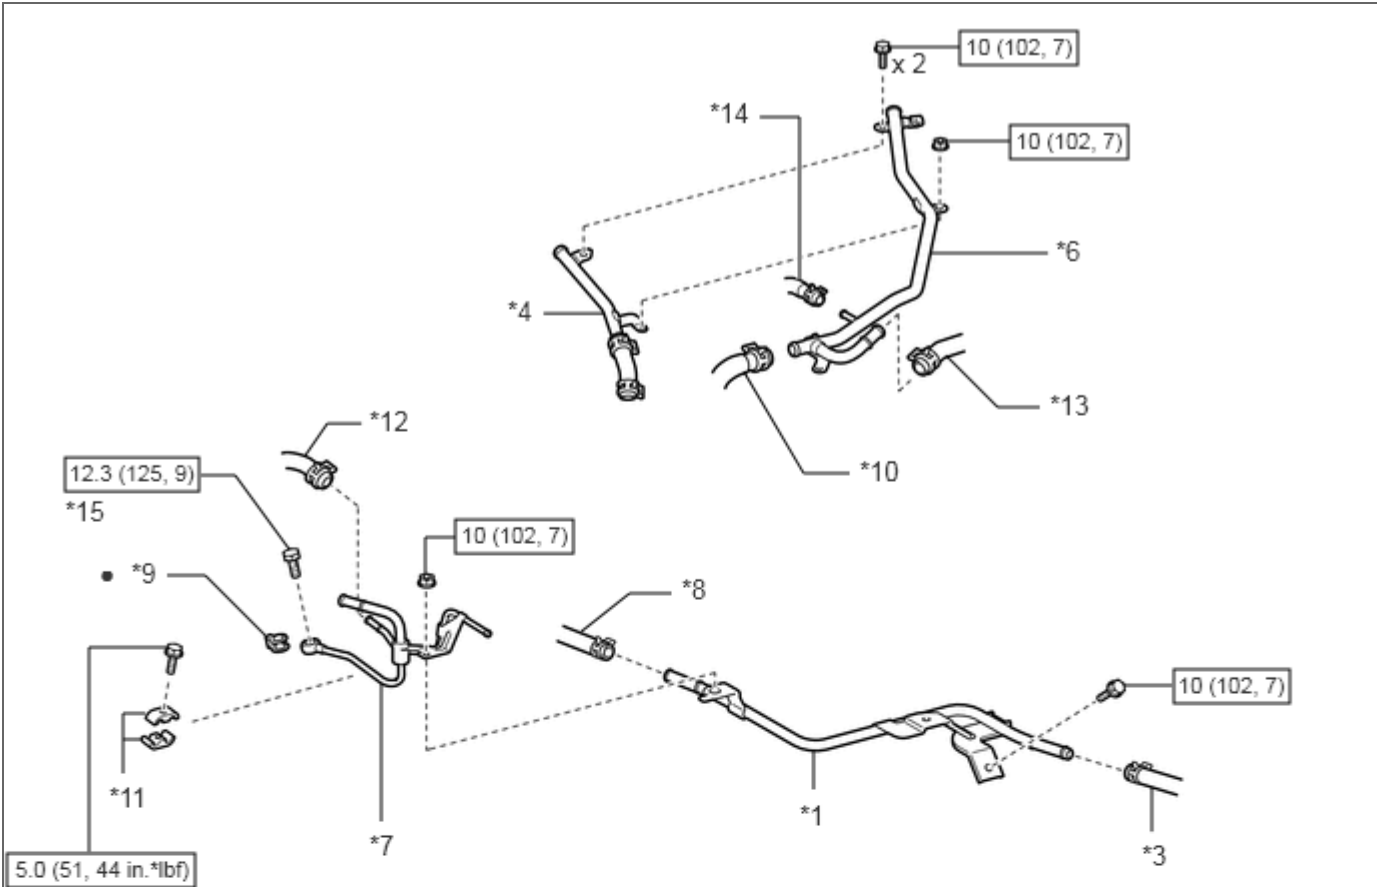


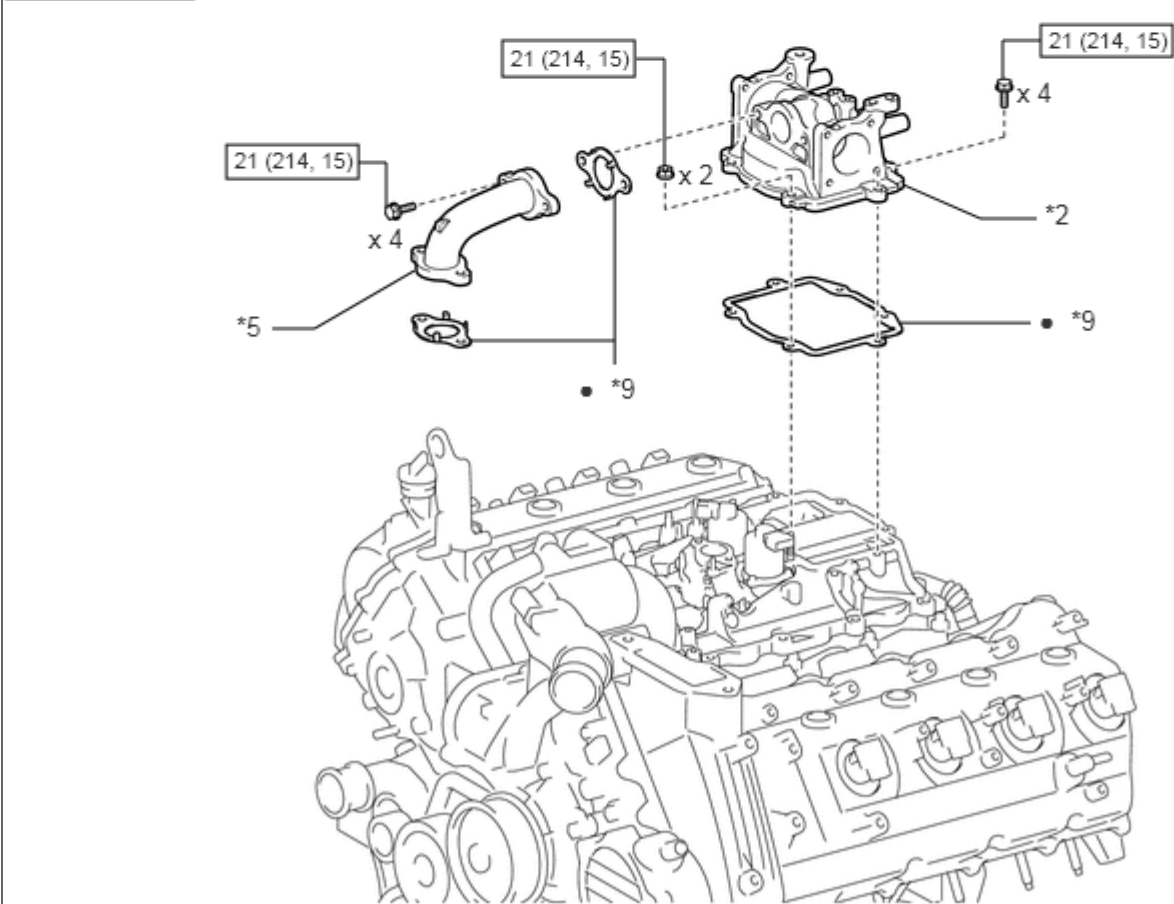


P

*1	FUEL FILTER TO INJECTION PUMP FUEL PIPE SUB-ASSEMBLY	*2	INTAKE PIPE
*3	NO. 1 FUEL HOSE	*4	NO. 2 WATER BY-PASS PIPE
*5	NO. 4 EGR PIPE	*6	NO. 4 WATER BY-PASS PIPE
*7	NO. 5 FUEL PIPE SUB-ASSEMBLY	*8	FUEL PUMP HOSE
*9	GASKET	*10	INLET WATER HOSE
*11	NO. 2 INJECTION PIPE CLAMP	*12	NO. 3 FUEL HOSE
*13	NO. 4 WATER BY-PASS HOSE	*14	NO. 7 WATER BY-PASS HOSE
*15	UNION BOLT	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part

ILLUSTRATION

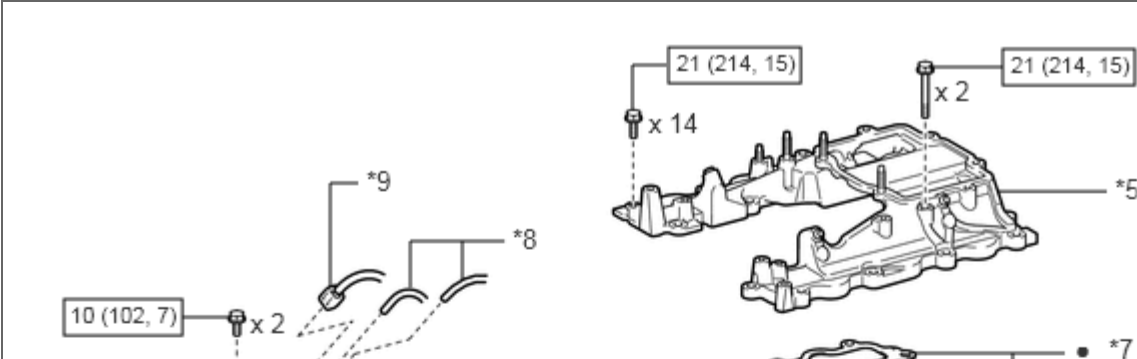

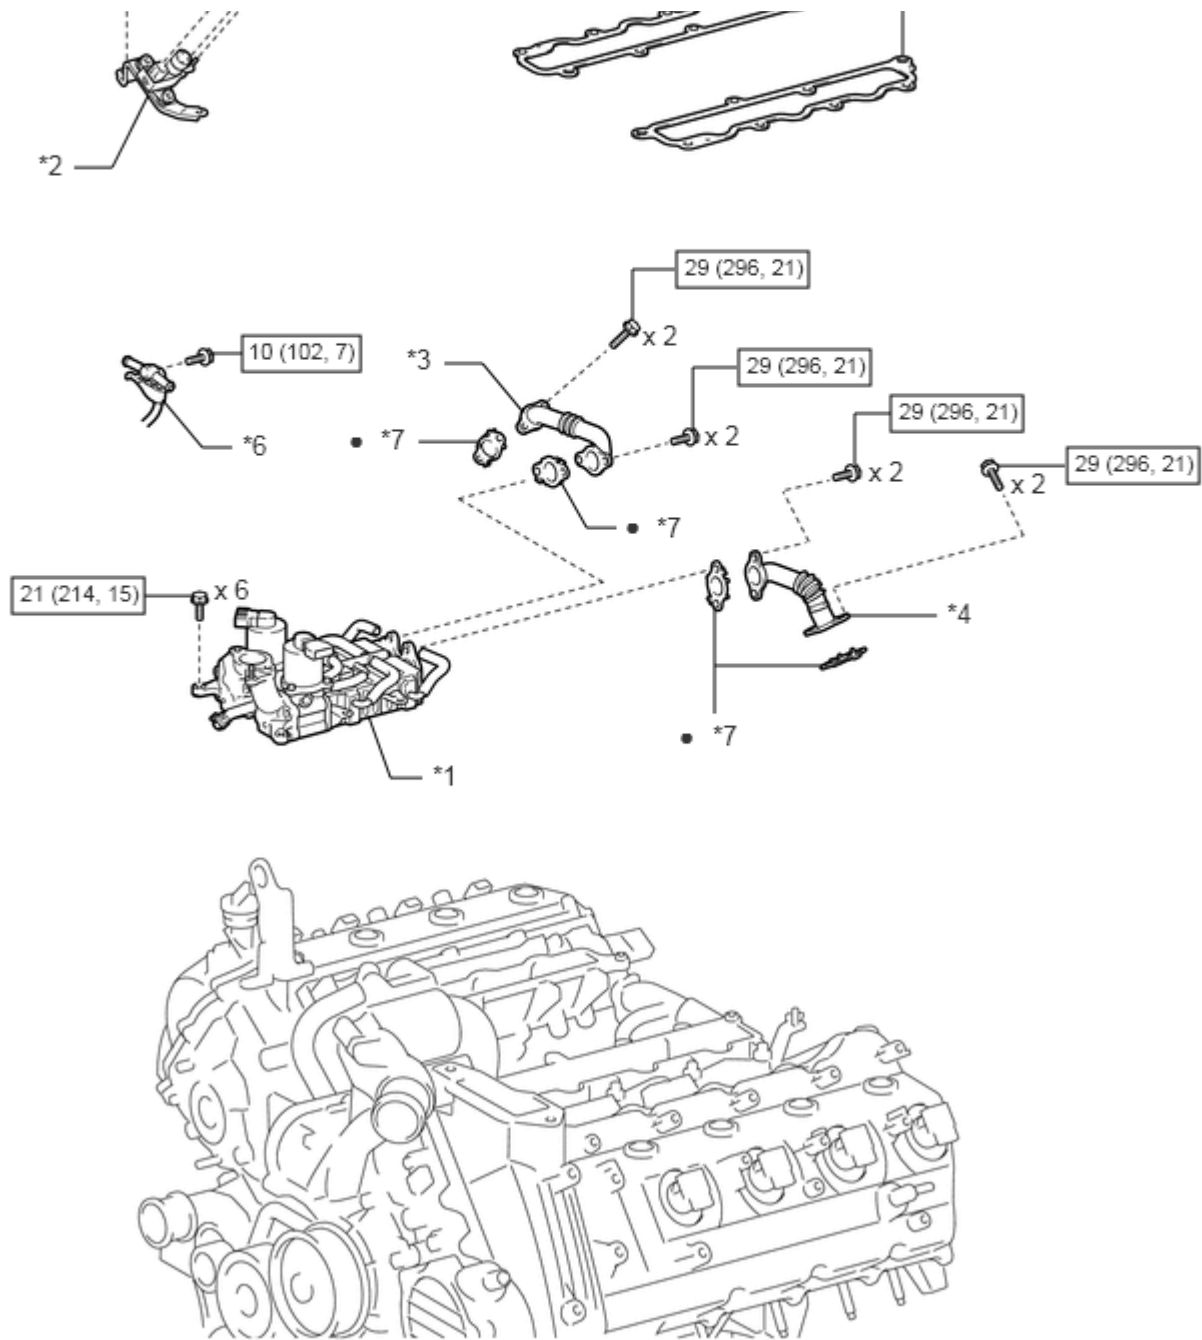


P

*1	EGR VALVE WITH EGR COOLER	*2	ELECTRIC VACUUM REGULATING VALVE ASSEMBLY
*3	NO. 1 EGR PIPE SUB-ASSEMBLY	*4	NO. 2 EGR PIPE SUB-ASSEMBLY
*5	NO. 3 INTAKE MANIFOLD	*6	NO. 5 WATER BY-PASS PIPE
*7	GASKET	*8	VACUUM HOSE
*9	ELECTRIC VACUUM REGULATING VALVE CONNECTOR	-	-
<div><div></div></div>	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part

ILLUSTRATION

21 (214, 15)

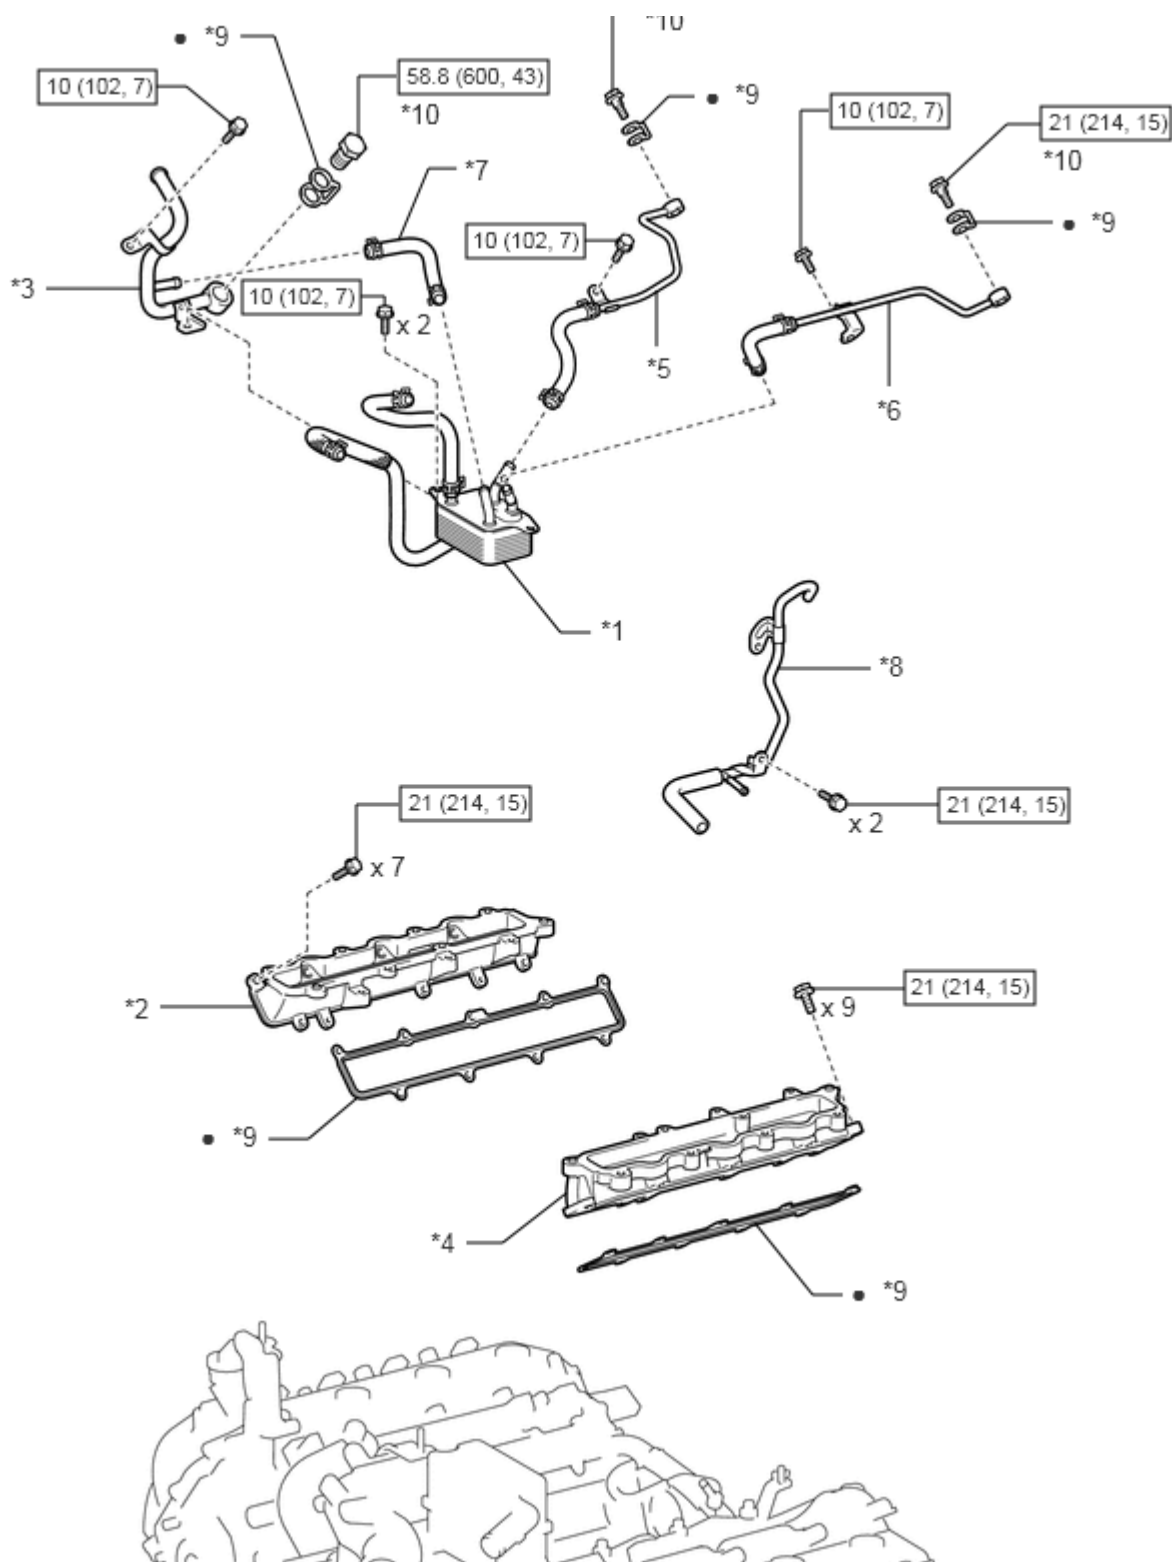

P

*1	FUEL COOLER	*2	NO. 1 INTAKE MANIFOLD
*3	NO. 1 WATER BY-PASS PIPE	*4	NO. 2 INTAKE MANIFOLD
*5	NO. 3 NOZZLE LEAKAGE PIPE	*6	NO. 4 NOZZLE LEAKAGE PIPE
*7	NO. 6 WATER BY-PASS HOSE	*8	STARTER HOSE BRACKET SUB-ASSEMBLY
*9	GASKET	*10	UNION BOLT
<div style="border: 1px solid black; width: 40px; height: 20px; margin: 0 auto;"></div> N*m (kgf*cm, ft.*lbf): Specified torque		• Non-reusable part	

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.