

PROCEDURE

1.REMOVE PROPELLER SHAFT ASSEMBLY**37110**

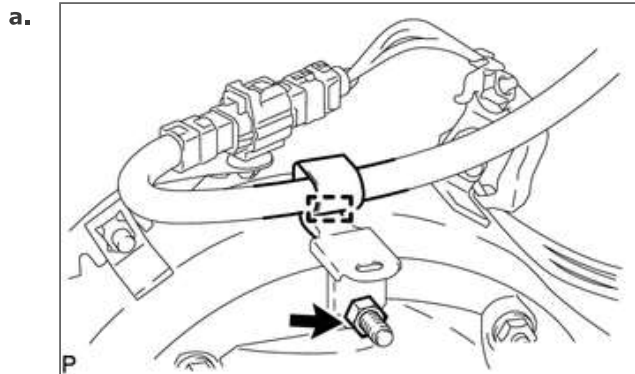
Click here [Drivetrain>DRIVE SHAFT / PROPELLER SHAFT>PROPELLER SHAFT ASSEMBLY>REMOVAL](#)

2.DRAIN DIFFERENTIAL OIL

Click here [Drivetrain>AXLE AND DIFFERENTIAL>DIFFERENTIAL OIL>REPLACEMENT](#)

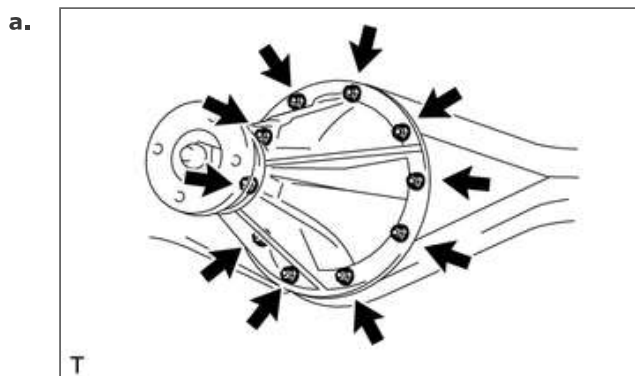
3.REMOVE REAR AXLE SHAFT ASSEMBLY

Click here [Drivetrain>AXLE AND DIFFERENTIAL>REAR AXLE SHAFT>REMOVAL](#)

4.REMOVE WIRE HARNESS CLAMP BRACKET (w/ ABS)

Disconnect the clamp.

- b. Remove the nut and wire harness clamp bracket.

5.REMOVE REAR DIFFERENTIAL CARRIER SUB-ASSEMBLY**41101**

Remove the 10 nuts, 10 washers and rear differential carrier sub-assembly.

NOTICE:

Be careful not to damage the contact surfaces of the rear differential carrier sub-assembly and rear axle housing.

- b. Remove the gasket.