


DOOR LOCK POWER DOOR LOCK CONTROL SYSTEM PARTS LOCATION

ILLUSTRATION

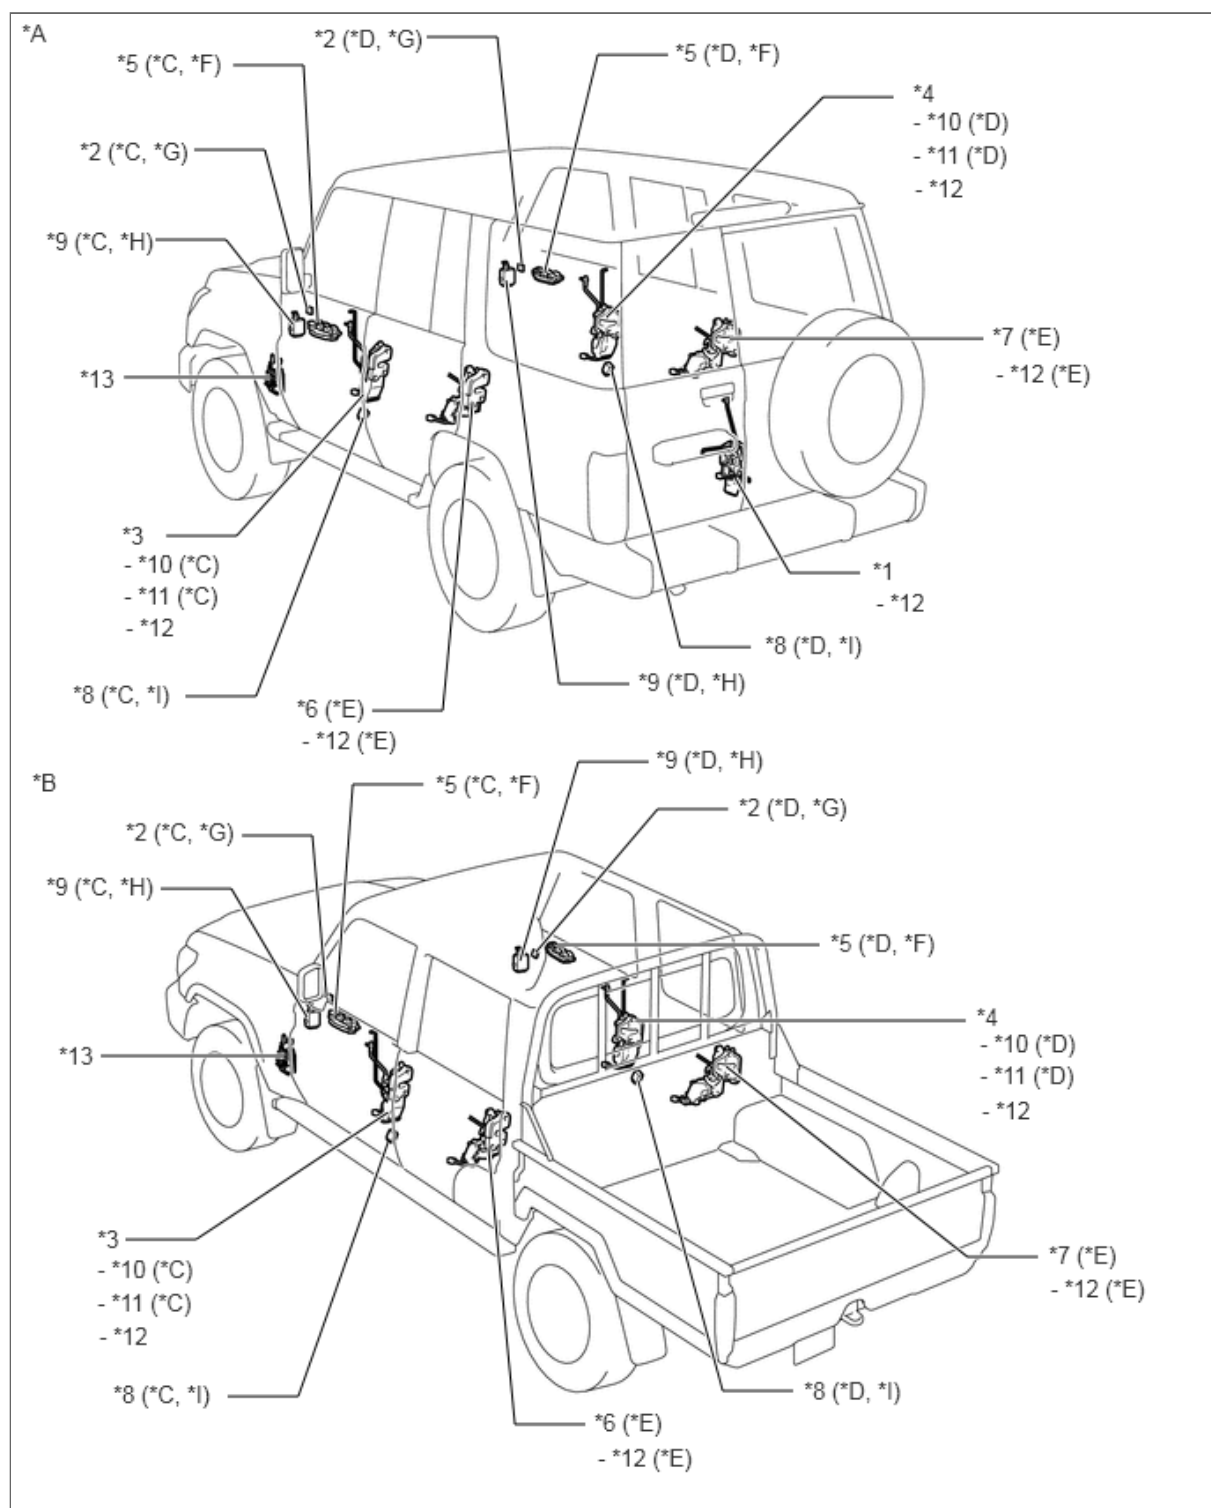

*A	except Pickup	*B	for Pickup
*C	for LHD	*D	for RHD
*E	w/ Rear Door	*F	w/ Power Window Control System
*G	w/o Power Window Control System	*H	w/ Wireless Door Lock Control System
*I	w/o Wireless Door Lock Control System	-	-
*1	BACK DOOR LOCK ASSEMBLY	*2	DOOR CONTROL SWITCH ASSEMBLY
*3	FRONT DOOR LOCK ASSEMBLY LH	*4	FRONT DOOR LOCK ASSEMBLY RH
*5	POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY	*6	REAR DOOR LOCK ASSEMBLY LH
*7	REAR DOOR LOCK ASSEMBLY RH	*8	DOOR CONTROL RELAY ASSEMBLY

*9	DOOR CONTROL WITH RECEIVER ECU ASSEMBLY	*10	KEY-LINKED SWITCH
*11	UNLOCK DETECTION SWITCH	*12	DOOR LOCK MOTOR
*13	COWL SIDE RELAY BLOCK ASSEMBLY - DOOR FUSE - ECU-B FUSE (w/ Wireless Door Lock Control System)	-	-