

## PROCEDURE

### 1.REMOVE INTAKE AIR SURGE TANK


17129

[Click here](#)Engine / Hybrid System>1GR-FE INTAKE / EXHAUST>INTAKE MANIFOLD>REMOVAL

### 2.REMOVE PCV VALVE SUB-ASSEMBLY

12204

a.

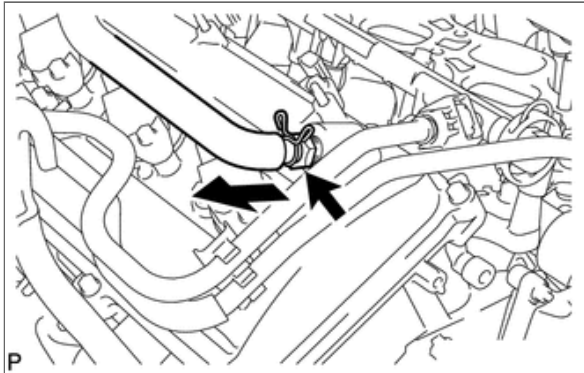

Slide the clamp and disconnect the No. 2 PCV hose from the PCV valve sub-assembly.

b. Remove the PCV valve sub-assembly.