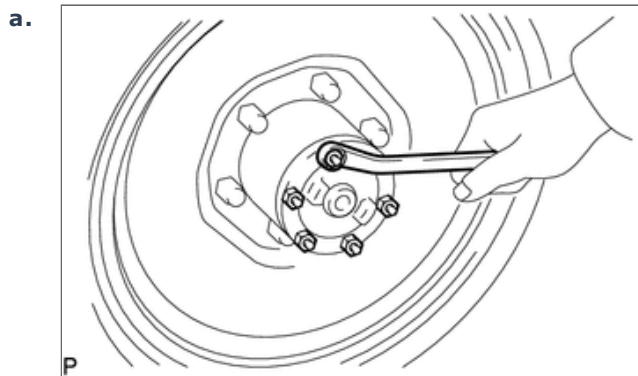



AXLE AND DIFFERENTIAL REAR AXLE SHAFT REMOVAL

CAUTION / NOTICE / HINT**HINT:**


- Use the same procedure for the RH and LH sides.
- The procedure listed below is for the LH side.

PROCEDURE**1.REMOVE REAR AXLE SHAFT LH****42312**

Remove the 6 nuts and 6 washers.

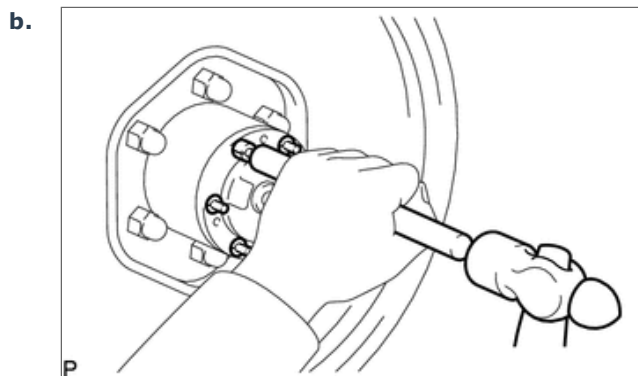


Using a brass bar and hammer, tap out the bolts and remove the 6 cone washers.

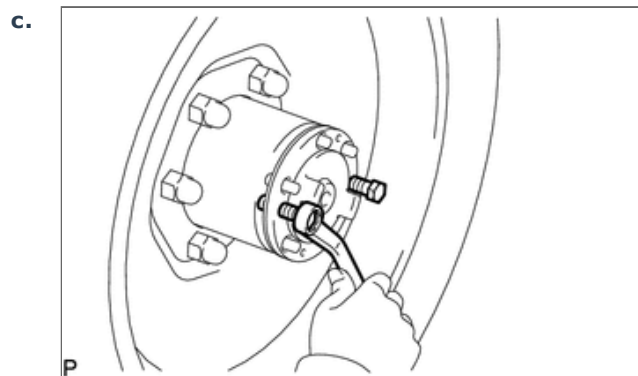

Install the 2 service bolts to the service hole.

d.

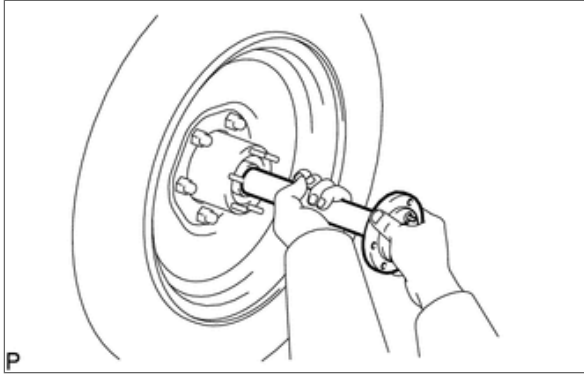


Remove the rear axle shaft together with the rear axle shaft outer flange gasket.

e. Remove the 2 service bolts from the rear axle shaft.

2.REMOVE REAR AXLE SHAFT OIL SEAL LH

42312C

a.

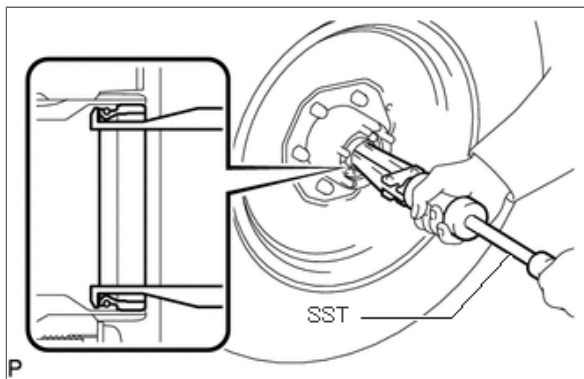

Using SST, remove the rear axle shaft oil seal LH.

SST

09308-00010