




## ILLUSTRATION

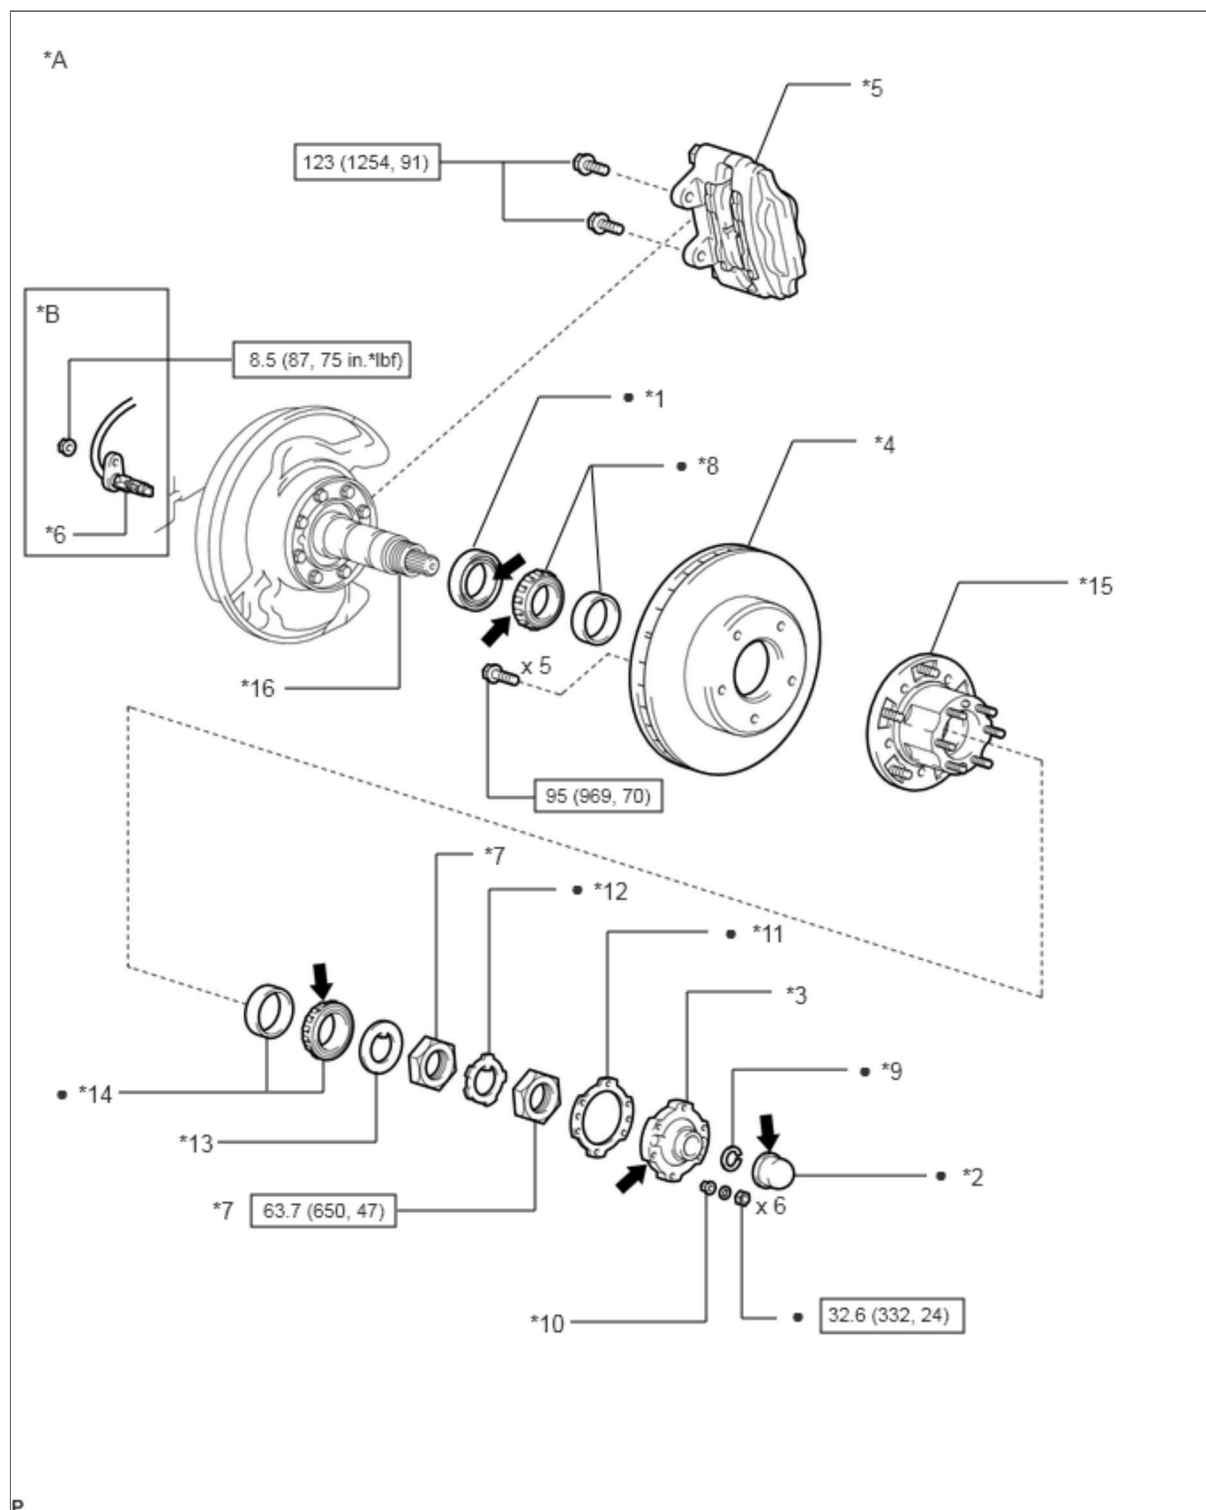


|   |   |                     |                                       |
|---|---|---------------------|---------------------------------------|
| *A                                      | w/o Free Wheel Hub                      | *B                  | w/ ABS                                |
| *1                                      | FRONT AXLE HUB OIL SEAL LH              | *2                  | FRONT AXLE OUTER SHAFT FLANGE CAP     |
| *3                                      | FRONT AXLE OUTER SHAFT FLANGE LH        | *4                  | FRONT DISC                            |
| *5                                      | FRONT DISC BRAKE CYLINDER ASSEMBLY LH   | *6                  |                                       |
| *7                                      | FRONT WHEEL ADJUSTING NUT LH            | *8                  | INNER BEARING                         |
| *9                                      | FRONT DRIVE SHAFT SNAP RING LH          | *10                 | FRONT AXLE SHAFT CONE WASHER          |
| *11                                     | FRONT AXLE OUTER SHAFT FLANGE GASKET LH | *12                 | FRONT WHEEL ADJUSTING LOCK WASHER     |
| *13                                     | FRONT AXLE HUB CLAW WASHER LH           | *14                 | OUTER BEARING                         |
| *15                                     | FRONT AXLE HUB LH                       | *16                 | STEERING KNUCKLE SPINDLE SUB-ASSEMBLY |
| N*m (kgf*cm, ft.*lbf): Specified torque |   | • Non-reusable part |                                       |



|   |   |     |                                      |
|---|---|-----|--------------------------------------|
| *5  |   | *6  | FRONT WHEEL ADJUSTING NUT LH         |
| *7  | INNER BEARING                           | *8  | FREE WHEEL HUB COVER SUB-ASSEMBLY LH |
| *9  | FREE WHEEL HUB RING LH                  | *10 | FREE WHEEL HUB GASKET LH             |
| *11   | FRONT AXLE OUTER SHAFT FLANGE GASKET LH | *12 | FRONT AXLE SHAFT CONE WASHER         |
| *13   | FRONT WHEEL ADJUSTING LOCK WASHER       | *14 | FRONT AXLE HUB CLAW WASHER LH        |
| *15   | OUTER BEARING                           | *16 | FRONT AXLE HUB LH                    |
| *17   | STEERING KNUCKLE SPINDLE SUB-ASSEMBLY   | -   | -                                    |
|  | N*m (kgf*cm, ft.*lbf): Specified torque | •   | Non-reusable part                    |
|  | MP grease                               | -   | -                                    |

## ILLUSTRATION

\*A

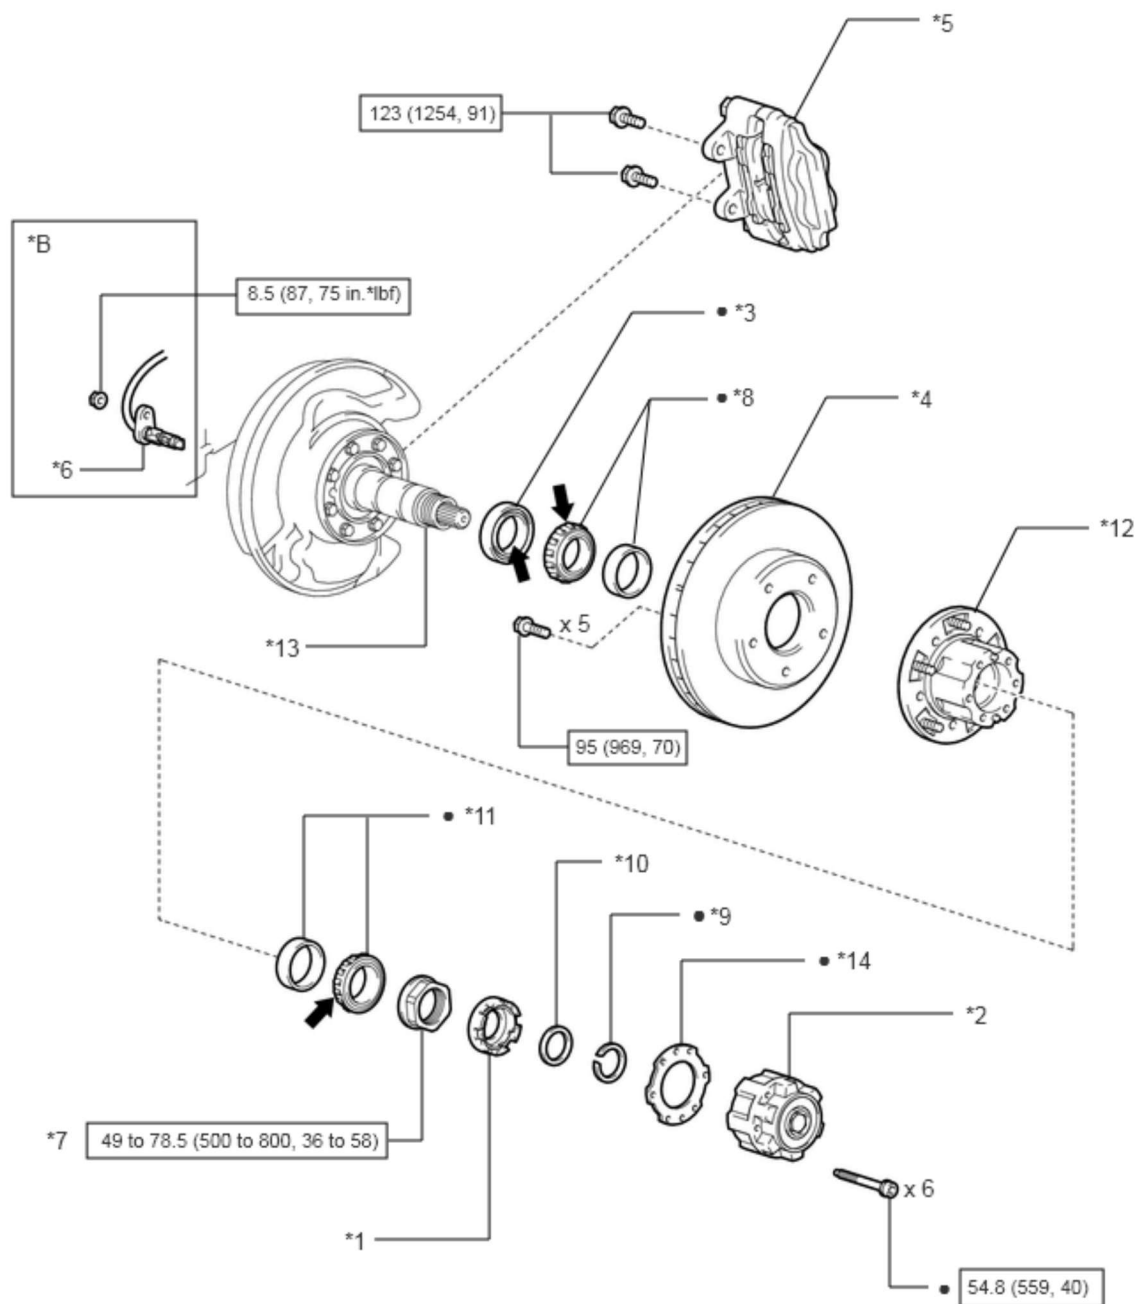

P

|     |   |     |   |
|-----|---|-----|---|
| *A  | w/ Dual Mode Automatic Locking Hub      | *B  | w/ ABS                                  |
| *1  | BRAKE SET                               | *2  | FREE WHEEL HUB ASSEMBLY                 |
| *3  | FRONT AXLE HUB OIL SEAL LH              | *4  | FRONT DISC                              |
| *5  | FRONT DISC BRAKE CYLINDER ASSEMBLY LH   | *6  |   |
| *7  | FRONT WHEEL ADJUSTING NUT LH            | *8  | INNER BEARING                           |
| *9  | FRONT DRIVE SHAFT SNAP RING LH          | *10 | FRONT DRIVE SHAFT SPACER LH             |
| *11 | OUTER BEARING                           | *12 | FRONT AXLE HUB LH                       |
| *13 | STEERING KNUCKLE SPINDLE SUB-ASSEMBLY   | *14 | FRONT AXLE OUTER SHAFT FLANGE GASKET LH |
|     | N*m (kgf*cm, ft.*lbf): Specified torque | •   | Non-reusable part                       |
|     | MP grease                               | -   | -                                       |

