


PROCEDURE

1.DRAIN CLUTCH FLUID**2.REMOVE CLUTCH HOSE**

31418

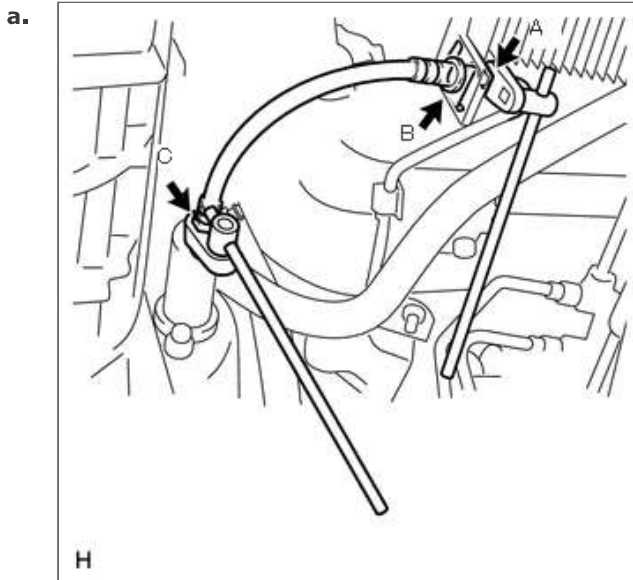

Using a union nut wrench, disconnect the clutch release cylinder to flexible hose tube labeled A.


HINT:

Use a container to catch the fluid.

- b. Remove the clip labeled B.
- c. Using a union nut wrench, remove the clutch hose labeled C.
- d. Remove the union sheet.

3.REMOVE CLUTCH RELEASE CYLINDER ASSEMBLY

31470

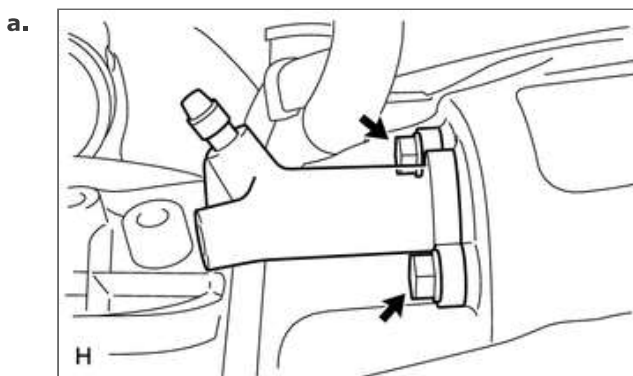

Remove the 2 bolts and pull out the clutch release cylinder assembly.