



## PROCEDURE

**1.DRAIN CLUTCH FLUID****2.REMOVE CLUTCH MASTER CYLINDER ASSEMBLY****31410**[Click here](#)Drivetrain>CLUTCH>CLUTCH MASTER CYLINDER (for RHD)>REMOVAL**3.REMOVE LOWER INSTRUMENT PANEL FINISH PANEL ASSEMBLY****55480D**[Click here](#)Vehicle Interior>INTERIOR PANELS / TRIM>INSTRUMENT PANEL SAFETY PAD>REMOVAL**4.REMOVE NO. 2 HEATER TO REGISTER DUCT****55844**[Click here](#)Steering>STEERING COLUMN>STEERING COLUMN ASSEMBLY>REMOVAL**5.REMOVE CLUTCH PEDAL SUPPORT ASSEMBLY**

- a. for 1VD-FTV:  
Disconnect the clutch switch connector.

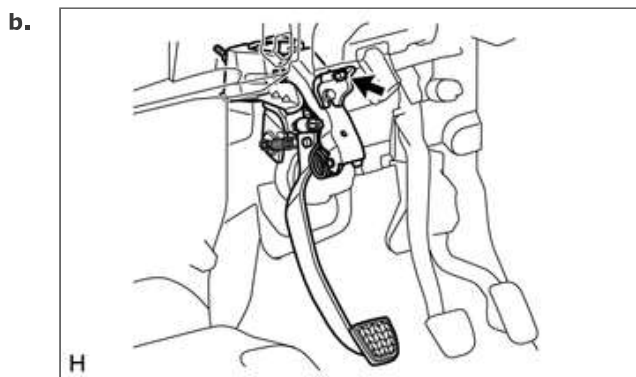

Remove the bolt and clutch pedal support assembly.

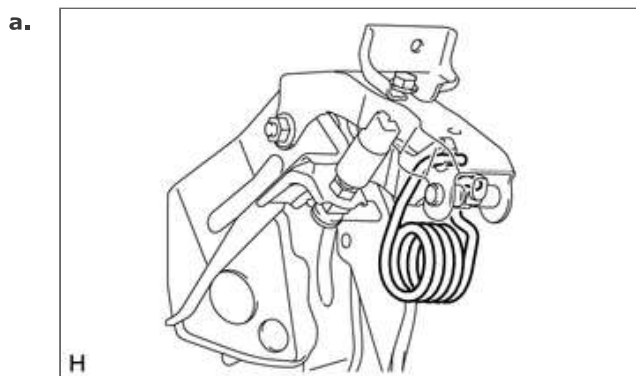
**6.REMOVE TURN OVER SPRING SEAT COMPRESSION SPRING****31301R**

Move the pedal to the full stroke position.

- b. Remove the turn over spring seat compression spring.

**7.REMOVE CLUTCH PEDAL SPRING (for 1GR-FE, 1VD-FTV)****31301A**

a.

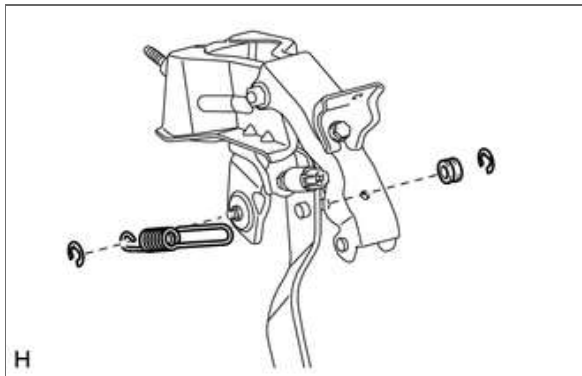

Remove the 2 E-rings and clutch pedal spring with spacer.


b. Remove the spacer from the clutch pedal spring.



#### 8.REMOVE CLUTCH PEDAL SUB-ASSEMBLY

31301

a.

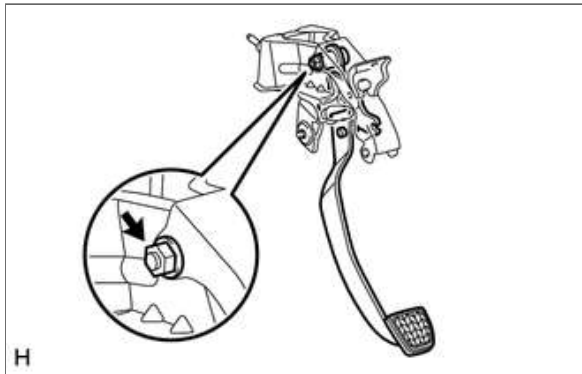

Remove the nut and bolt.

b. Remove the clutch pedal sub-assembly from the clutch pedal support sub-assembly.



#### 9.REMOVE CLUTCH PEDAL PAD


31321



#### 10.REMOVE CLUTCH PEDAL SHAFT COLLAR

31324A

a.

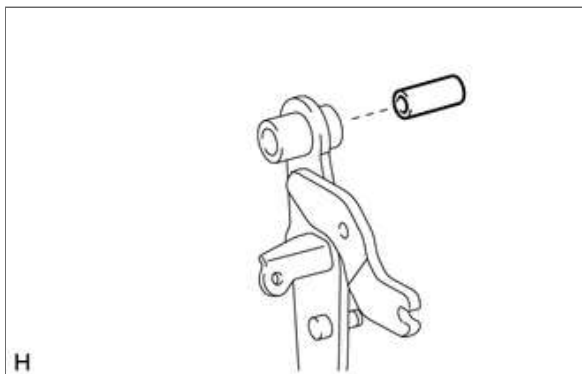


Remove the clutch pedal shaft collar from the clutch pedal sub-assembly.



#### 11.REMOVE CLUTCH PEDAL BUSH

31301C

a.

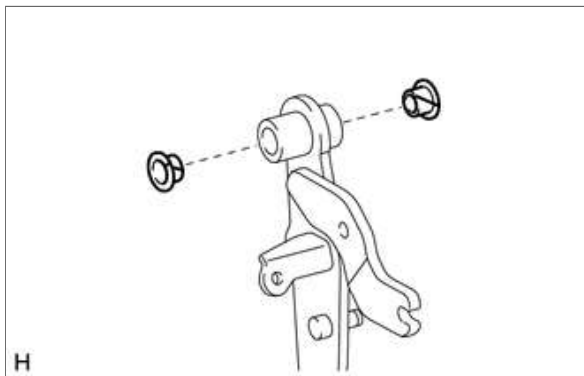


Remove the 2 clutch pedal bushes from the clutch pedal sub-assembly.



## 12.REMOVE NO. 1 CLUTCH PEDAL CUSHION

31301B

a.

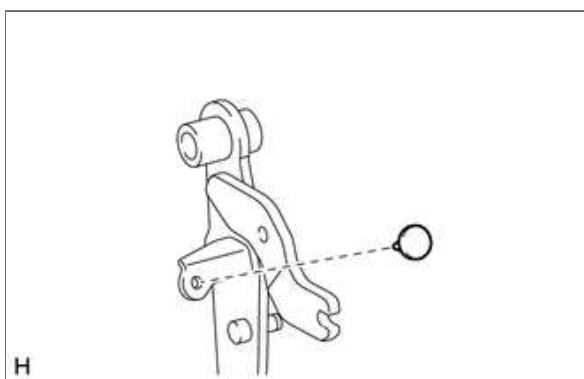


Remove the No. 1 clutch pedal cushion from the clutch pedal sub-assembly.



## 13.REMOVE CLUTCH PEDAL TURNOVER BUSH

31301P

a.

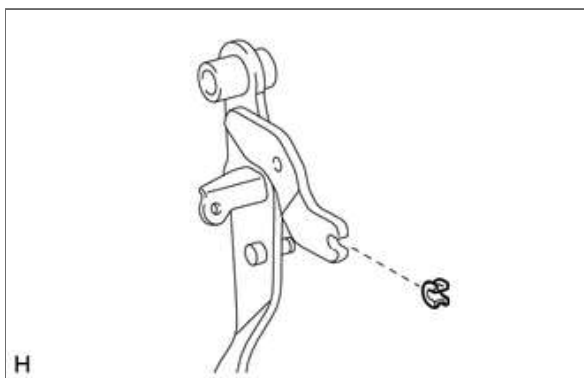


Remove the clutch pedal turnover bush from the clutch pedal sub-assembly.



## 14.REMOVE CLUTCH MASTER CYLINDER PUSH ROD CLEVIS BUSH

31453B

a.

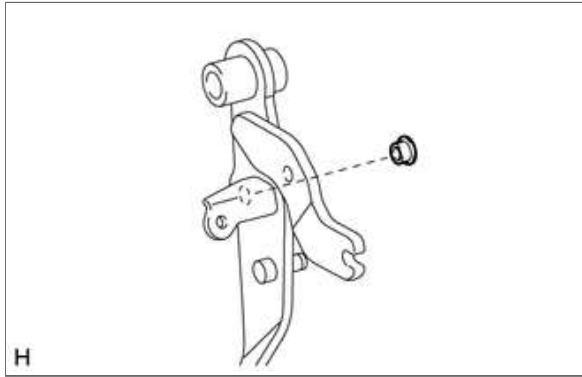


Remove the clutch master cylinder push rod clevis bush from the clutch pedal sub-assembly.



#### 15.REMOVE CLUTCH PEDAL SPRING HOLDER

31353

a.

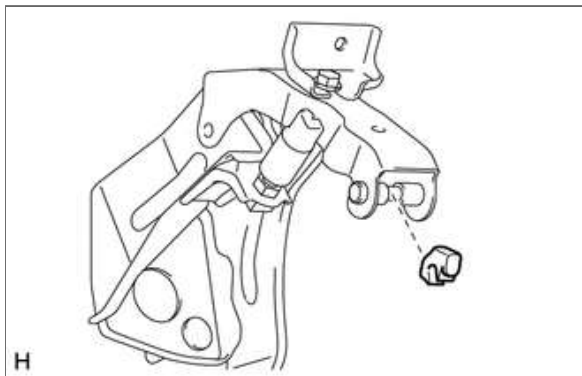


Remove the clutch pedal spring holder from the clutch pedal support sub-assembly.



#### 16.REMOVE CLUTCH SWITCH ASSEMBLY (for 1VD-FTV)

88280A

a.

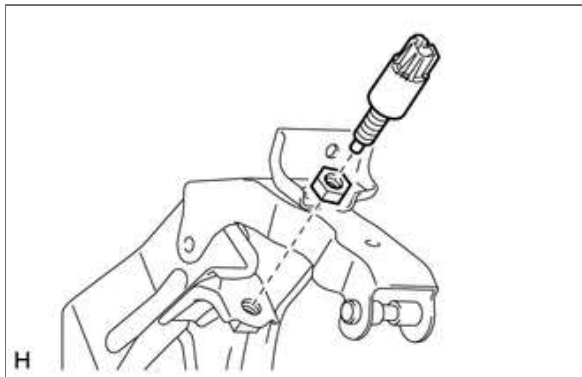

Loosen the lock nut and remove the clutch switch assembly.


b. Remove the lock nut from the clutch switch assembly.



#### 17.REMOVE CLUTCH PEDAL STOPPER BOLT (for 1GR-FE, 1HZ)

31301F

**a.**

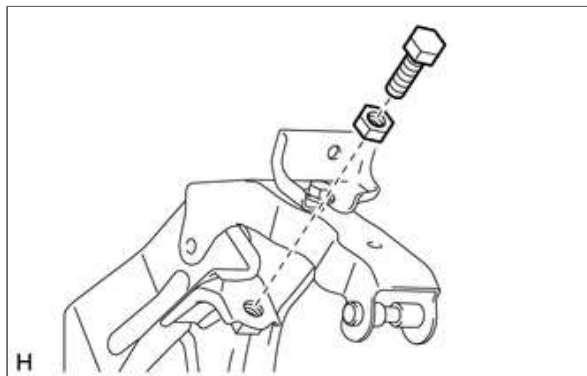

Loosen the lock nut and remove the clutch pedal stopper bolt.

**b.** Remove the lock nut from the clutch pedal stopper bolt.