


PROCEDURE

1.REMOVE TRANSMITTER BATTERY

a.

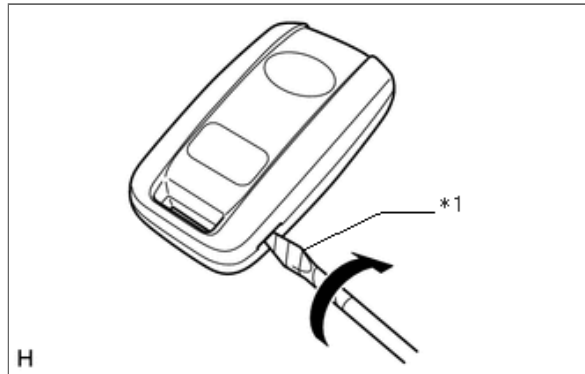


*1 Protective Tape

Using a screwdriver with its tip wrapped in protective tape, remove the transmitter housing cover as shown in the illustration.

HINT:

Tape the screwdriver tip before use.


b.

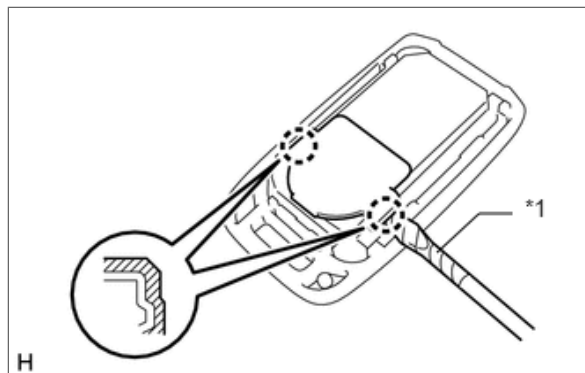

*1 Protective Tape

Using a screwdriver, detach the 2 claws and remove the battery cover.

c.

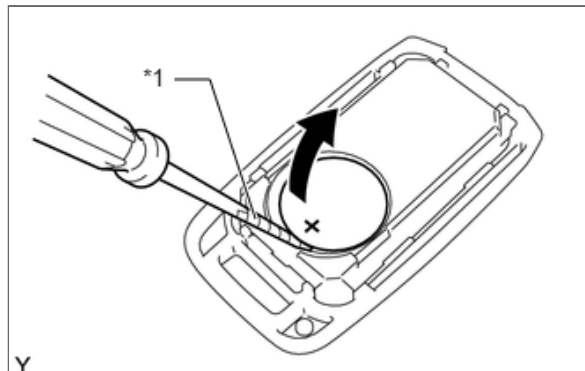

*1 Protective Tape


Using a screwdriver with its tip wrapped in protective tape, remove the transmitter battery.

NOTICE:

- Do not push the terminals with your finger.

- Do not forcibly pry up the transmitter battery. The terminals may be damaged.
- Do not touch the transmitter battery with wet hands. Water may cause rust.
- Do not touch or move any components inside the transmitter. It may interfere with proper operation.
- When replacing the transmitter battery, before starting work, remove static electricity that has built up in the body by touching, for example, the vehicle to prevent the electrical transmitter from being damaged.


2.INSTALL TRANSMITTER BATTERY

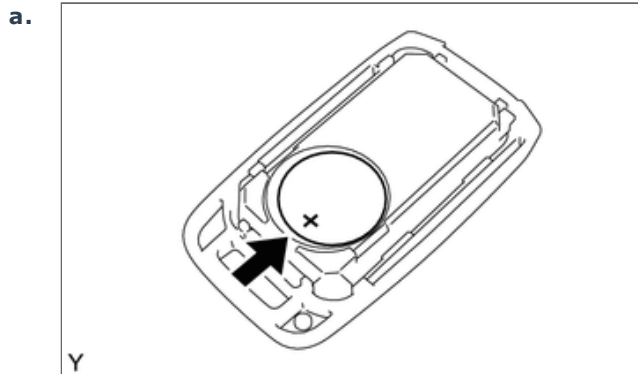


Install a new transmitter battery (lithium battery: CR2032) with the positive (+) side facing upward as shown in the illustration.

NOTICE:

- Do not bend the transmitter battery electrode during insertion.
- Keep the transmitter cover interior free of dust and oil.
- When replacing the transmitter battery, before starting work, remove static electricity that has built up in the body by touching, for example, the vehicle to prevent the electrical transmitter from being damaged.

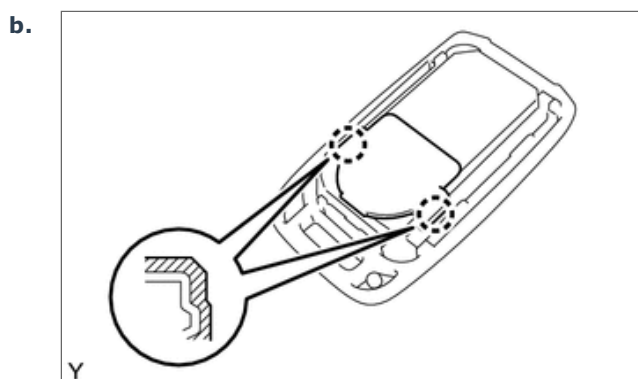

Attach the 2 claws to install the battery cover.

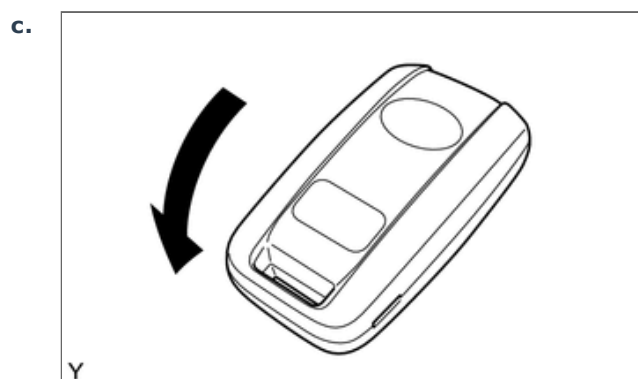

Install the transmitter housing cover as shown in the illustration.