


## ILLUSTRATION

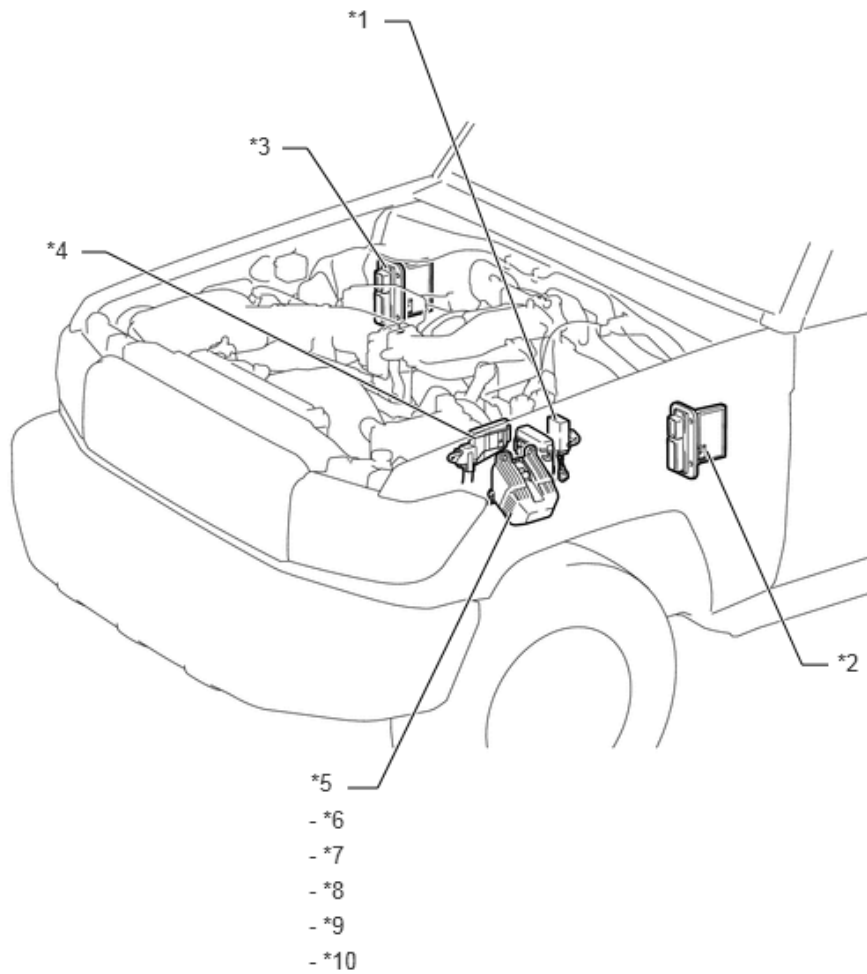


P


*1	FUEL PUMP RESISTOR	*2	ECM (for RHD)
*3	ECM (for LHD)	*4	FUSE BLOCK ASSEMBLY - EFI FUSE
*5	ENGINE ROOM RELAY BLOCK ASSEMBLY	*6	PUMP SELECT RELAY
*7	CIRCUIT OPENING RELAY	*8	FUEL PUMP RELAY
*9	SUB PUMP RELAY	*10	EFI MAIN RELAY

## ILLUSTRATION

\*A

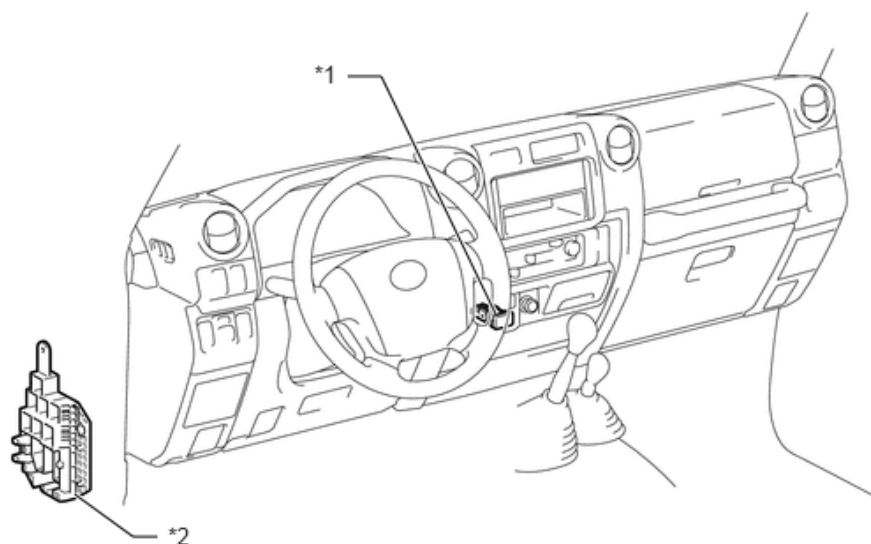

\*B

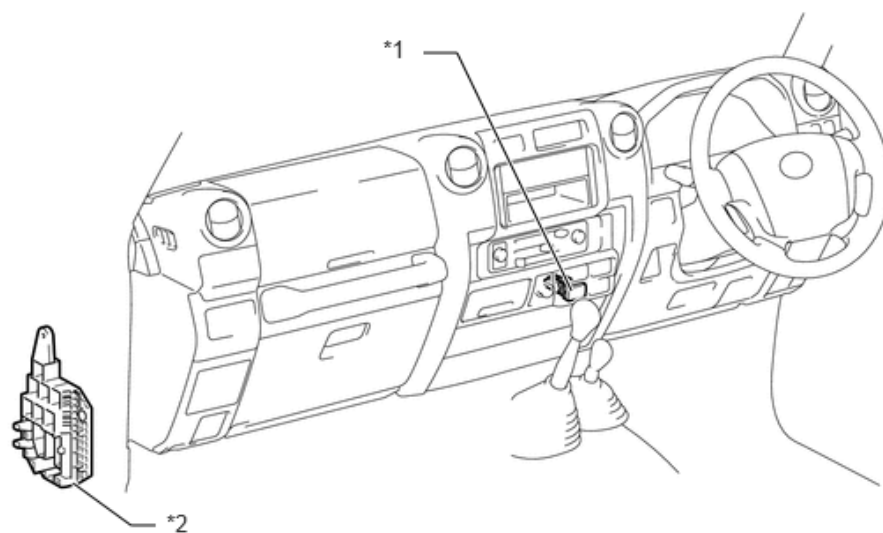


P

*A	for LHD	*B	for RHD
*1	FUEL TANK SELECT SWITCH (for Fuel Sub Tank)	*2	COWL SIDE RELAY BLOCK ASSEMBLY - IGN FUSE - INJ FUSE - ST FUSE

## ILLUSTRATION

\*A

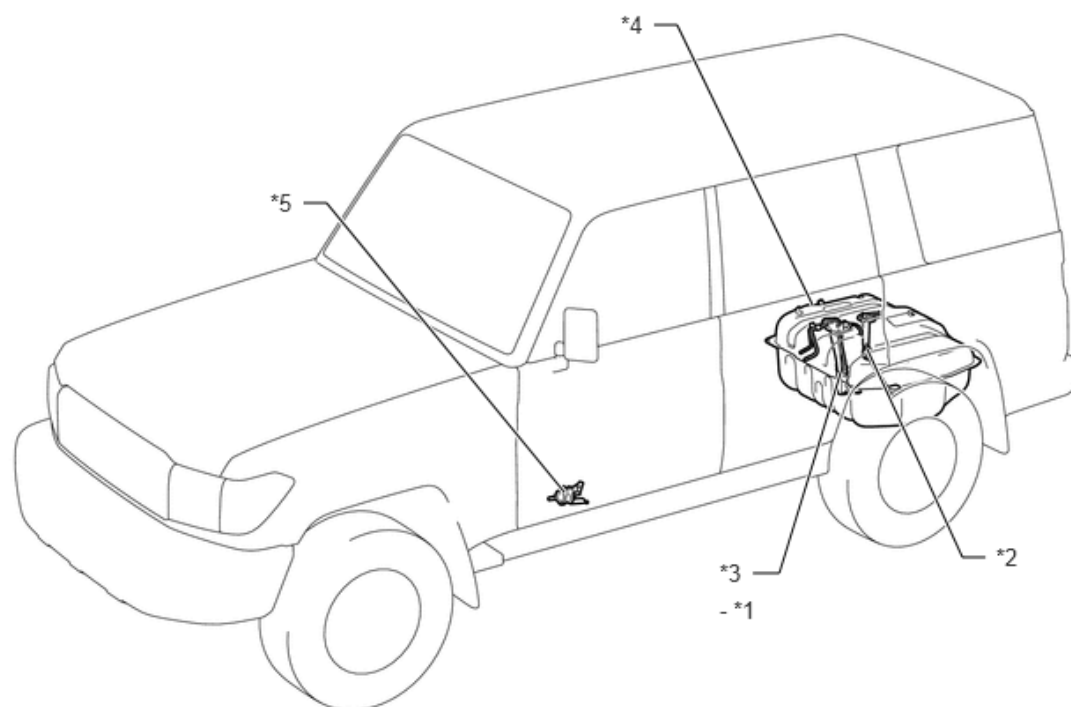


P

*A	for 130 L Tank	-	-
*1	FUEL PUMP	*2	FUEL SENDER GAUGE ASSEMBLY
*3	FUEL SUCTION TUBE SUB-ASSEMBLY	*4	FUEL TANK ASSEMBLY
*5	FUEL FILTER	-	-

## ILLUSTRATION

\*A

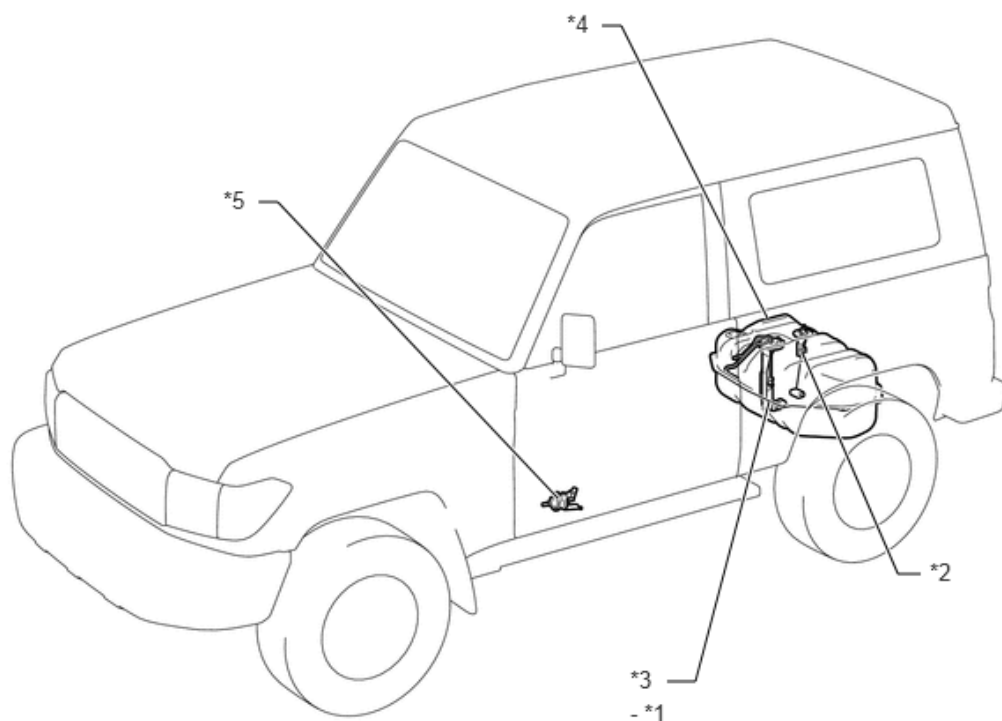


P

*A	for 90 L Tank Carried in Rear	-	-
*1	FUEL PUMP	*2	FUEL SENDER GAUGE ASSEMBLY
*3	FUEL SUCTION TUBE SUB-ASSEMBLY	*4	FUEL TANK ASSEMBLY
*5	FUEL FILTER	-	-

## ILLUSTRATION

\*A

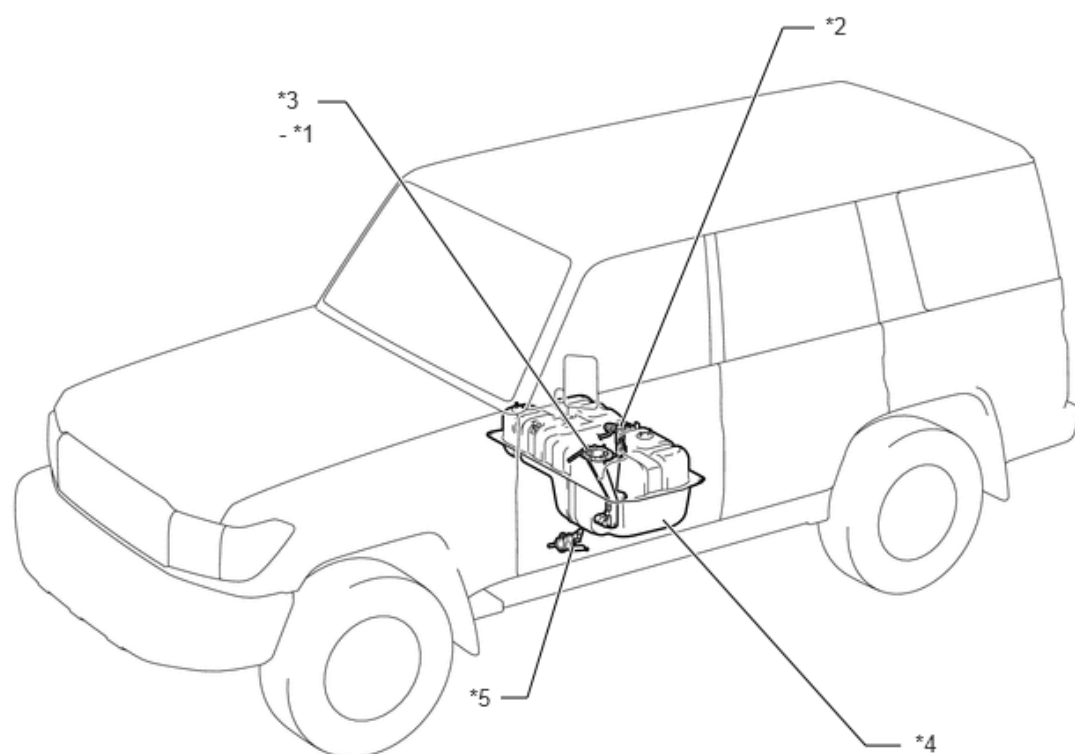


P

*A	for 90 L Tank Carried in Middle	-	-
*1	FUEL PUMP	*2	FUEL SENDER GAUGE ASSEMBLY
*3	FUEL SUCTION TUBE SUB-ASSEMBLY	*4	FUEL TANK ASSEMBLY
*5	FUEL FILTER	-	-

## ILLUSTRATION


\*A

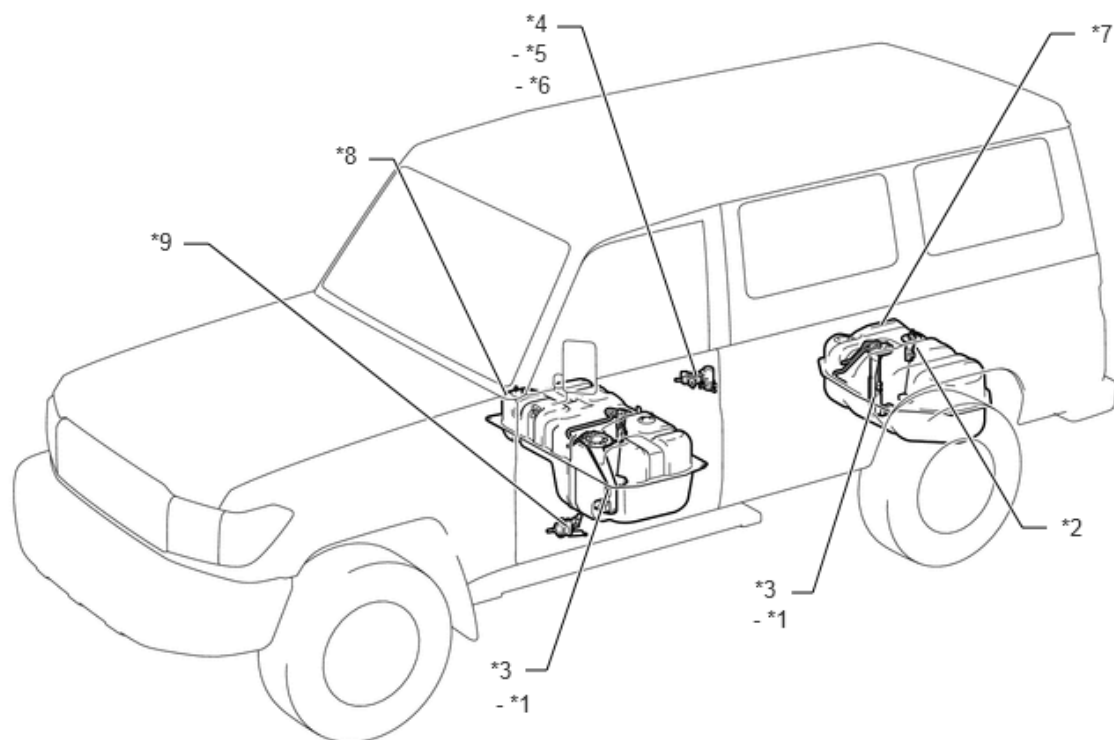

P

*A	for Double Tank Type	-	-
*1	FUEL PUMP	*2	FUEL SENDER GAUGE ASSEMBLY
*3	FUEL SUCTION TUBE SUB-ASSEMBLY	*4	FUEL TANK SOLENOID VALVE WITH BRACKET
*5	FUEL TANK SOLENOID RETURN VALVE ASSEMBLY	*6	FUEL TANK SOLENOID MAIN VALVE ASSEMBLY
*7	FUEL SUB TANK	*8	FUEL TANK ASSEMBLY
*9	FUEL FILTER	-	-

## ILLUSTRATION

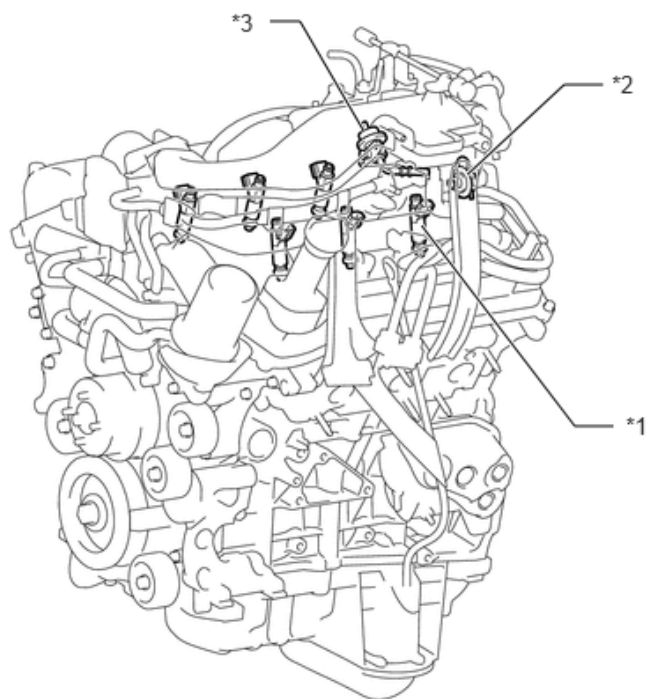

P

*1	FUEL INJECTOR ASSEMBLY	*2	FUEL PRESSURE PULSATION DAMPER ASSEMBLY
*3	FUEL PRESSURE REGULATOR ASSEMBLY	-	-