


PROCEDURE

1.INSPECT CHARCOAL CANISTER ASSEMBLY

77740

- a. Visually check the charcoal canister assembly for cracks or damage.
If cracks or damage are found, replace the charcoal canister assembly.

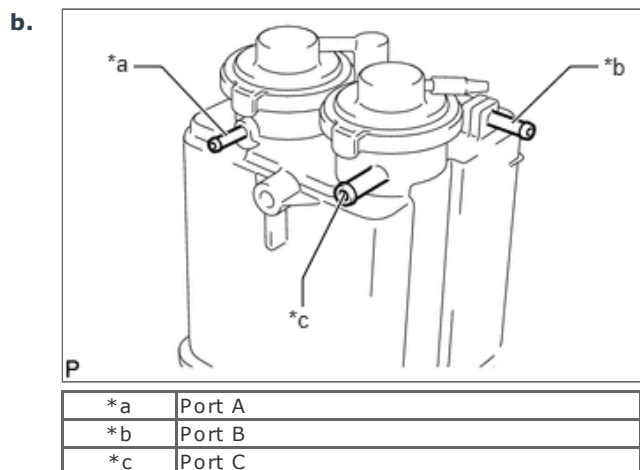

Using SST, inspect the charcoal canister assembly.

SST**09992-00242****OK:**

Condition	Specified Condition
Close ports B and C, and then apply vacuum to port A (1.96 kPa (15 mmHg, 0.579 in.Hg))	No leak
Close port C, and then blow air into port A (4.71 kPa (0.05 kgf/cm ² , 0.7 psi))	Air flows from port B
Blow air into port A (4.71 kPa (0.05 kgf/cm ² , 0.7 psi))	Air flows from both ports B and C
Close port C, and then apply vacuum to port A (1.96 kPa (15 mmHg, 0.579 in.Hg))	Air flows from port B

If the result is not as specified, replace the charcoal canister assembly.