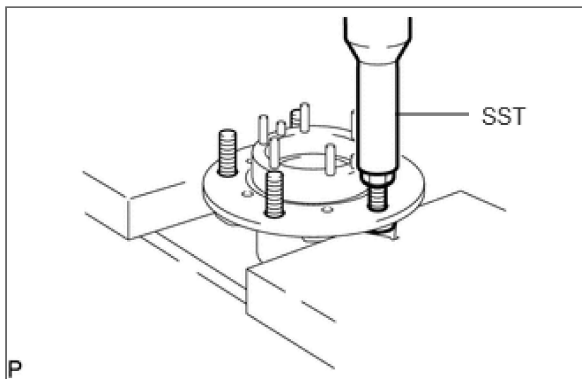


CAUTION / NOTICE / HINT


HINT:

- Use the same procedure for the RH and LH sides.
- The procedure listed below is for the LH side.

PROCEDURE

**1.REMOVE FRONT DISC****43512**[Click here](#)Drivetrain>AXLE AND DIFFERENTIAL>FRONT AXLE HUB>REMOVAL**2.REMOVE FRONT AXLE HUB BOLT LH****43502D****a.**

Using SST and a press, remove the front axle hub bolt LH.

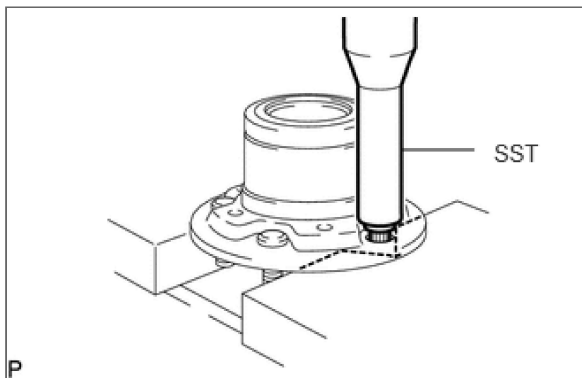SST**09950-70010 (09951-07150)****3.INSTALL FRONT AXLE HUB BOLT LH****43502D****a.**

Using SST and a press, install a new front axle hub bolt LH.

SST**09950-70010 (09951-07150)****4.INSTALL FRONT DISC****43512**[Click here](#)Drivetrain>AXLE AND DIFFERENTIAL>FRONT AXLE HUB>INSTALLATION

