

CAUTION / NOTICE / HINT**HINT:**

- Use the same procedure for RHD and LHD vehicles.
- The procedure listed below is for LHD vehicles.

PROCEDURE**1. PRECAUTION****CAUTION:**

Be sure to read precaution thoroughly before servicing.

Click here [Vehicle Interior>SUPPLEMENTAL RESTRAINT SYSTEMS>AIRBAG SYSTEM>PRECAUTION](#)


NOTICE:

After turning the ignition switch off, waiting time may be required before disconnecting the cable from the negative (-) battery terminal. Therefore, make sure to read the disconnecting the cable from the negative (-) battery terminal notices before proceeding with work.

Click here [General>INTRODUCTION>REPAIR INSTRUCTION>PRECAUTION](#)

2.DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**CAUTION:**

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

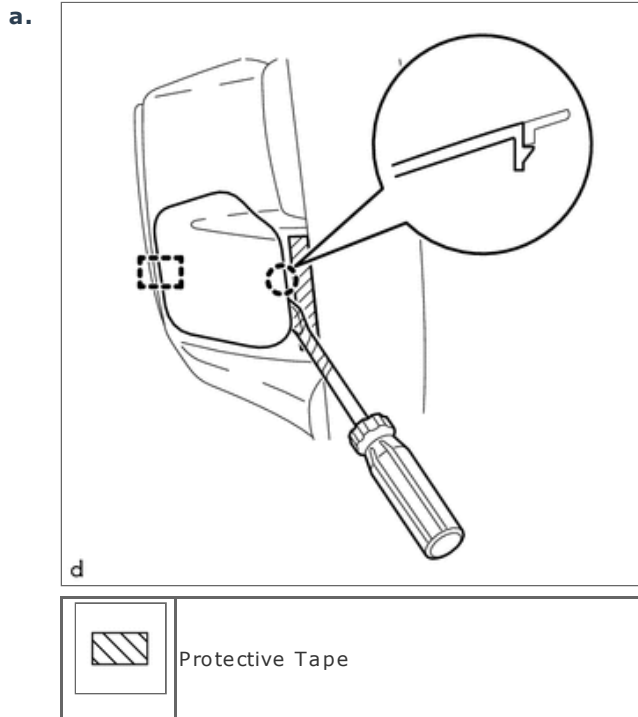3.REMOVE LOWER NO. 3 STEERING WHEEL COVER**45187**

Apply protective tape as shown in the illustration.


- b. Using a screwdriver, detach the claw and guide to remove the lower No. 3 steering wheel cover.

HINT:

Tape the screwdriver tip before use.

4.REMOVE LOWER NO. 2 STEERING WHEEL COVER

45186

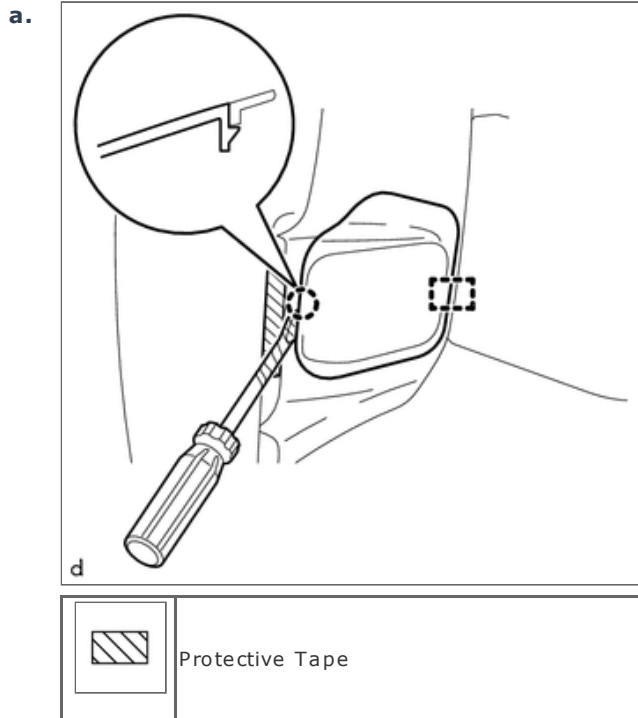

Apply protective tape as shown in the illustration.

- b. Using a screwdriver, detach the claw and guide to remove the lower No. 2 steering wheel cover.

HINT:

Tape the screwdriver tip before use.

5.REMOVE STEERING PAD

45130

CAUTION:


When storing the steering pad, keep the airbag deployment side facing upward.

- a. Check that the ignition switch is off.
- b. Check that the cable is disconnected from the negative (-) battery terminal.

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


c.

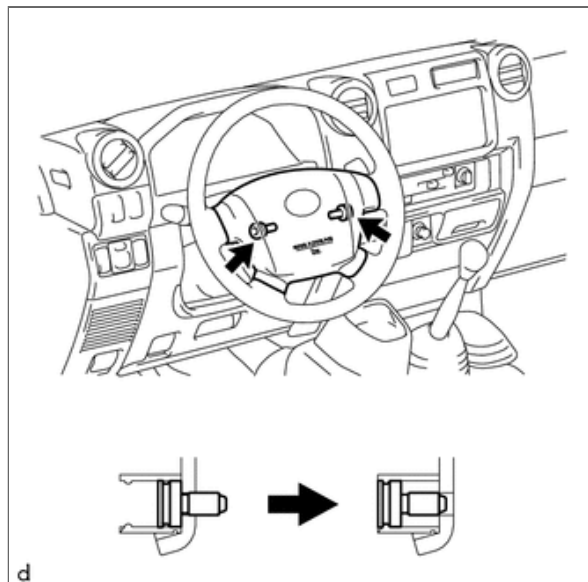

Using a T30 "TORX" socket wrench, loosen the 2 "TORX" screws until the groove along the screw circumference catches on the screw case.

d.

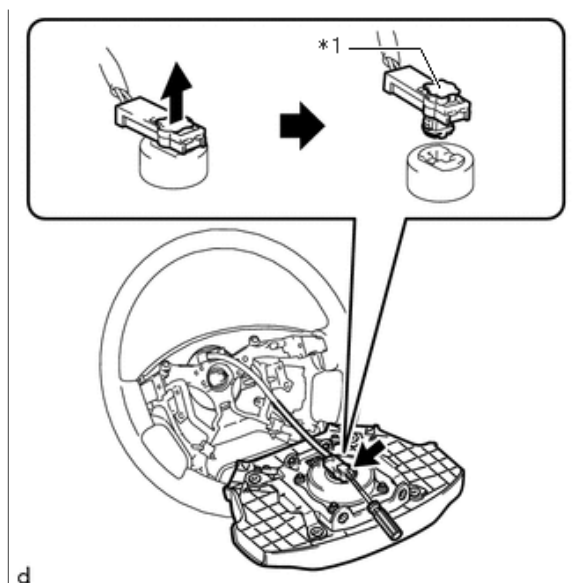

*1	Connector Lock
	Protective Tape

Tilt the steering pad toward the seat and support it with one hand.

e. Disconnect the horn connector.

f. Using a screwdriver, release the connector lock and disconnect the airbag connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

HINT:

Tape the screwdriver tip before use.