



PROCEDURE

1.DRAIN WINCH FLUID

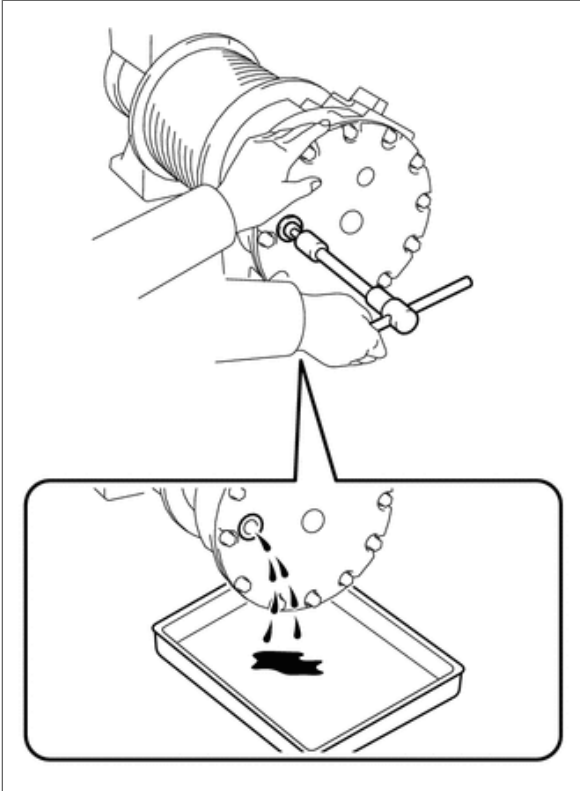

- a. Using a 6 mm hexagon socket wrench, remove the drain plug.
- b. Drain the winch fluid.

2.ADD WINCH FLUID

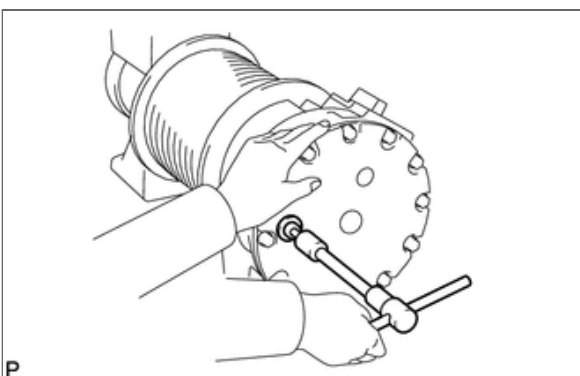

- a. Fill the winch with ATF D-II or equivalent.

Fluid type:
ATF D-II or equivalent

Capacity:
0.9 to 1.0 liters (1.0 to 1.1 US qts, 0.8 to 0.9 Imp. qts)

NOTICE:
Do not overfill the winch.

- b.** Using a 6 mm hexagon socket wrench, Install the drain plug.

Torque:

17 N*m (175 kgf*cm, 13 ft.*lbf)