

## AXLE AND DIFFERENTIAL REAR AXLE HUB REMOVAL

## CAUTION / NOTICE / HINT

## HINT:

- Use the same procedure for the RH and LH sides.
- The procedure listed below is for the LH side.

## PROCEDURE

## 1.REMOVE REAR AXLE SHAFT LH

42312

Click here [Drivetrain>AXLE AND DIFFERENTIAL>REAR AXLE SHAFT>REMOVAL](#)

## 2.REMOVE REAR AXLE SHAFT OIL SEAL LH


42312C

Click here [Drivetrain>AXLE AND DIFFERENTIAL>REAR AXLE SHAFT>REMOVAL](#)

## 3.REMOVE REAR WHEEL

Click here [Suspension>TIRE / WHEEL>TIRE AND WHEEL>REMOVAL](#)

## 4.REMOVE REAR SPEED SENSOR LH (w/ ABS)

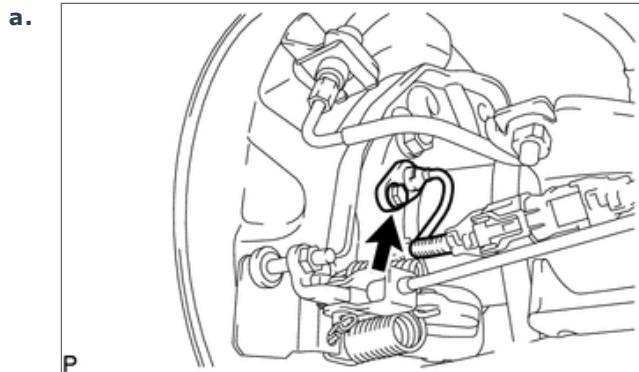


Remove the bolt and disconnect the rear speed sensor LH.

## NOTICE:

- Be careful not to damage the speed sensor.
- Prevent foreign matter from adhering to the speed sensor.

## 5.REMOVE REAR DISC BRAKE CYLINDER ASSEMBLY LH (for Disc Type)

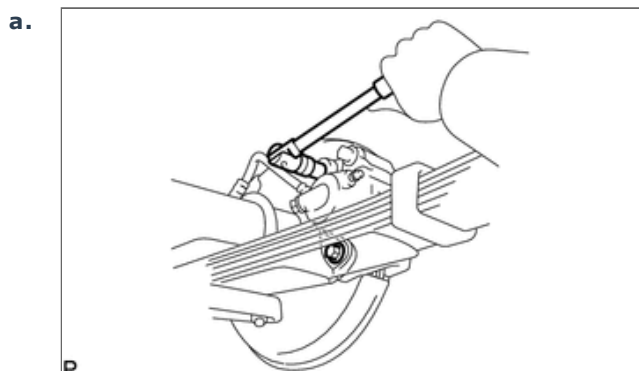

Remove the 2 bolts and rear disc brake cylinder assembly.

#### 6.REMOVE REAR DISC (for Disc Type)

42431

Click here[Brake>BRAKE \(REAR\)>REAR BRAKE\(for Rear Disc Brake\)>REMOVAL](#)

#### 7.REMOVE REAR BRAKE DRUM SUB-ASSEMBLY (for Drum Type)

42403

Click here[Brake>BRAKE \(REAR\)>REAR BRAKE\(for Rear Drum Brake\)>REMOVAL](#)

#### 8.REMOVE REAR AXLE HUB BOLT LH


42312E

Click here[Drivetrain>AXLE AND DIFFERENTIAL>REAR AXLE HUB BOLT>REPLACEMENT](#)

#### 9.REMOVE REAR AXLE BEARING LOCK NUT


42427

a.

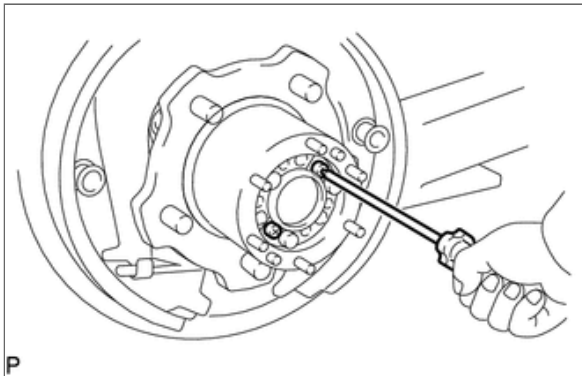

Remove the 2 lock nut set screws.

b.

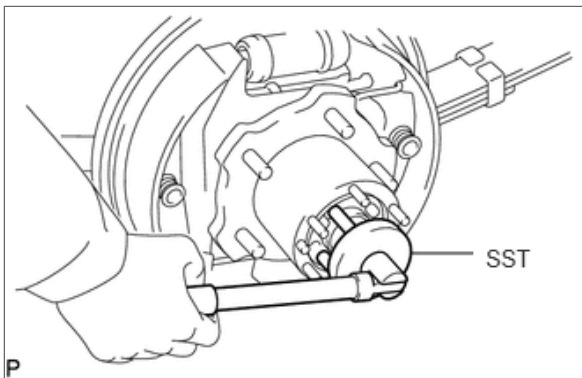


Using SST, remove the rear axle bearing lock nut.

**SST**

**09509-25011**

#### 10.REMOVE REAR AXLE SHAFT OUTER BEARING LH

42312F

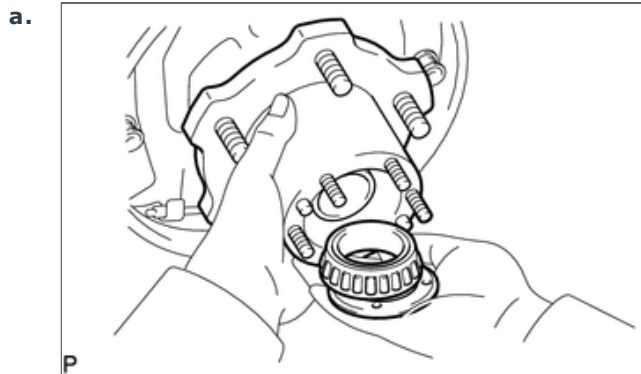

Remove the rear axle lock nut plate LH and rear axle shaft outer bearing LH.


## 11.REMOVE REAR AXLE HUB AND INNER BEARING ASSEMBLY LH

42440

- a. Remove the rear axle hub and rear axle shaft inner bearing LH.

## 12.REMOVE REAR AXLE HUB OIL SEAL LH

42402E

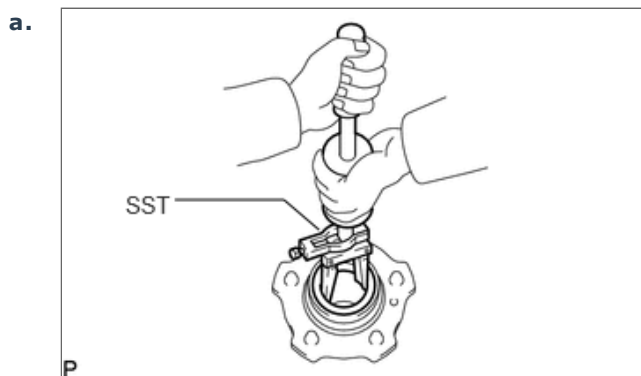

Using SST, remove the rear axle hub oil seal LH from the rear axle hub.


**SST**  
**09308-00010**

## 13.REMOVE REAR AXLE SHAFT INNER BEARING LH

42312G

- a. Remove the rear axle shaft inner bearing LH from the rear axle hub.

## 14.REMOVE BEARING OUTER RACE

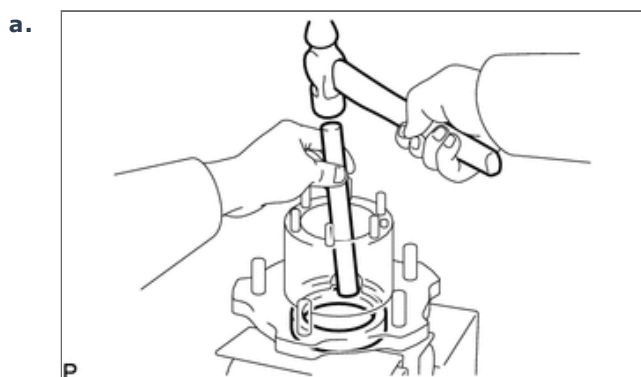

Using a brass bar and hammer, remove the 2 bearing outer races from the rear axle hub.

## 15.REMOVE REAR BRAKE SHOE (for Drum Type)

Click here [Brake>BRAKE \(REAR\)>REAR BRAKE\(for Rear Drum Brake\)>DISASSEMBLY](#)

## 16.REMOVE REAR AXLE SHAFT OIL SEAL (for Drum Type)

42311A

- a. Remove the rear axle shaft oil seal with the 4 bolts and 4 nuts.