


CAUTION / NOTICE / HINT**HINT:**


- Use the same procedure for RHD and LHD vehicles.
- The procedure listed below is for LHD vehicles.

PROCEDURE**1.PLACE FRONT WHEELS FACING STRAIGHT AHEAD****2.REMOVE STEERING WHEEL ASSEMBLY****45100**[Click here](#)Steering>STEERING COLUMN>STEERING WHEEL>REMOVAL**3.REMOVE LOWER STEERING COLUMN COVER****45287**

- a. Operate the steering tilt lever to lower and extend the steering column assembly.

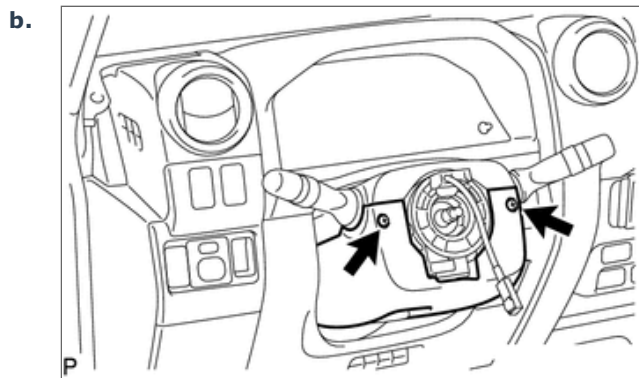


Remove the 2 screws.

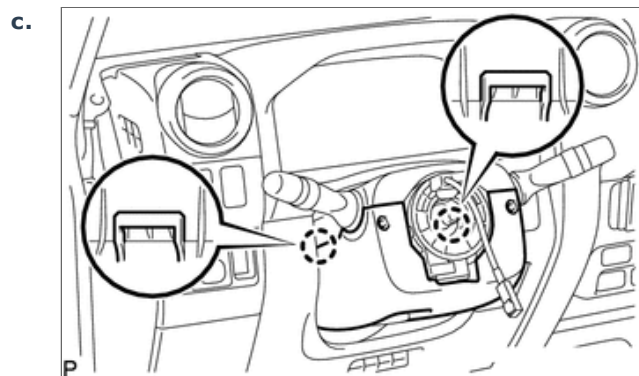

Detach the 2 claws to remove the lower steering column cover.

4.REMOVE UPPER STEERING COLUMN COVER**45286B**

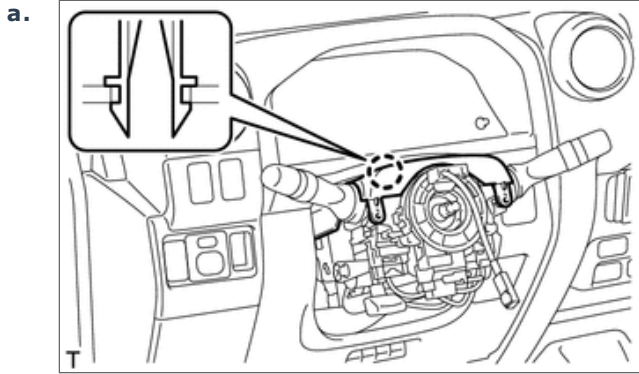


Detach the claw to remove the upper steering column cover.

5.REMOVE COMBINATION SWITCH ASSEMBLY WITH SPIRAL CABLE SUB-ASSEMBLY

84306

a. Disconnect the connectors.

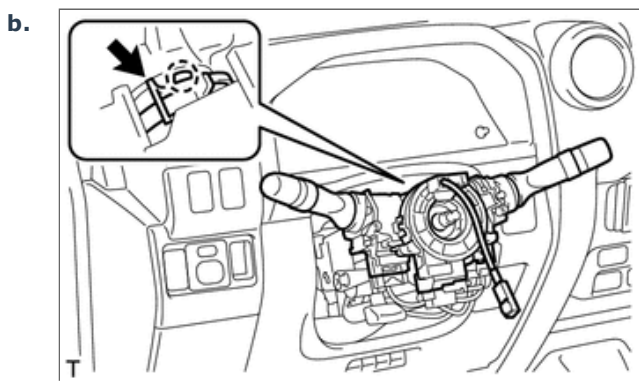

Use pliers to hold the clamp and raise the claw with a screwdriver. Remove the combination switch assembly with spiral cable sub-assembly from the steering column assembly.


6.REMOVE LOWER INSTRUMENT PANEL FINISH PANEL ASSEMBLY

55480D

Vehicle Interior>INTERIOR PANELS / TRIM>INSTRUMENT PANEL SAFETY PAD>REMOVAL

7.REMOVE NO. 2 HEATER TO REGISTER DUCT


55844

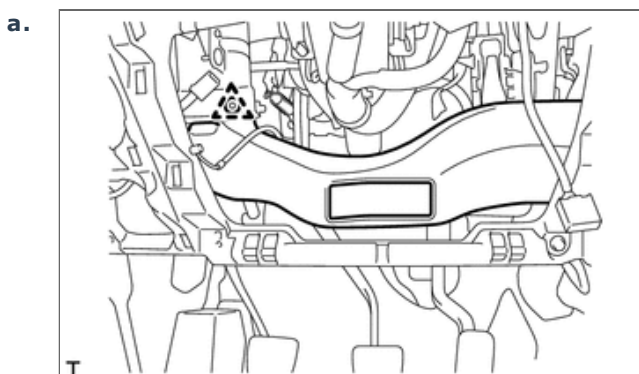

Remove the clip and No. 2 heater to register duct.

8.REMOVE STEERING COLUMN ASSEMBLY

a.

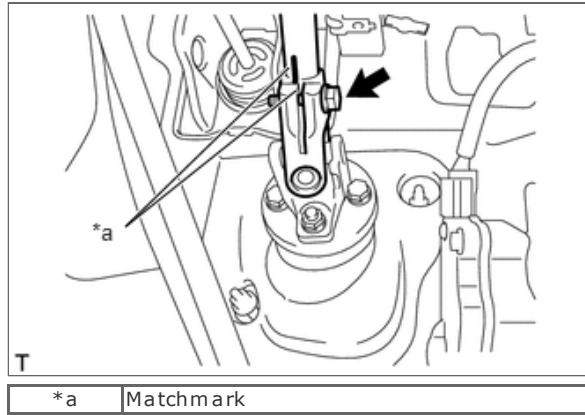


Put matchmarks on the steering intermediate shaft assembly and steering column assembly.

b. Remove the bolt.

c. Detach the wire harness 2 clamps from the steering column assembly.

d.

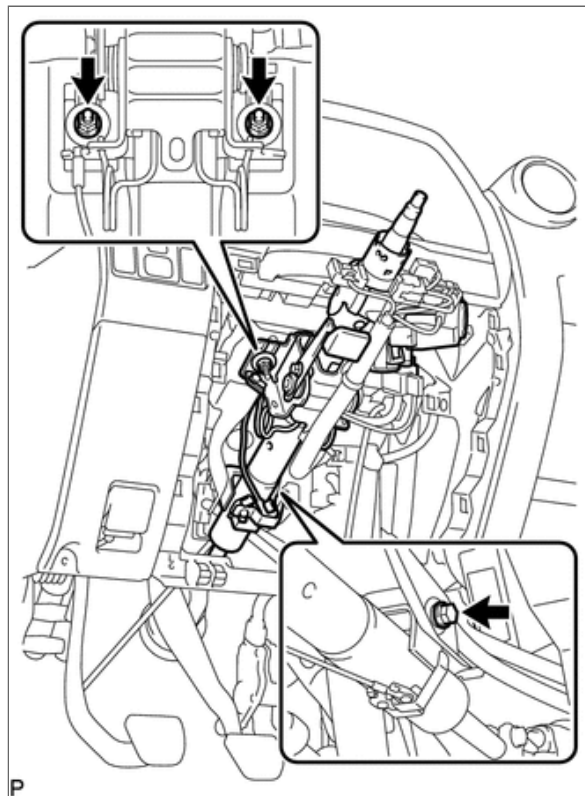

Remove the 2 nuts, bolt and steering column assembly.