



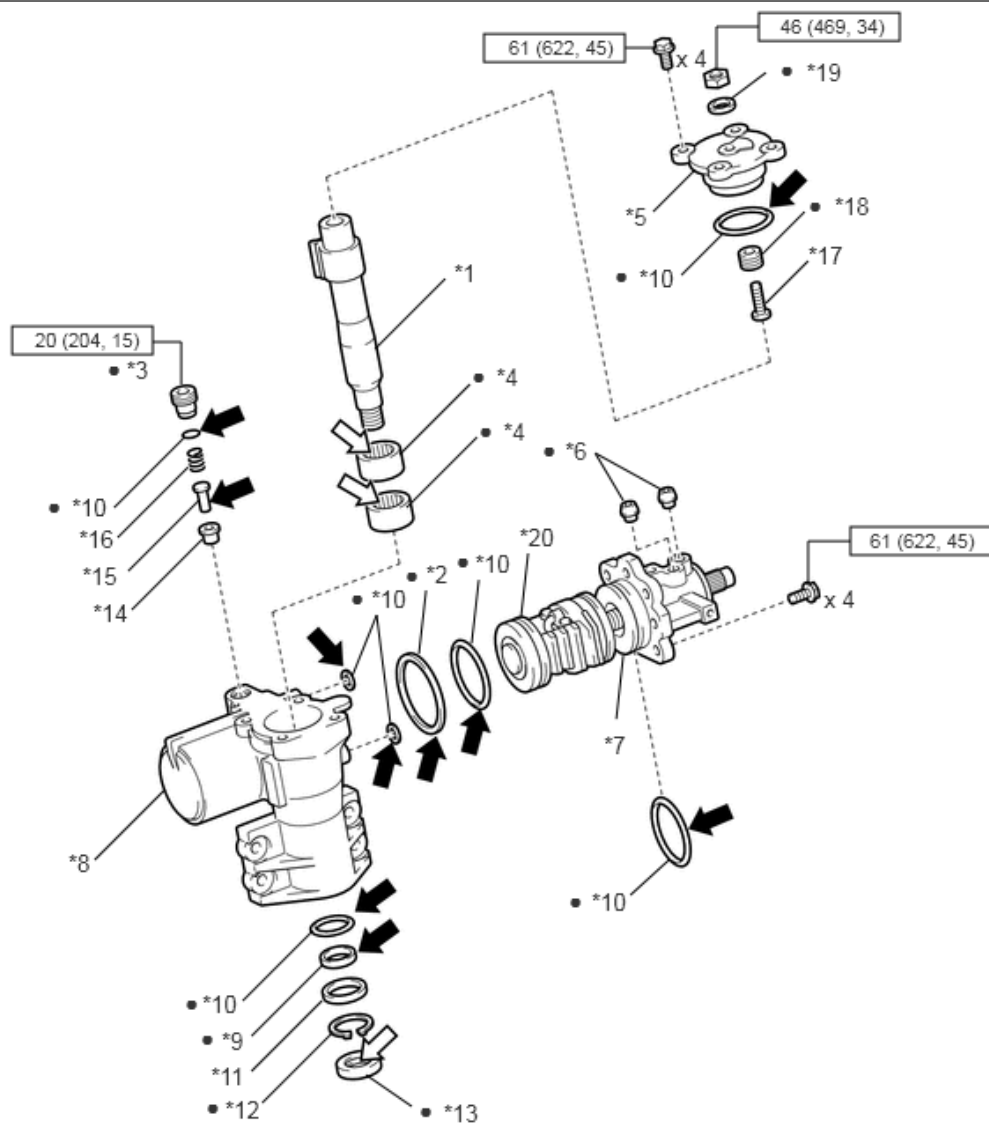
ILLUSTRATION

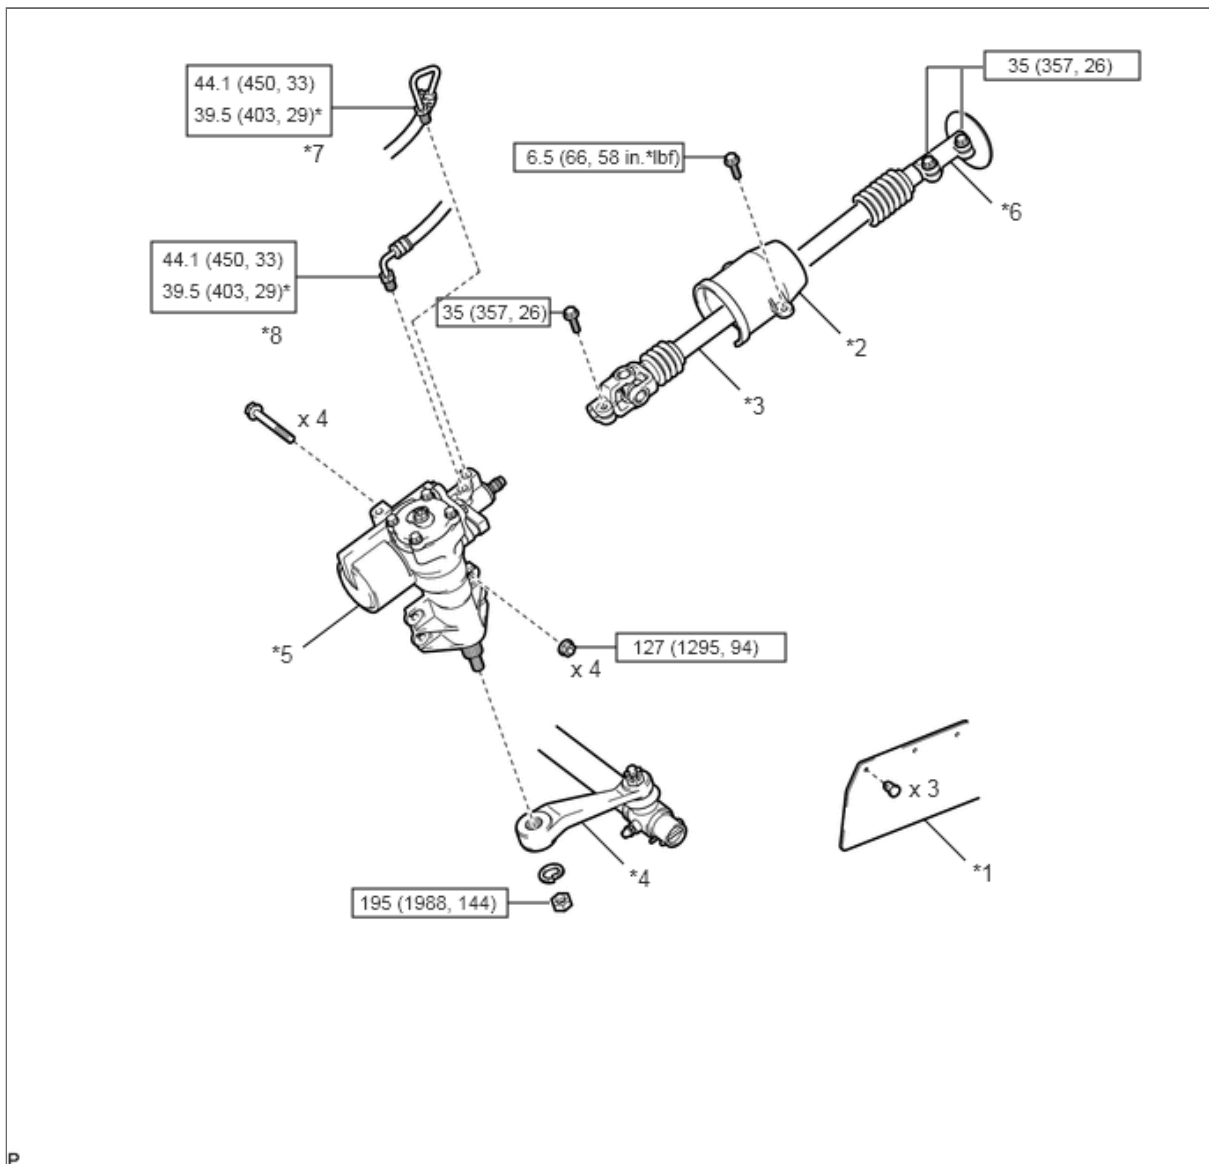

P

*1	FRONT FENDER APRON SEAL LH	*2	INTERMEDIATE LINK JOINT PROTECTOR
*3	NO. 2 STEERING INTERMEDIATE SHAFT SUB-ASSEMBLY	*4	PITMAN ARM
*5	POWER STEERING GEAR ASSEMBLY	*6	STEERING SLIDING YOKE
*7	STEERING GEAR OUTLET RETURN TUBE	*8	PRESSURE FEED TUBE ASSEMBLY
	N*m (kgf*cm, ft.*lbf): Specified torque	*	For use with union nut wrench

ILLUSTRATION



P

*1	CROSS SHAFT	*2	POWER PISTON NUT RING ("Teflon"Ring)
*3	POWER PISTON PLUNGER GUIDE NUT	*4	POWER STEERING GEAR HOUSING NEEDLE ROLLER BEARING
*5	SIDE COVER SUB-ASSEMBLY	*6	VALVE BODY HOUSING UNION SEAT
*7	VALVE ASSEMBLY (WITH BALL NUT)	*8	POWER STEERING GEAR HOUSING SUB-ASSEMBLY
*9	POWER STEERING GEAR HOUSING RING ("Teflon"Ring)	*10	O-RING
*11	POWER STEERING GEAR HOUSING RING	*12	POWER STEERING GEAR HOUSING HOLE SNAP RING
*13	POWER STEERING HOUSING OIL SEAL	*14	POWER PISTON PLUNGER GUIDE
*15	POWER PISTON PLUNGER	*16	POWER PISTON PLUNGER COMPRESSION SPRING
*17	SECTOR ADJUSTING SCREW	*18	LOCK NUT
*19	CROSS SHAFT ADJUSTING SCREW SEAL WASHER	*20	POWER PISTON NUT
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
	Power Steering Fluid		MP Grease