



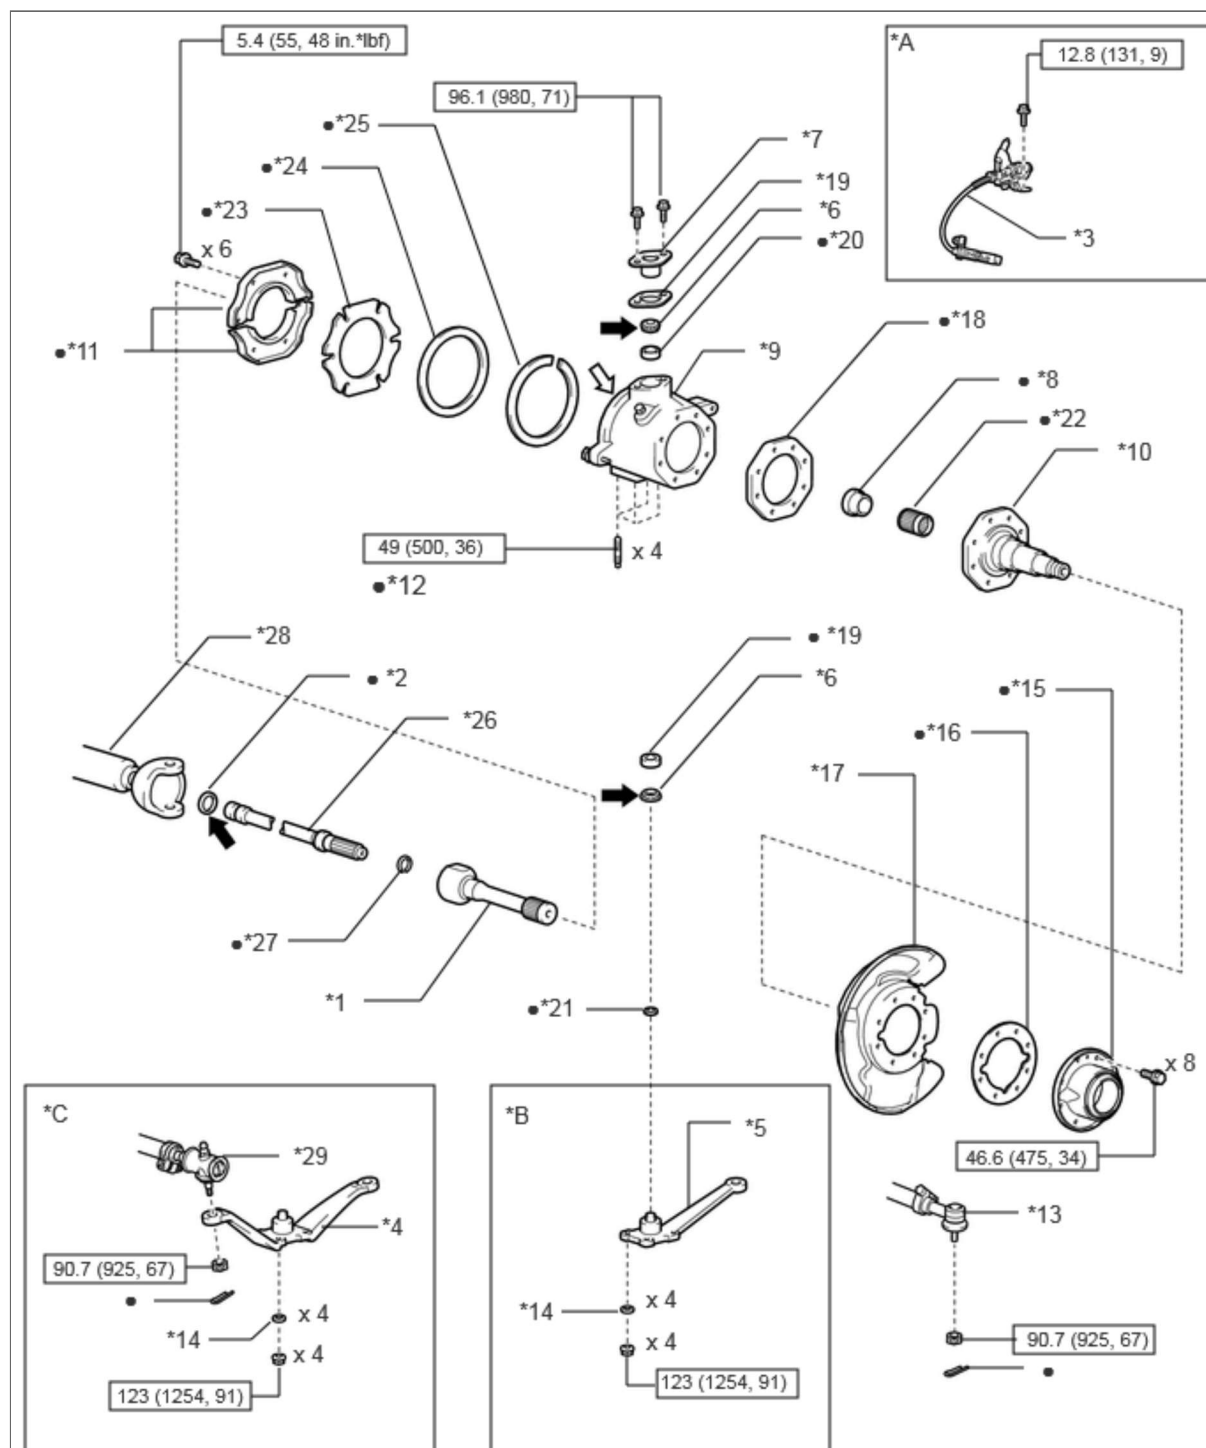

## ILLUSTRATION



P

*A	w/ ABS	*B	for LHD
*C	for RHD	-	-
*1	FRONT AXLE OUTER SHAFT SUB-ASSEMBLY	*2	FRONT DRIVE SHAFT TYPE T OIL SEAL
*3		*4	NO. 1 STEERING KNUCKLE ARM
*5	NO. 2 STEERING KNUCKLE ARM	*6	STEERING KNUCKLE ARM BEARING
*7	STEERING KNUCKLE BEARING CAP	*8	STEERING KNUCKLE BUSHING
*9	STEERING KNUCKLE LH	*10	STEERING KNUCKLE OIL SEAL COVER
*11	STEERING KNUCKLE SPINDLE SUB-ASSEMBLY	*12	STEERING SET STUD BOLT
*13	TIE ROD END SUB-ASSEMBLY LH	*14	CONE WASHER
*15	FRONT AXLE HUB DUST SEAL	*16	KNUCKLE SPINDLE OIL RETAINER GASKET

*17	FRONT DISC BRAKE DUST COVER	*18	KNUCKLE SPINDLE GASKET
*19	NO. 1 STEERING KNUCKLE ADJUST SHIM	*20	BEARING OUTER RACES
*21	STEERING KNUCKLE KING PIN DUST OR RING SEAL	*22	NEEDLE ROLLER BEARING
*23	STEERING KNUCKLE OUTER OIL SEAL	*24	STEERING KNUCKLE INNER OIL SEAL
*25	STEERING KNUCKLE OIL SEAL INNER RING	*26	FRONT AXLE INNER SHAFT LH
*27	SNAP RING	*28	FRONT AXLE HOUSING ASSEMBLY
*29	STEERING RELAY ROD	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
	MP grease		Molybdenum Disulfide Lithium Base Grease, NLGI No. 2