




ILLUSTRATION

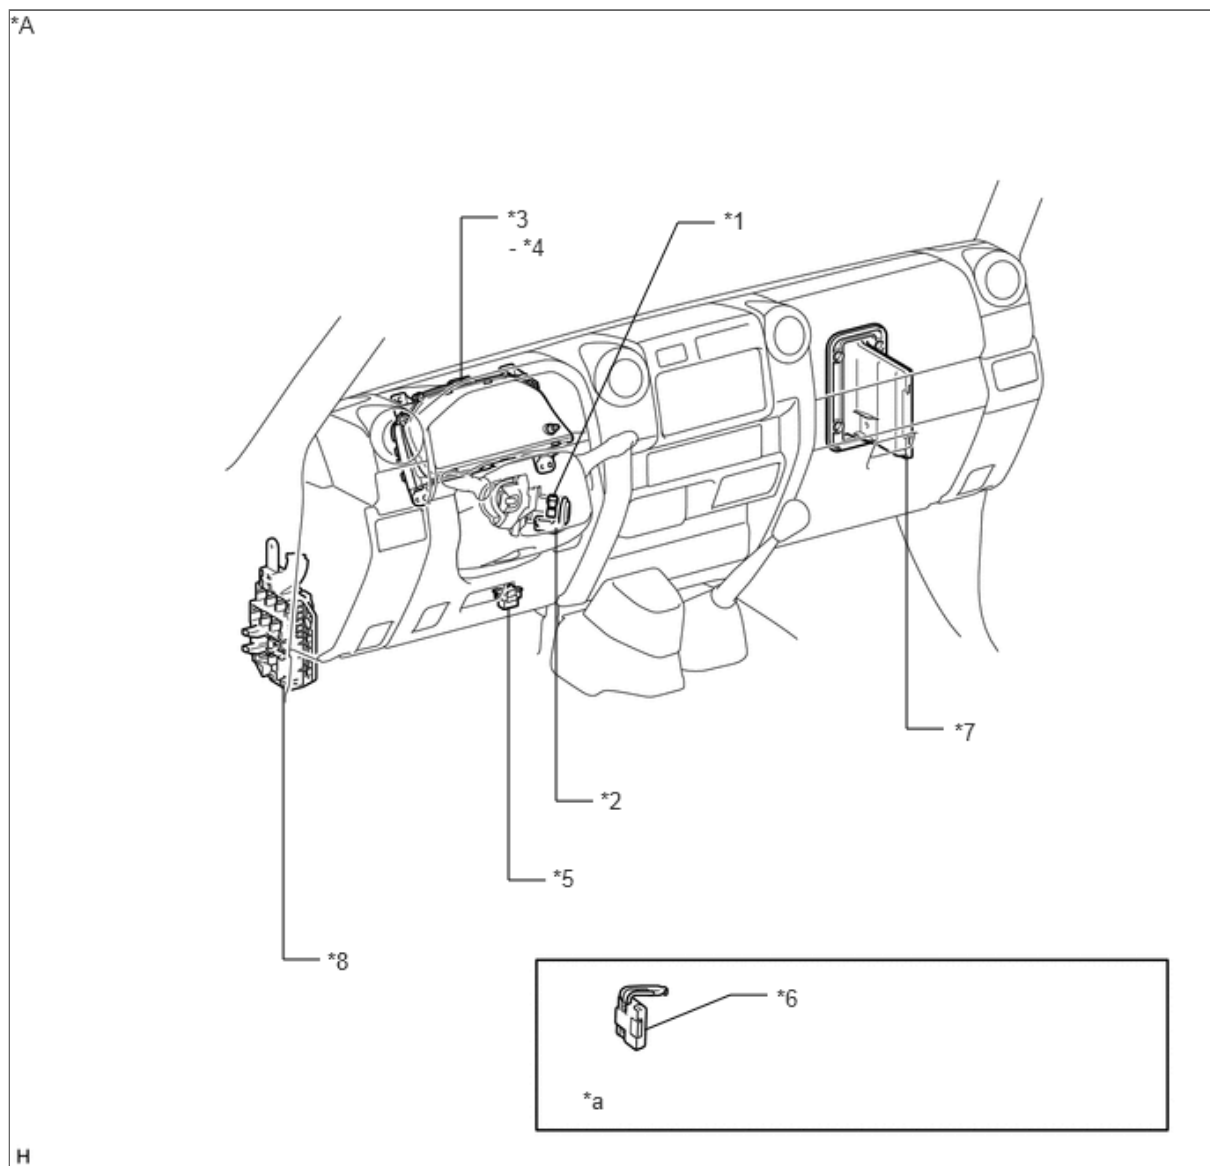

*A	for LHD	-	-
*1	UNLOCK WARNING SWITCH ASSEMBLY	*2	TRANSPONDER KEY AMPLIFIER
*3	COMBINATION METER ASSEMBLY	*4	SECURITY INDICATOR LIGHT
*5	DLC3	*6	TRANSPONDER KEY ECU ASSEMBLY
*7	ECM	*8	COWL SIDE RELAY BLOCK ASSEMBLY - ECU-B FUSE - ECU IG FUSE
*a	Refer to Service Bulletin for the installation position of the part.	-	-

ILLUSTRATION

*A

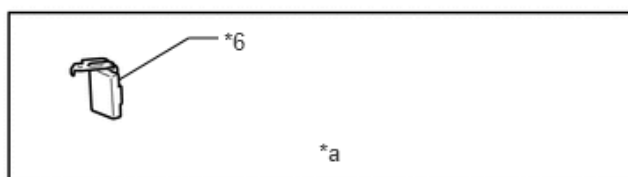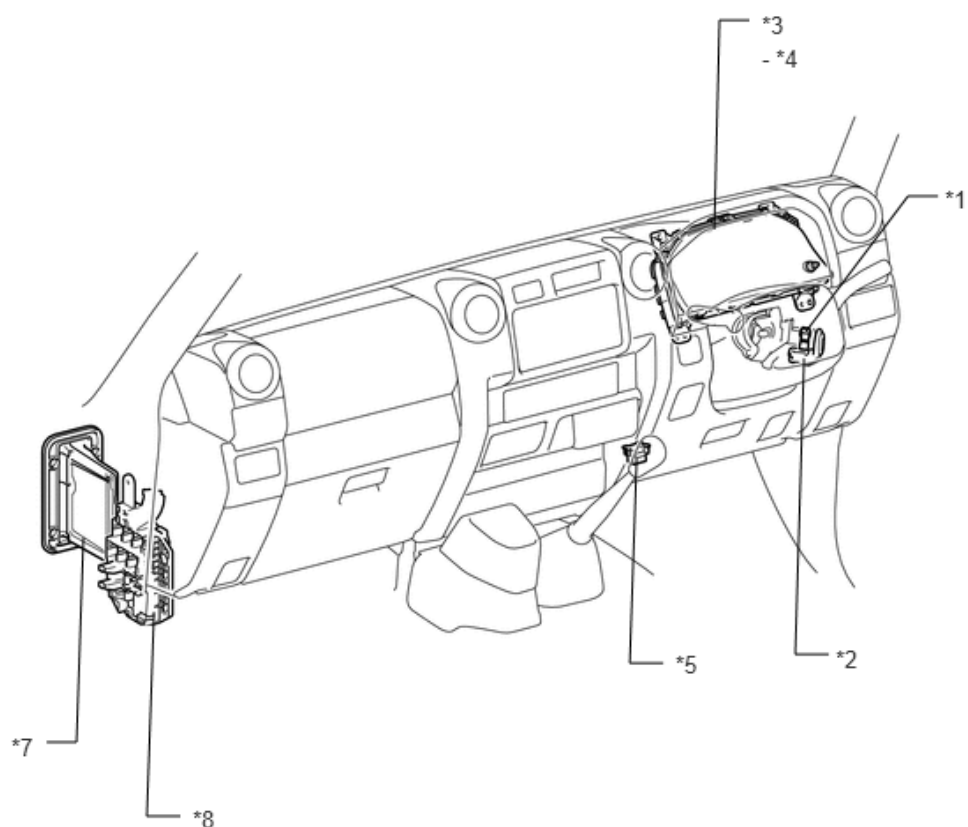

H

*A	for RHD	-	-
*1	UNLOCK WARNING SWITCH ASSEMBLY	*2	TRANSPONDER KEY AMPLIFIER
*3	COMBINATION METER ASSEMBLY	*4	SECURITY INDICATOR LIGHT
*5	DLC3	*6	TRANSPONDER KEY ECU ASSEMBLY
*7	ECM	*8	COWL SIDE RELAY BLOCK ASSEMBLY - ECU-B FUSE - ECU IG FUSE
*a	Refer to Service Bulletin for the installation position of the part.	-	-