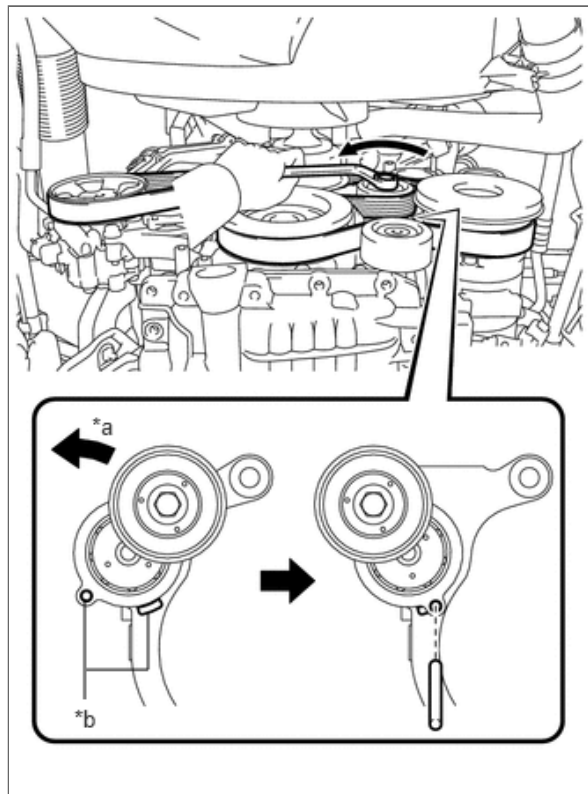


PROCEDURE**1.REMOVE FAN AND GENERATOR V BELT****16361A****a.**

*a	Turn
*b	Hole

While turning the V-ribbed belt tensioner assembly counterclockwise, align the service hole for the V-ribbed belt tensioner assembly and the belt tensioner fixing position, and then insert a bar with a diameter of 6.0 mm (0.236 in.) into the service hole to fix the V-ribbed belt tensioner assembly in place.

b. Remove the fan and generator V belt.