

1GR-FE COOLING THERMOSTAT REMOVAL

PROCEDURE

1.REMOVE NO. 2 ENGINE UNDER COVER

51442

Click here[Engine / Hybrid System>1GR-FE COOLING>RADIATOR>REMOVAL](#)

2.DRAIN ENGINE COOLANT

Click here[Engine / Hybrid System>1GR-FE COOLING>COOLANT>REPLACEMENT](#)

3.REMOVE NO. 2 RADIATOR HOSE

16572D

Click here[Engine / Hybrid System>1GR-FE COOLING>RADIATOR>REMOVAL](#)


4.REMOVE WATER INLET WITH THERMOSTAT

16031

HINT:

If the thermostat is not installed, cooling efficiency decreases. Even if the engine tends to overheat, do not remove the thermostat.

a.

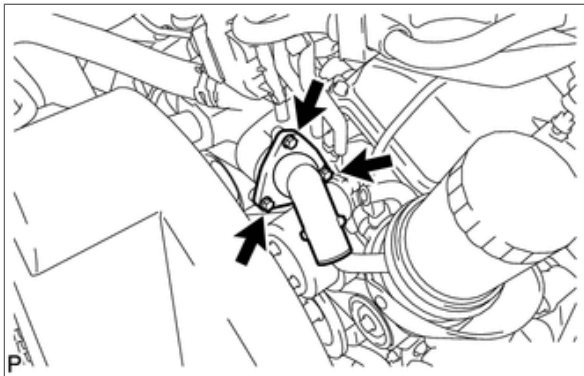

Remove the 3 nuts, water inlet with thermostat and gasket.