
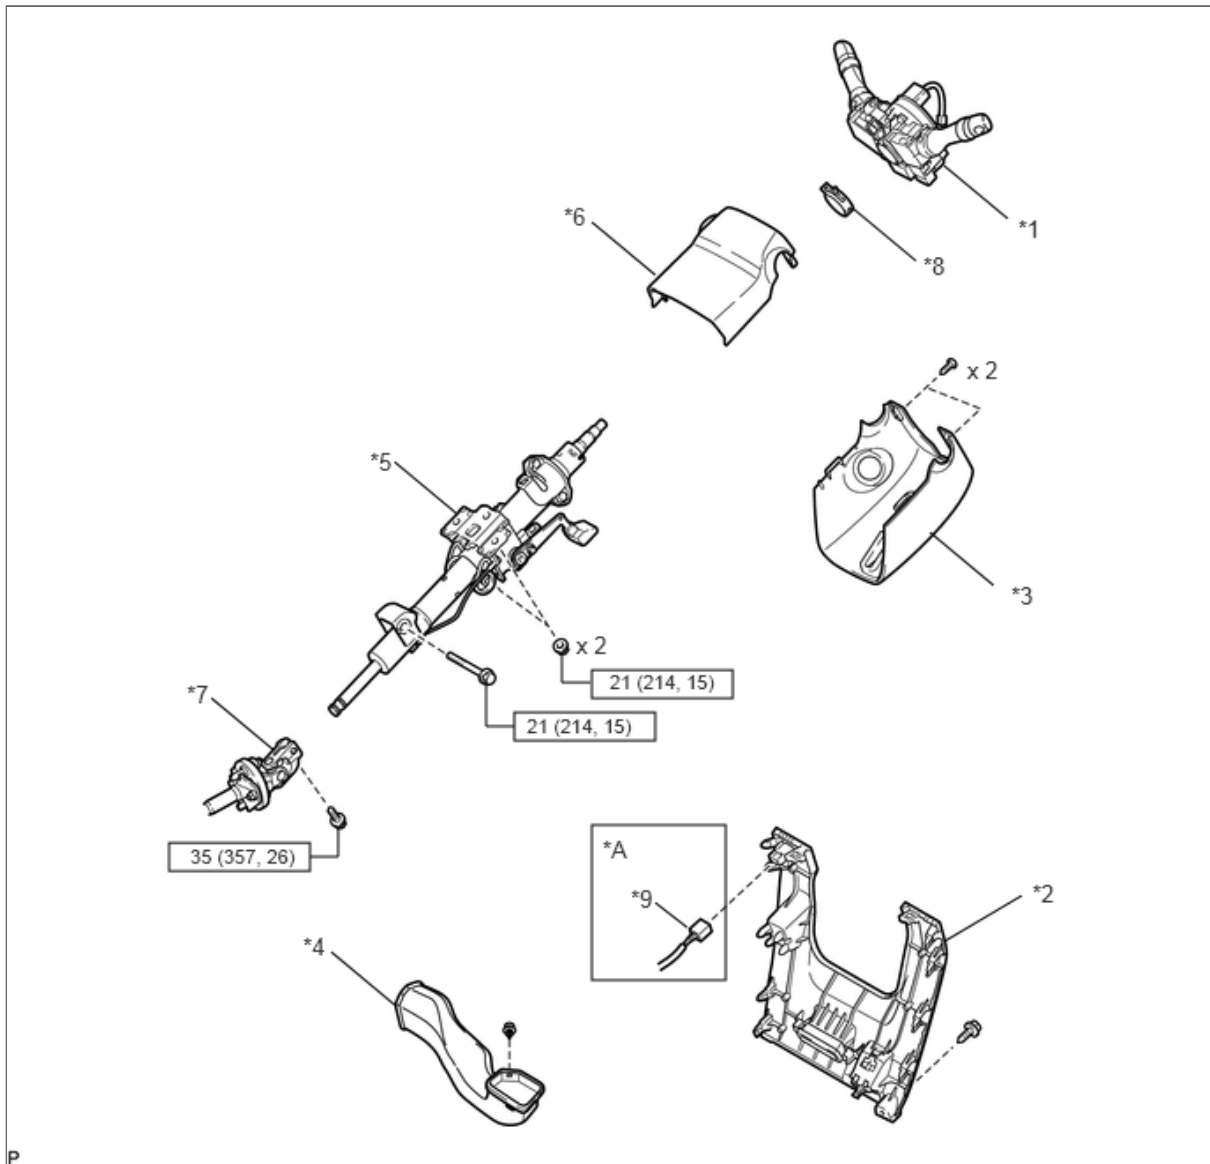


STEERING COLUMN STEERING COLUMN ASSEMBLY COMPONENTS


ILLUSTRATION



P

*A	w/ Differential Lock	-	-
*1	COMBINATION SWITCH ASSEMBLY WITH SPIRAL CABLE SUB-ASSEMBLY	*2	LOWER INSTRUMENT PANEL FINISH PANEL ASSEMBLY
*3	LOWER STEERING COLUMN COVER	*4	NO. 2 HEATER TO REGISTER DUCT
*5	STEERING COLUMN ASSEMBLY	*6	UPPER STEERING COLUMN COVER
*7	STEERING INTERMEDIATE SHAFT ASSEMBLY	*8	CLAMP
*9	DIFFERENTIAL LOCK SWITCH CONNECTOR	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	-	-


ILLUSTRATION

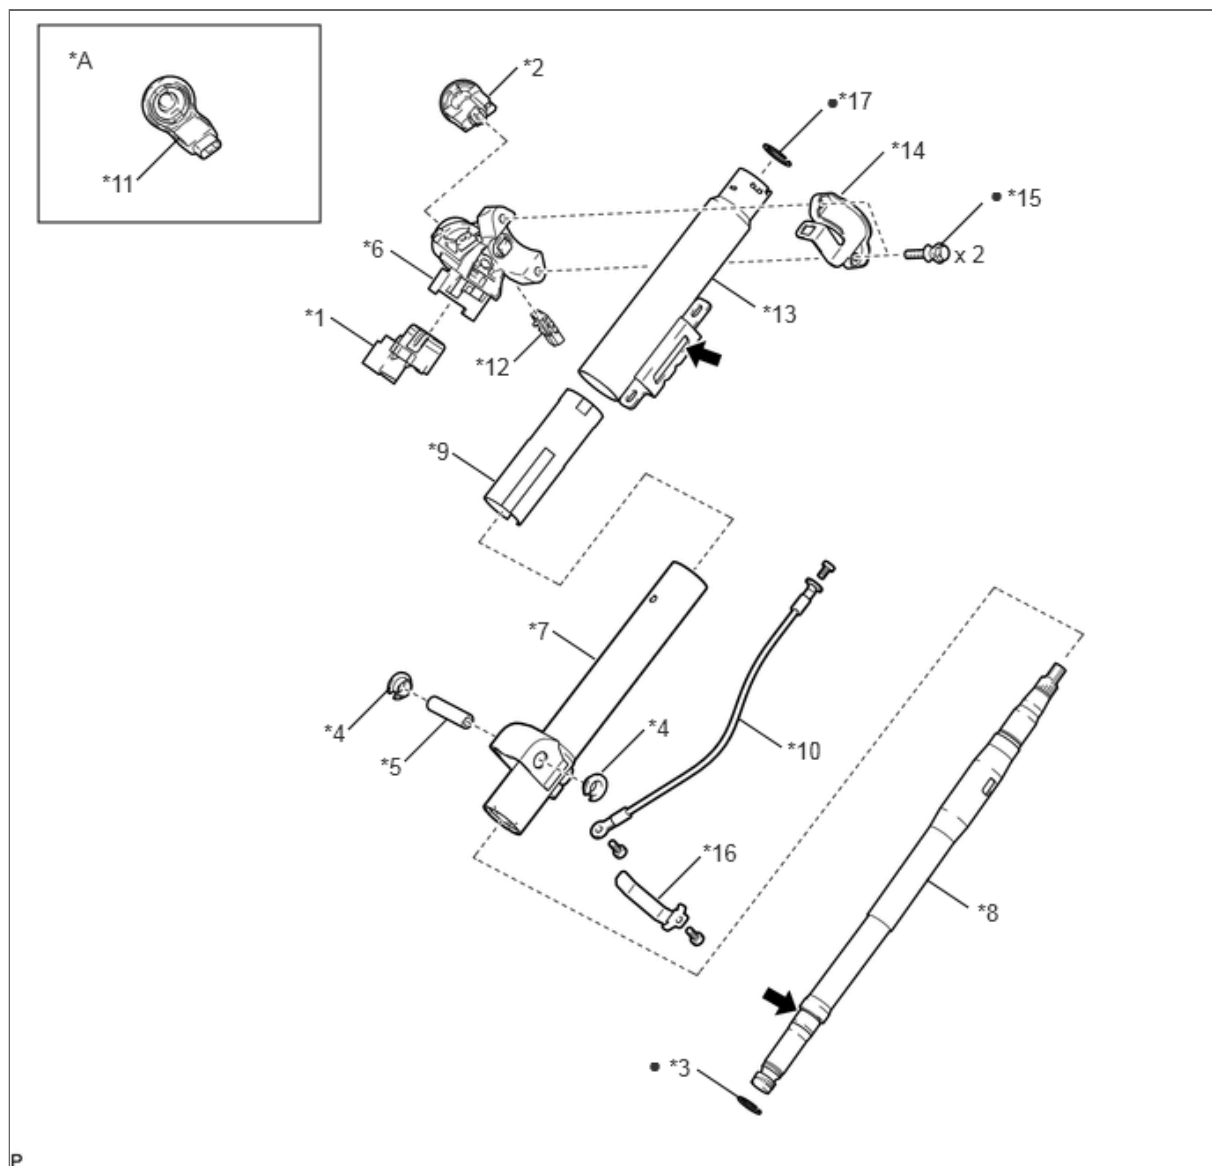

P

*A	w/ Engine Immobiliser System	-	-
*1	IGNITION OR STARTER SWITCH ASSEMBLY	*2	IGNITION SWITCH LOCK CYLINDER ASSEMBLY
*3	NO. 1 STEERING COLUMN RING	*4	NO. 1 TILT STEERING SUPPORT COLLAR
*5	STEERING COLUMN BRACKET SPACER	*6	STEERING COLUMN UPPER WITH SWITCH BRACKET ASSEMBLY
*7	STEERING LOWER COLUMN TUBE ASSEMBLY	*8	STEERING MAIN SHAFT ASSEMBLY
*9	TELESCOPIC STEERING GUIDE	*10	TILT STEERING SUPPORT BOND CABLE
*11	TRANSPONDER KEY AMPLIFIER	*12	UNLOCK WARNING SWITCH ASSEMBLY
*13	STEERING COLUMN UPPER TUBE	*14	STEERING COLUMN UPPER CLAMP
*15	STEERING LOCK SET BOLT	*16	STEERING COLUMN TUBE BRACKET
*17	STEERING MAIN SHAFT SNAP RING	-	-
•	Non-reusable part	➔	MP grease

ILLUSTRATION

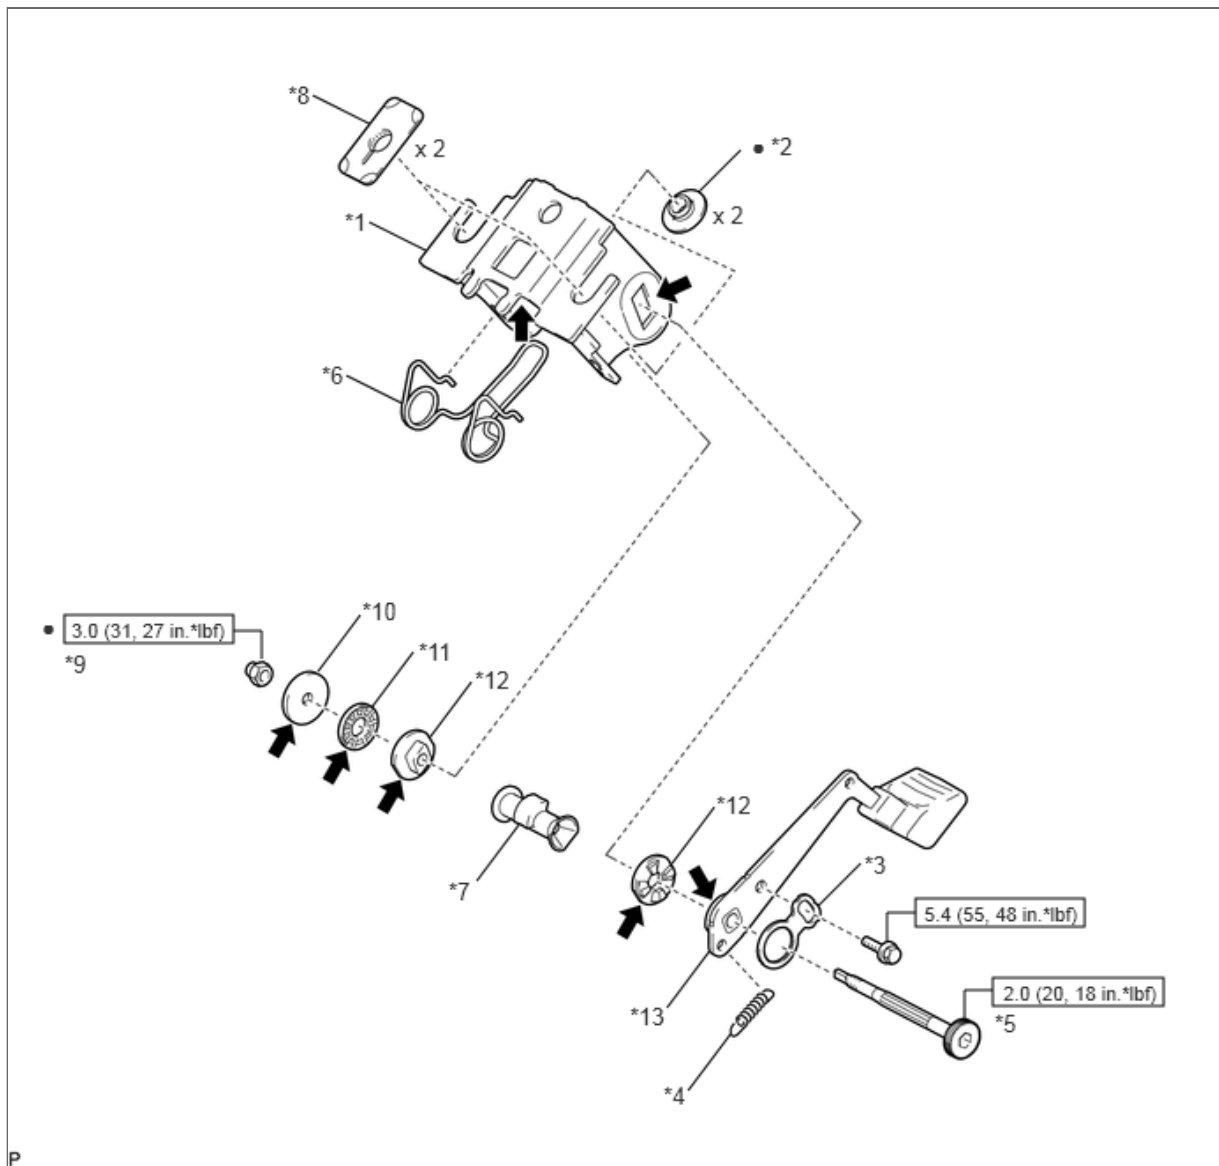

P

*1	BREAK AWAY BRACKET	*2	BREAK AWAY COLLAR SUB-ASSEMBLY
*3	NO. 1 TILT STEERING SUPPORT REINFORCEMENT	*4	TILT LEVER RETURN SPRING
*5	TILT NO. 1 LEVER LOCK BOLT	*6	TILT STEERING JUMP UP SPRING
*7	TILT STEERING PAWL ASSEMBLY	*8	BREAK AWAY CAPSULE
*9	NO. 1 TILT STEERING ADJUSTING NUT	*10	TILT STEERING ROTOR
*11	THRUST NEEDLE ROLLER BEARING	*12	STEERING COLUMN TUBE STOPPER
*13	STEERING TILT LEVER	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
	MP grease	-	-