


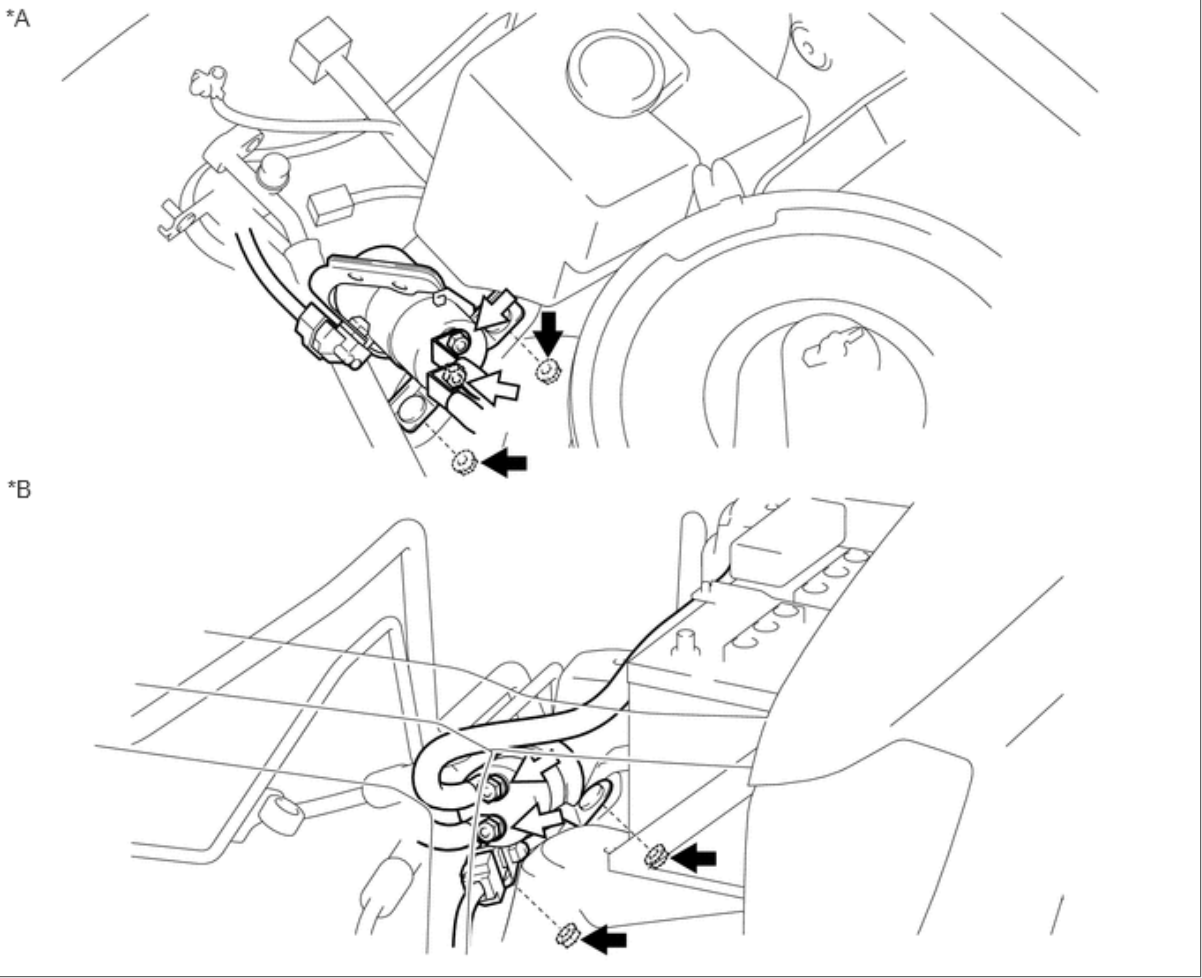

WINCH RELAY INSTALLATION

PROCEDURE

1.INSTALL WINCH MAIN RELAY

- a. Install the relay with the 2 nuts labeled A.  
**Torque:**  
**12 N\*m (122 kgf\*cm, 9 ft.\*lbf)**
- b. Connect the 2 wires with the 2 nuts labeled B.  
**Torque:**  
**9.3 N\*m (95 kgf\*cm, 82 in.\*lbf)**
- c. Connect the connector.



*A	for 1GR-FE LHD	*B	for 1GR-FE RHD, 1HZ
	Nut A		Nut B

2.CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

**Torque:**  
**5.4 N\*m (55 kgf\*cm, 48 in.\*lbf)**

