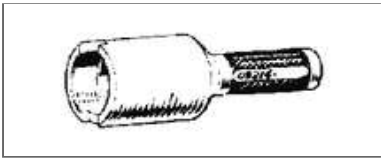
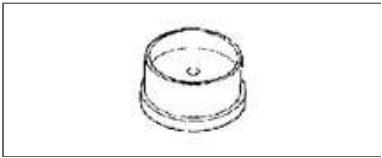
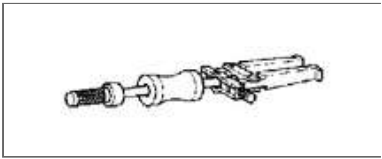
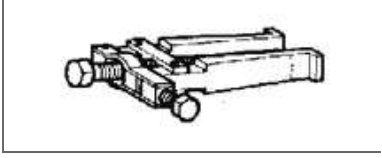
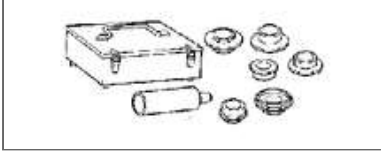
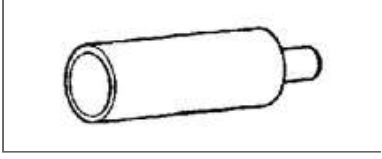
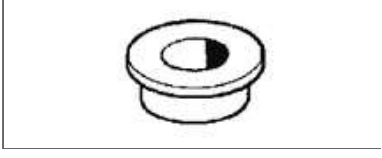
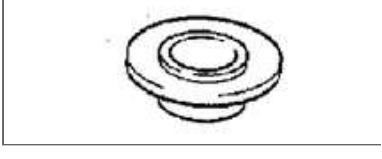
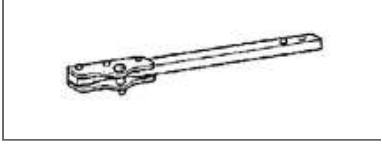
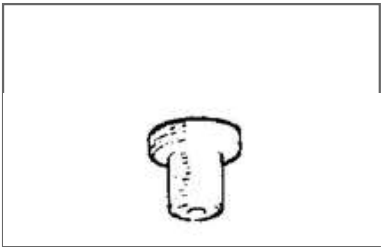
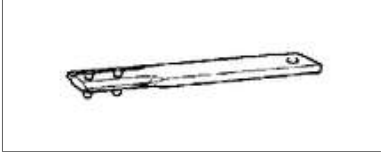
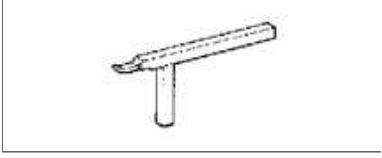
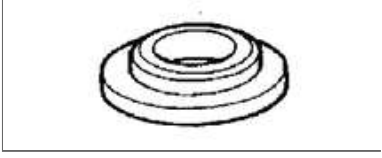
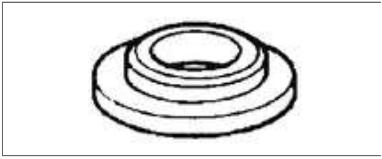
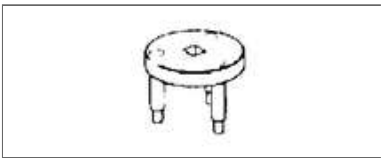
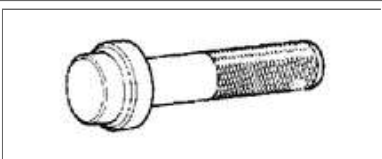
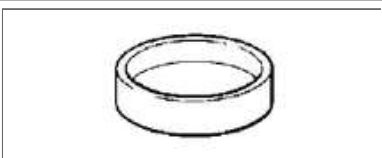


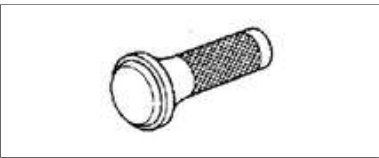
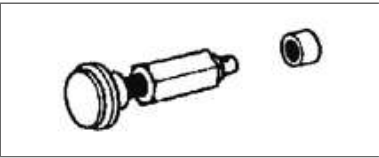
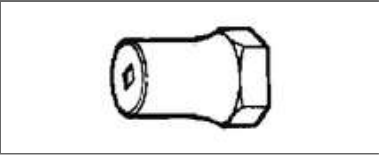
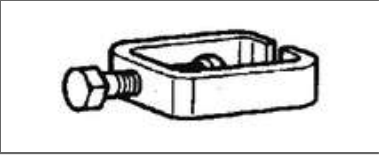
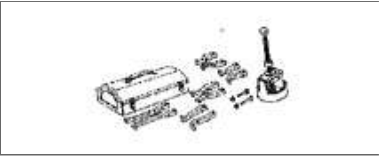
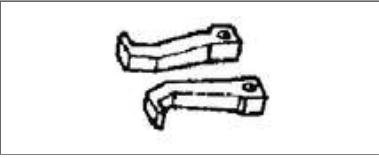
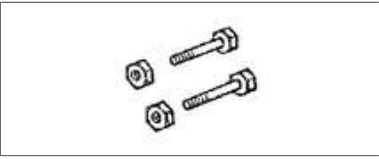
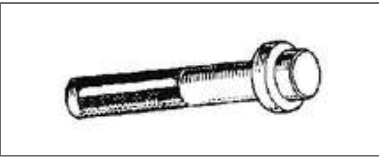


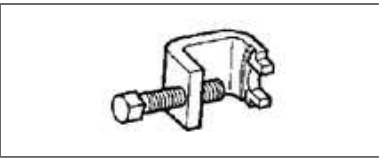
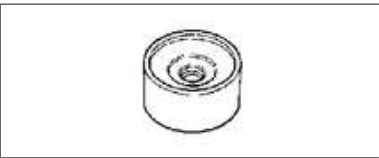
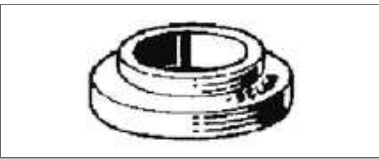
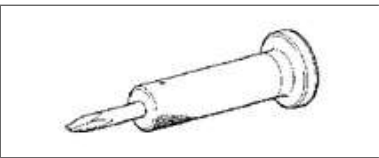
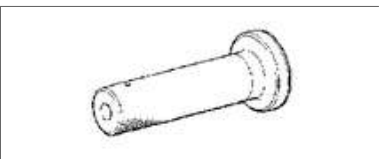
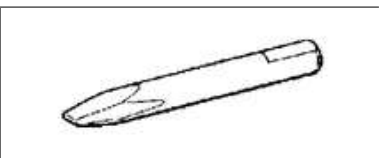
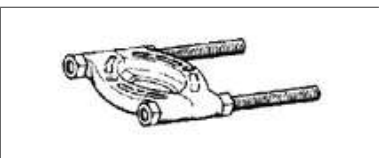

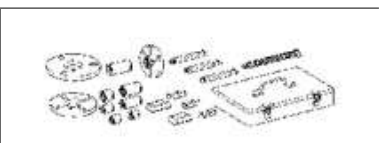


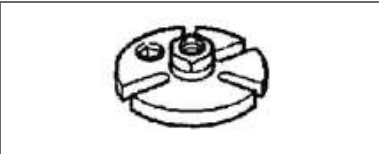

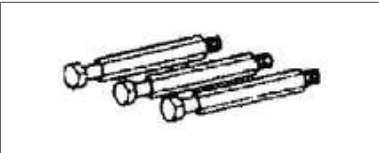
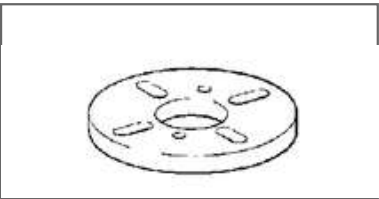

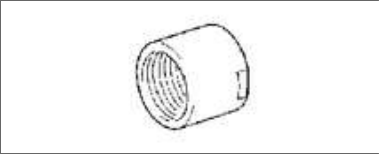

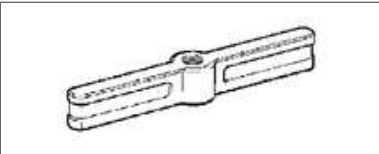
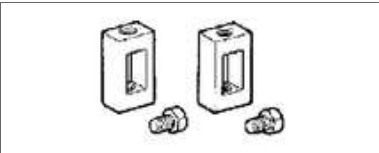
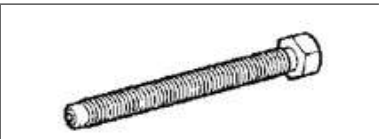
PREPARATION AXLE AND DIFFERENTIAL SST

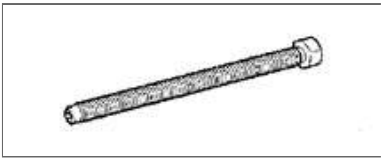
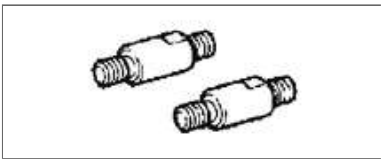
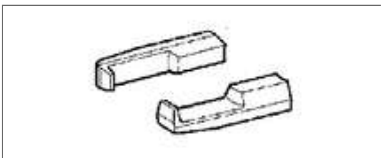

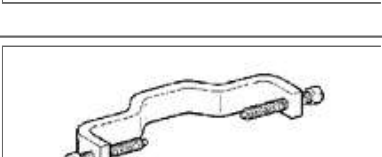
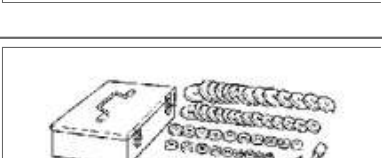
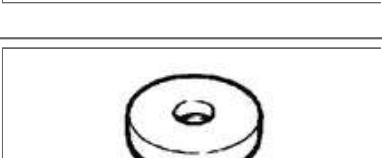
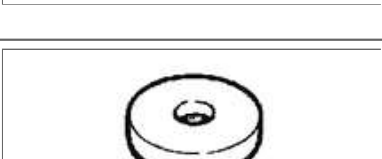
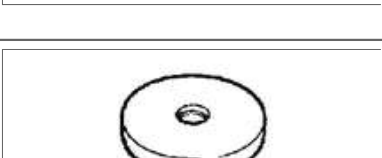
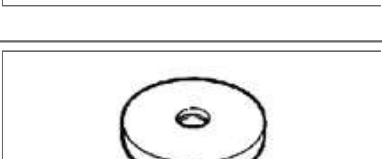
	09214-76011	Crankshaft Pulley Replacer	-
	09223-15020	Oil Seal & Bearing Replacer	-
	09308-00010	Oil Seal Puller	-
	09308-10010	Oil Seal Puller	-
	09316-60011	Transmission & Transfer Bearing Replacer	-
	(09316-00011)	Replacer Pipe	-
	(09316-00021)	Replacer A	-
	(09316-00051)	Replacer D	-
	09330-00021	Companion Flange Holding Tool	-

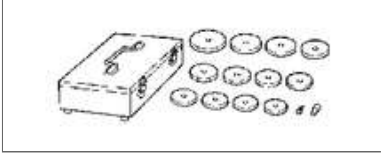
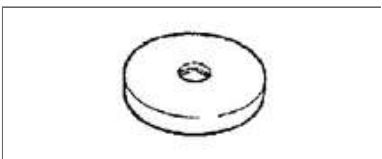
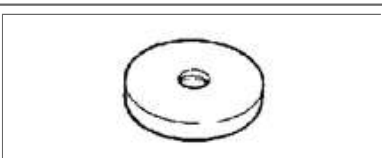
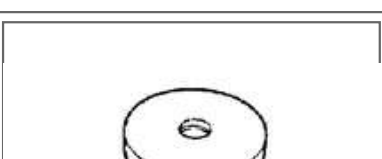
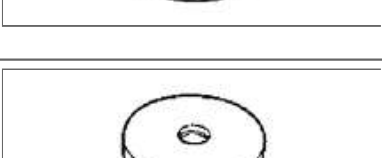
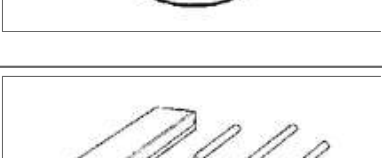
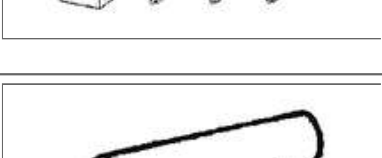

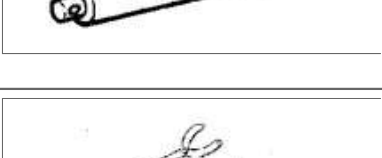

	(09330-00030)	Pin	-
	09504-00011	Differential Side Bearing Adjusting Nut Wrench	-
	09504-22012	Differential Side Washer Remover & Replacer	-
	09506-30012	Differential Drive Pinion Rear Bearing Cone Replacer	-
	09506-35010	Differential Drive Pinion Rear Bearing Replacer	-
	09509-25011	Rear Axle Bearing Lock Nut Wrench	-
	09517-36010	Rear Axle Shaft Oil Seal Replacer	-
	09550-60010	Differential Side Bearing Replacer	-
	09556-22010	Drive Pinion Front Bearing Remover	-

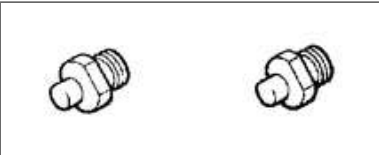
			
	09605-60010	Steering Knuckle Bearing Cup Replacer-	-
	09606-60020	Steering Knuckle Bearing Remover	-
	09607-60020	Front Wheel Adjusting Nut Wrench	-
	09611-22012	Tie Rod End Puller	-
	09612-65014	Steering Worm Bearing Puller	-
	(09612-01010)	Claw A	-
	(09612-01050)	Hanger Pin with Nut	-
	09618-60010	Front Axle & Drive Shaft Bearing Replacer	-
	09649-17010	Steering Knuckle Tool	-

			
	09650-17011	Hub Bolt Remover	-
	09710-30050	Suspension Arm Bush Replacer	-
	09726-40010	Lower Control Shaft Bearing Replacer	-
	09930-00010	Drive Shaft Nut Chisel	-
	(09931-00010)	Handle	-
	(09931-00020)	Nut Chisel	-
	09950-00020	Bearing Remover	-
	09950-00030	Bearing Remover Attachment	-
	09950-30012	Puller A Set	-

	(09951-03010)	Upper Plate	-
	(09953-03010)	Center Bolt	-
	(09954-03010)	Arm	-
	(09955-03030)	Lower Plate 130	-
	(09956-03020)	Adapter 18	-
	(09956-03040)	Adapter 22	-
	09950-40011	Puller B Set	-
	(09951-04020)	Hanger 200	-
	(09952-04010)	Slide Arm	-
	(09953-04020)	Center Bolt 150	-

	(09953-04030)	Center Bolt 200	-
	(09954-04010)	Arm 25	-
	(09955-04061)	Claw No. 6	-
	(09957-04010)	Attachment	-
	(09958-04011)	Holder	-
	09950-60010	Replacer Set	-
	(09951-00440)	Replacer 44	-
	(09951-00480)	Replacer 48	-
	(09951-00550)	Replacer 55	-
	(09951-00580)	Replacer 58	-

	09950-60020	Replacer Set No. 2	-
	(09951-00710)	Replacer 71	-
	(09951-00720)	Replacer 72	-
	(09951-00810)	Replacer 81	-
	(09951-00890)	Replacer 89	-
	09950-70010	Handle Set	-
	(09951-07100)	Handle 100	-
	(09951-07150)	Handle 150	-
	09960-10010	Variable Pin Wrench Set	-
	(09962-01000)	Variable Pin Wrench Arm Assembly	-

	(09963-00700)	Pin 7	-