


PROCEDURE


1.REMOVE BACK-UP LIGHT SWITCH ASSEMBLY

84210

- a. Disconnect the back-up light switch connector.

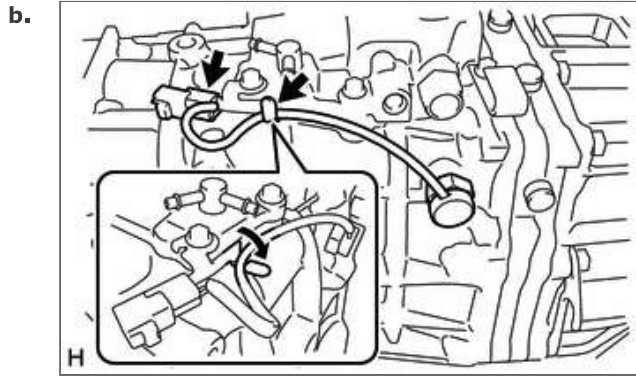

Disconnect the back-up light switch connector clamp and wire harness clamp from the bracket.

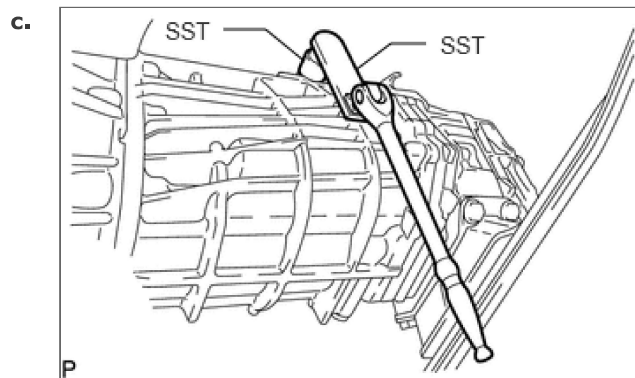

Using SST, remove the back-up light switch assembly and gasket.

SST

09817-16011

09961-01270