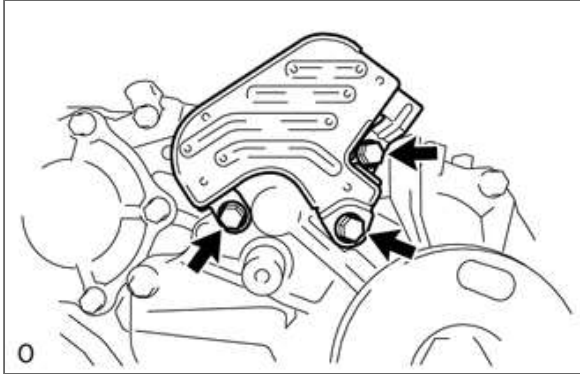


PROCEDURE

1.REMOVE TRANSFER HEAT INSULATOR (w/ ABS)**36336****a.**


Remove the 3 bolts and transfer heat insulator.

2.REMOVE NO. 1 TRANSFER INDICATOR SWITCH (4WD POSITION AND L4 POSITION)**84222**

a. Tilt the manual transmission assembly until the No. 1 transfer indicator switch can be removed.

- for 1GR-FE: Click here[Drivetrain>H150F \(MANUAL TRANSMISSION / TRANSAXLE\)>MANUAL TRANSMISSION ASSEMBLY \(for 1GR-FE\)>REMOVAL](#)
- for 1VD-FTV: Click here[Drivetrain>H150F \(MANUAL TRANSMISSION / TRANSAXLE\)>MANUAL TRANSMISSION ASSEMBLY \(for 1VD-FTV\)>REMOVAL](#)

b. Remove the No. 1 transfer indicator switch (4WD position).

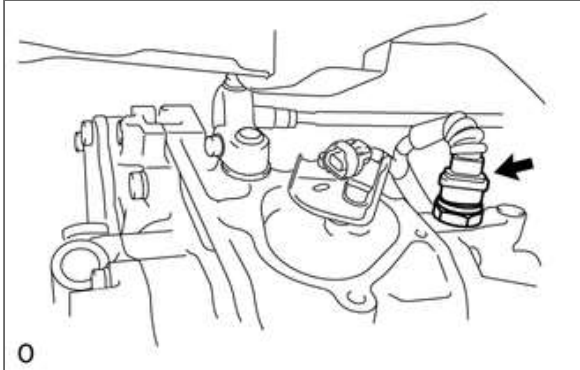
i.

Disconnect the connector.

ii. Using a 27 mm socket wrench, remove the No. 1 transfer indicator switch (4WD position).

c. w/ ABS:
Remove the No. 1 transfer indicator switch (L4 position).

i.

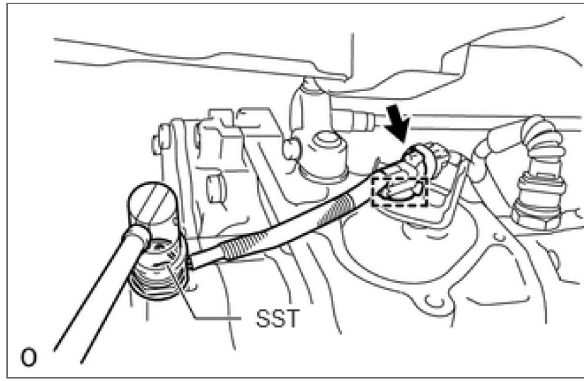

Disconnect the connector and detach the clamp.

- ii. Using SST, remove the No. 1 transfer indicator switch (L4 position).

SST

09817-16011