


ILLUSTRATION

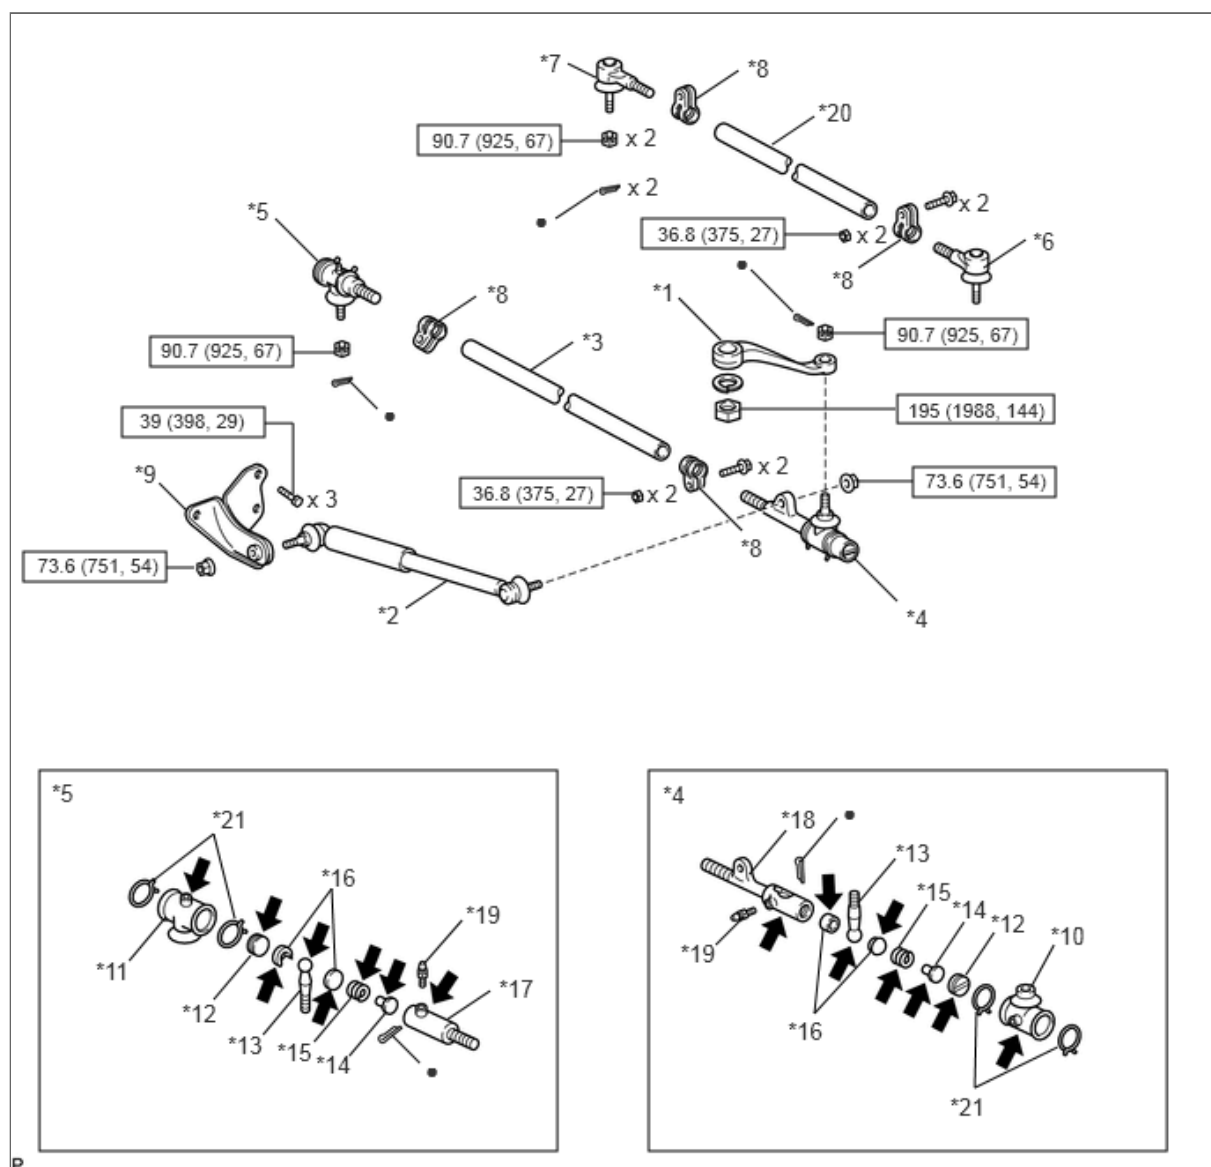

P

*1	PITMAN ARM	*2	STEERING DAMPER ASSEMBLY
*3	STEERING RELAY ROD ASSEMBLY	*4	STEERING RELAY ROD END SUB-ASSEMBLY LH
*5	STEERING RELAY ROD END SUB-ASSEMBLY RH	*6	TIE ROD END SUB-ASSEMBLY LH
*7	TIE ROD END SUB-ASSEMBLY RH	*8	CLAMP
*9	STEERING DAMPER BRACKET	*10	STEERING LINK DUST SEAL LH
*11	STEERING LINK DUST SEAL RH	*12	STEERING LINK JOINT STRAIGHT SCREW PLUG
*13	STEERING LINK JOINT KNOB	*14	STEERING LINK JOINT SPRING SEAT
*15	STEERING LINK JOINT COMPRESSION SPRING	*16	BALL STUD SEAT
*17	STEERING RELAY ROD END RH	*18	STEERING RELAY ROD END LH
*19	GREASE NIPPLE	*20	STEERING TIE ROD
*21	RELAY ROD SET RING	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
	MP Grease	-	-

