




ILLUSTRATION



*1	CYLINDER BOOT	*2	DISC BRAKE CYLINDER ASSEMBLY LH
*3	FRONT DISC	*4	FRONT DISC BRAKE ANTI-RATTLE SPRING
*5	FRONT DISC BRAKE BLEEDER PLUG	*6	FRONT DISC BRAKE BLEEDER PLUG CAP
*7	FRONT DISC BRAKE PAD	*8	FRONT DISC BRAKE PISTON
*9	FRONT FLEXIBLE HOSE LH	*10	NO. 1 ANTI-SQUEAL SHIM
*11	PISTON SEAL	*12	SET RING
*13	NO. 2 ANTI-SQUEAL SHIM	*14	PIN HOLD CLIP
*15	DISC BRAKE PAD GUIDE PIN	*16	UNION BOLT
*17	GASKET	-	
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
	Lithium soap base glycol grease		Disc brake grease





*A




P

*A	w/o Free Wheel Hub	*B	w/ ABS
*1	DISC BRAKE CYLINDER ASSEMBLY LH	*2	FRONT DISC
*3	FRONT AXLE HUB OIL SEAL LH	*4	FRONT AXLE OUTER SHAFT FLANGE CAP
*5	FRONT AXLE OUTER SHAFT FLANGE LH	*6	FRONT SPEED SENSOR LH
*7	FRONT WHEEL ADJUSTING NUT LH	*8	INNER BEARING
*9	FRONT DRIVE SHAFT SNAP RING LH	*10	FRONT AXLE SHAFT CONE WASHER
*11	FRONT AXLE OUTER SHAFT FLANGE GASKET LH	*12	FRONT WHEEL ADJUSTING LOCK WASHER

*1	DISC BRAKE CYLINDER ASSEMBLY LH	*2	FRONT DISC
*3	FRONT WHEEL HUB ASSEMBLY	*4	FRONT AXLE HUB OIL SEAL LH
*5	FRONT SPEED SENSOR LH	*6	FRONT WHEEL ADJUSTING NUT LH
*7	INNER BEARING	*8	FREE WHEEL HUB COVER SUB-ASSEMBLY LH
*9	FREE WHEEL HUB RING LH	*10	FREE WHEEL HUB GASKET LH
*11	FRONT AXLE OUTER SHAFT FLANGE GASKET LH	*12	FRONT AXLE SHAFT CONE WASHER
*13	FRONT WHEEL ADJUSTING LOCK WASHER	*14	FRONT AXLE HUB CLAW WASHER LH
*15	OUTER BEARING	*16	FRONT AXLE HUB LH
*17	STEERING KNUCKLE SPINDLE SUB-ASSEMBLY	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
	MP grease	-	-

ILLUSTRATION

*A

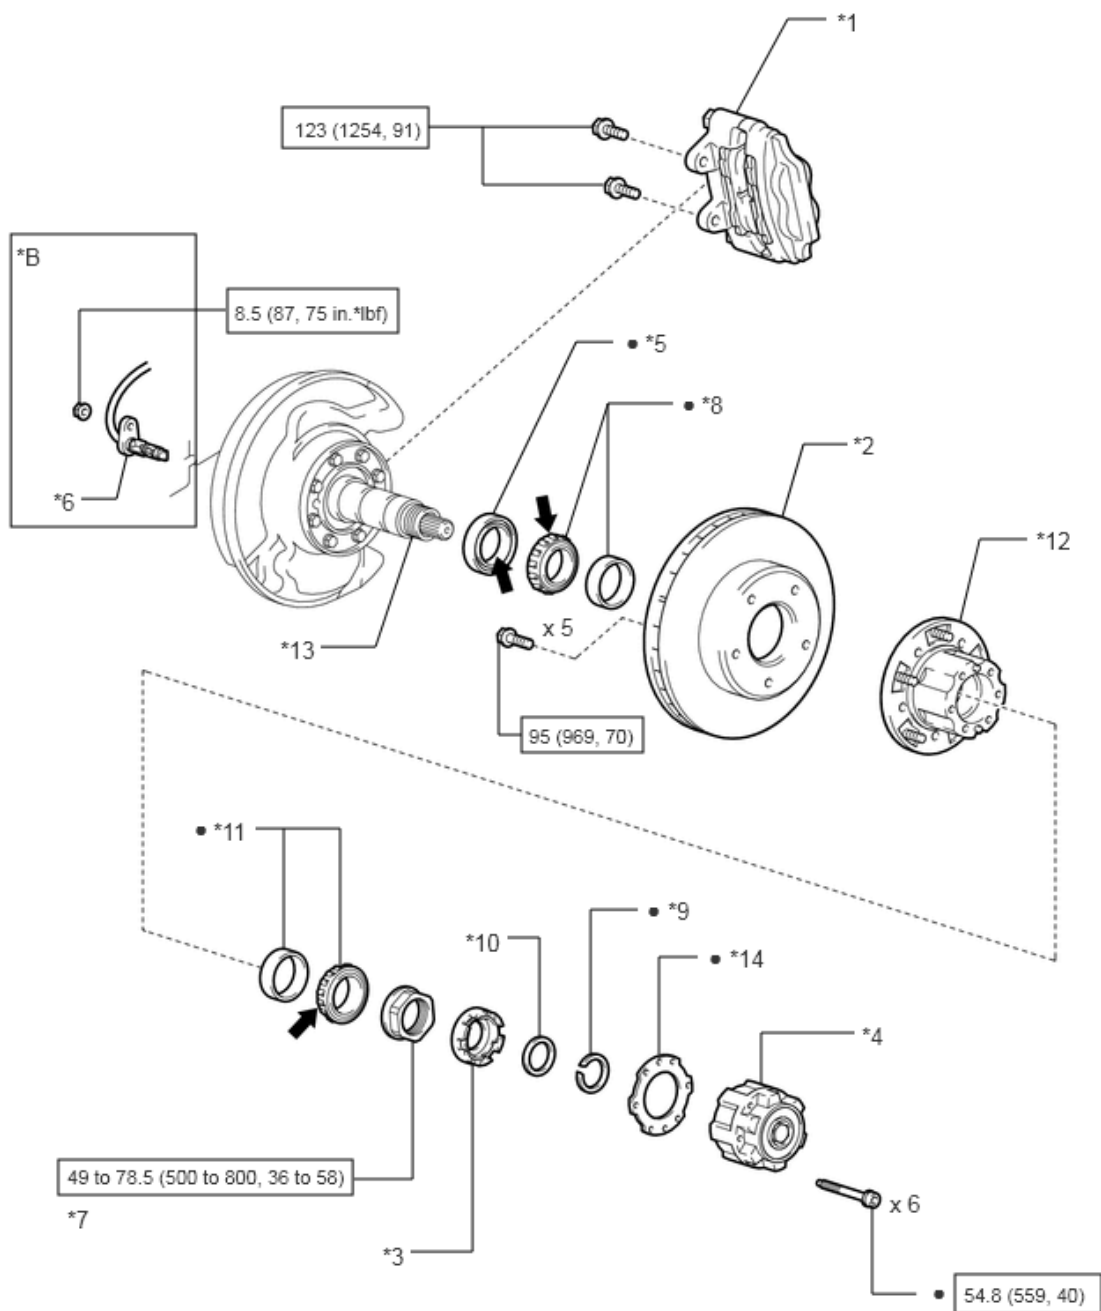

P

*A	w/ Dual Mode Automatic Locking Hub	*B	w/ ABS
*1	DISC BRAKE CYLINDER ASSEMBLY LH	*2	FRONT DISC
*3	BRAKE SET	*4	FREE WHEEL HUB ASSEMBLY
*5	FRONT AXLE HUB OIL SEAL LH	*6	FRONT SPEED SENSOR LH
*7	FRONT WHEEL ADJUSTING NUT LH	*8	INNER BEARING
*9	FRONT DRIVE SHAFT SNAP RING LH	*10	FRONT DRIVE SHAFT SPACER LH
*11	OUTER BEARING	*12	FRONT AXLE HUB LH
*13	STEERING KNUCKLE SPINDLE SUB-ASSEMBLY	*14	FRONT AXLE OUTER SHAFT FLANGE GASKET LH
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
	MP grease	-	-

