


[Print](#)[Preview](#)[Exit](#)

H150F MANUAL TRANSMISSION / TRANSAXLE MANUAL TRANSMISSION OIL REPLACEMENT


PROCEDURE

1.DRAIN MANUAL TRANSMISSION OIL

- a. Stop the vehicle on a level surface.

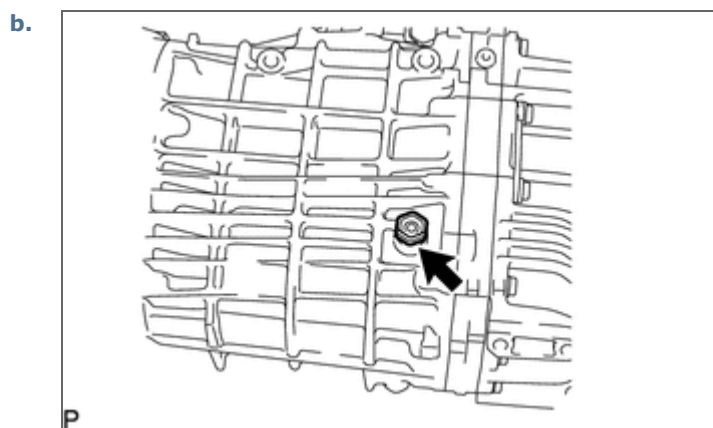

Remove the manual transmission case plug and gasket.

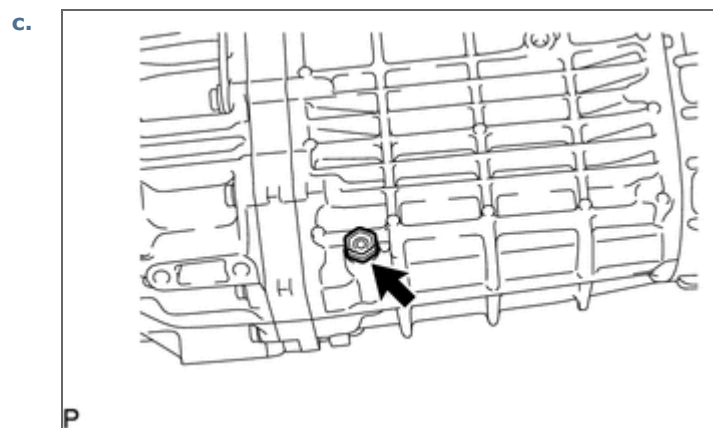


Remove the drain plug sub-assembly and gasket to drain the manual transmission oil.

- d. Install a new gasket and the drain plug sub-assembly.

Torque:

37.24 N*m (380 kgf*cm, 27 ft.*lbf)

2.ADD MANUAL TRANSMISSION OIL

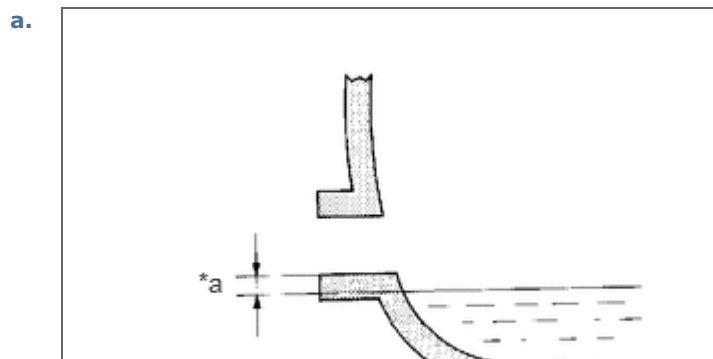


D25304	
*a	0 to 5 mm (0 to 0.196 in.)

Add manual transmission oil until the oil level is within 0 to 5 mm (0 to 0.196 in.) from the bottom of the manual transmission case plug opening.

Manual transmission oil:

Oil grade	Oil viscosity	Standard capacity
GL-4	SAE 75W-90	2.9 liters (3.1 US qts, 2.6 Imp. qts)

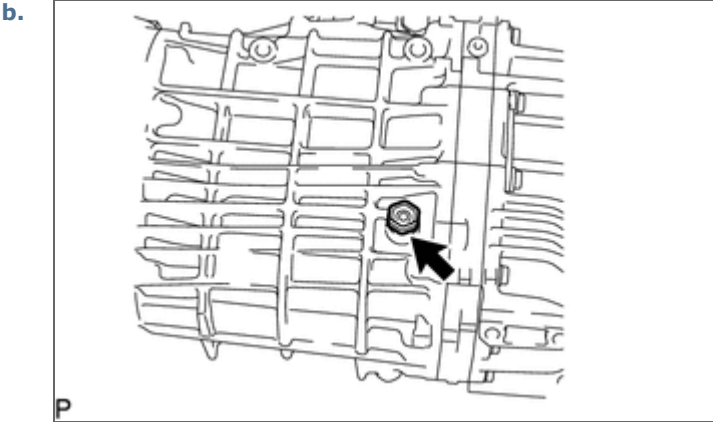

Install a new gasket and the manual transmission case plug.

Torque:
37.24 N*m (380 kgf*cm, 27 ft.*lbf)