


PROCEDURE

- | | |
|---|--------|
| 1.REMOVE CLUTCH MASTER CYLINDER RESERVOIR FILLER CAP ASSEMBLY | 31440P |
| 2.REMOVE CLUTCH MASTER CYLINDER RESERVOIR FLOAT | 31426 |
| 3.DRAIN CLUTCH FLUID | |
| 4.REMOVE CLUTCH MASTER CYLINDER ASSEMBLY | 31410 |

a.

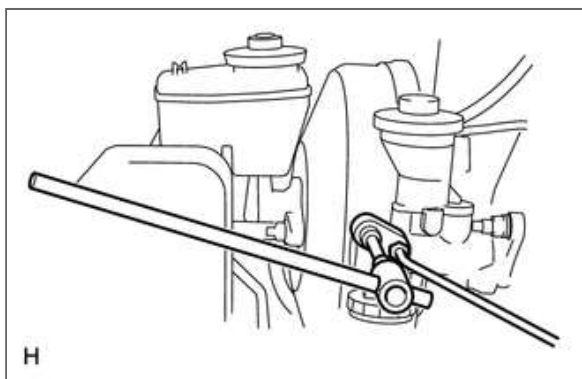


Using a union nut wrench, disconnect the clutch master cylinder to flexible hose tube.

HINT:


Use a container to catch the fluid.

b.

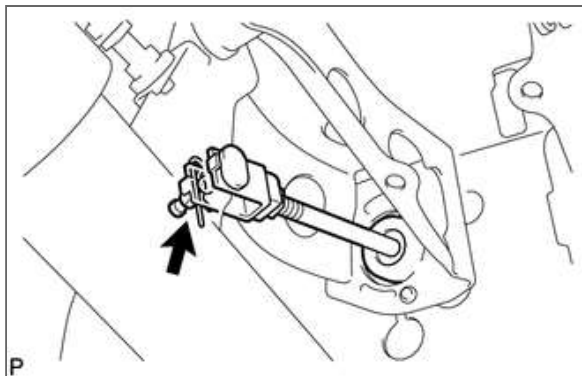

Remove the clip and clutch master cylinder push rod clevis pin.

c.

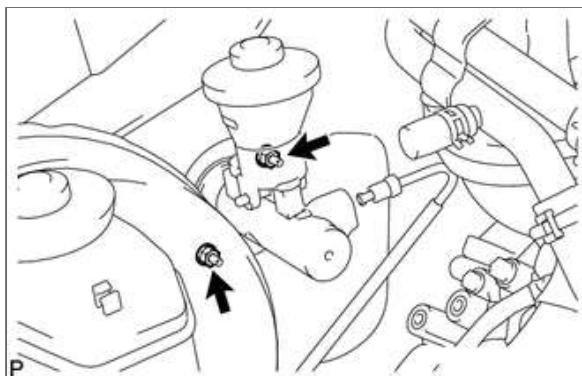

Remove the 2 nuts and clutch master cylinder assembly.

- d.** Remove the gasket.