


**INJECTOR COMPENSATION CODE**

- a. Each injector has different fuel injection characteristics. In order to optimize fuel injection performance, the ECM compensates for these differences by adjusting the fuel injection duration of each injector according to its compensation code. Injector compensation codes are unique, 30 digit, alphanumeric values printed on the head portion of each injector.

- b. Example:

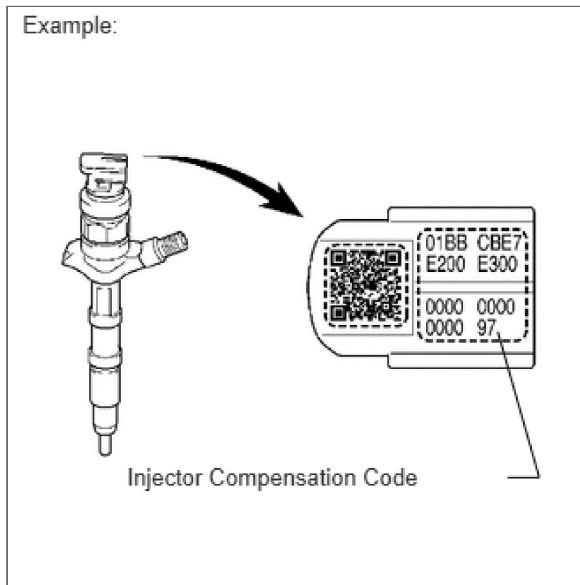

When an injector is replaced, the new injector's compensation code must be input into the ECM.

- c. When the ECM is changed, all of the existing injector compensation codes must be input into the new ECM.
- d. If an incorrect injector compensation code is input into the ECM, the engine assembly may rattle or engine idling may become rough. In addition, engine failure may occur and the life of the engine may be shortened.

**FOR USING GTS****CAUTION:**

Observe the following items for safety reasons:

- Before using the GTS, read its instruction manual.
- Prevent the GTS cable from being caught on the pedals, shift lever or steering wheel when driving with the GTS connected to the vehicle.
- When driving the vehicle for testing purposes using the GTS, two persons are required. One person drives the vehicle, and the other operates the GTS.