

CAUTION / NOTICE / HINT**HINT:**

- Use the same procedure for RHD and LHD vehicles.
- The procedure listed below is for LHD vehicles.

PROCEDURE**1. PRECAUTION****CAUTION:**

Be sure to read Precaution thoroughly before servicing.

[Click here](#)Vehicle Interior>SUPPLEMENTAL RESTRAINT SYSTEMS>AIRBAG SYSTEM>PRECAUTION

NOTICE:

After turning the ignition switch off, waiting time may be required before disconnecting the cable from the negative (-) battery terminal. Therefore, make sure to read the disconnecting the cable from the negative (-) battery terminal notices before proceeding with work.


[Click here](#)General>INTRODUCTION>REPAIR INSTRUCTION>PRECAUTION

2.DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**CAUTION:**

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

3.REMOVE STEERING WHEEL ASSEMBLY**45100**

[Click here](#)Steering>STEERING COLUMN>STEERING WHEEL>REMOVAL

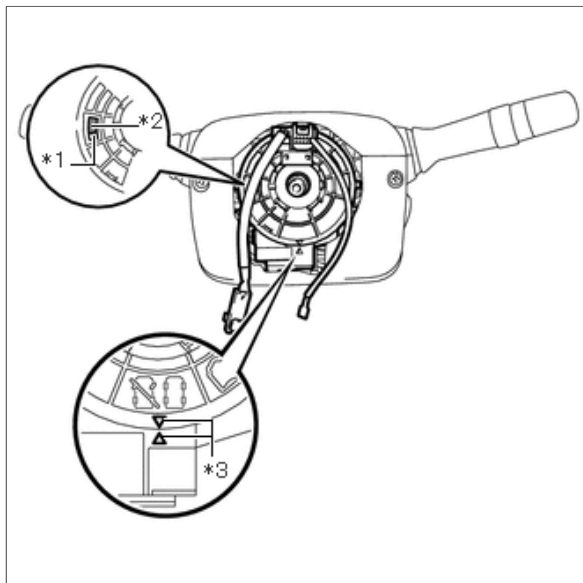4.INSPECT SPIRAL CABLE SUB-ASSEMBLY**84306****a.**

*1	Check Window
*2	Orange Colored Roller
*3	Matchmark

Check the check window shown in the illustration.

NOTICE:

When the spiral cable sub-assembly is not in the following condition with the front tires facing straight ahead, there may be an open circuit in the spiral cable sub-assembly. Therefore, replace the spiral cable sub-assembly with a new one.

OK:

When the steering wheel is centered, the orange colored roller can be checked from the check window and the matchmarks are aligned.

5.REMOVE LOWER INSTRUMENT PANEL FINISH PANEL ASSEMBLY

55480D

Click here [Vehicle Interior>INTERIOR PANELS / TRIM>INSTRUMENT PANEL SAFETY PAD>REMOVAL](#)

6.REMOVE LOWER STEERING COLUMN COVER

45287

Click here [Steering>STEERING COLUMN>STEERING COLUMN ASSEMBLY>REMOVAL](#)

7.REMOVE UPPER STEERING COLUMN COVER

45286B


Click here [Steering>STEERING COLUMN>STEERING COLUMN ASSEMBLY>REMOVAL](#)

8.REMOVE SPIRAL CABLE SUB-ASSEMBLY

84306

NOTICE:

- Do not replace the spiral cable sub-assembly with the battery connected and the ignition switch on (IG).
- Do not rotate the spiral cable with the battery connected and the ignition switch on (IG).

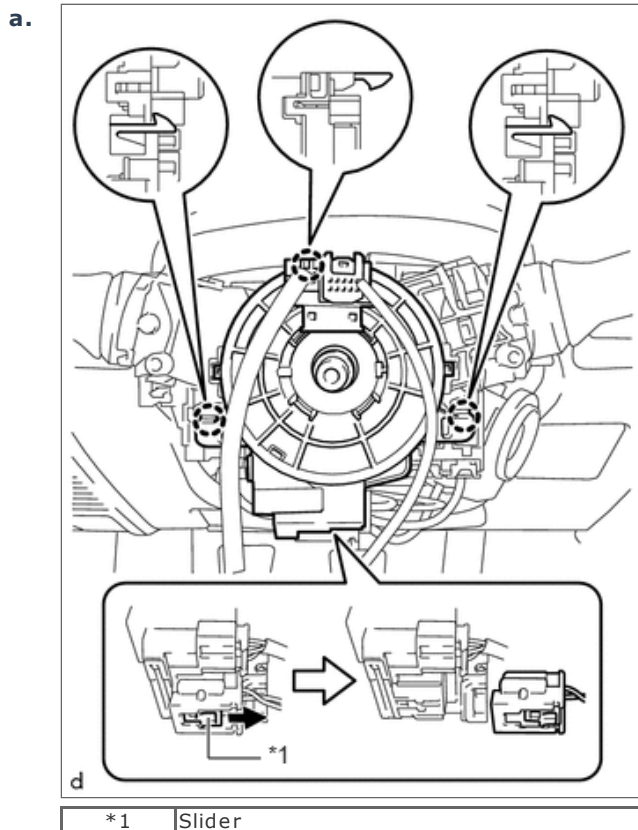

Slide the slider to release the lock, and then disconnect the airbag connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Disconnect each connector.

c. Detach the 3 claws and remove the spiral cable sub-assembly.

