


ILLUSTRATION

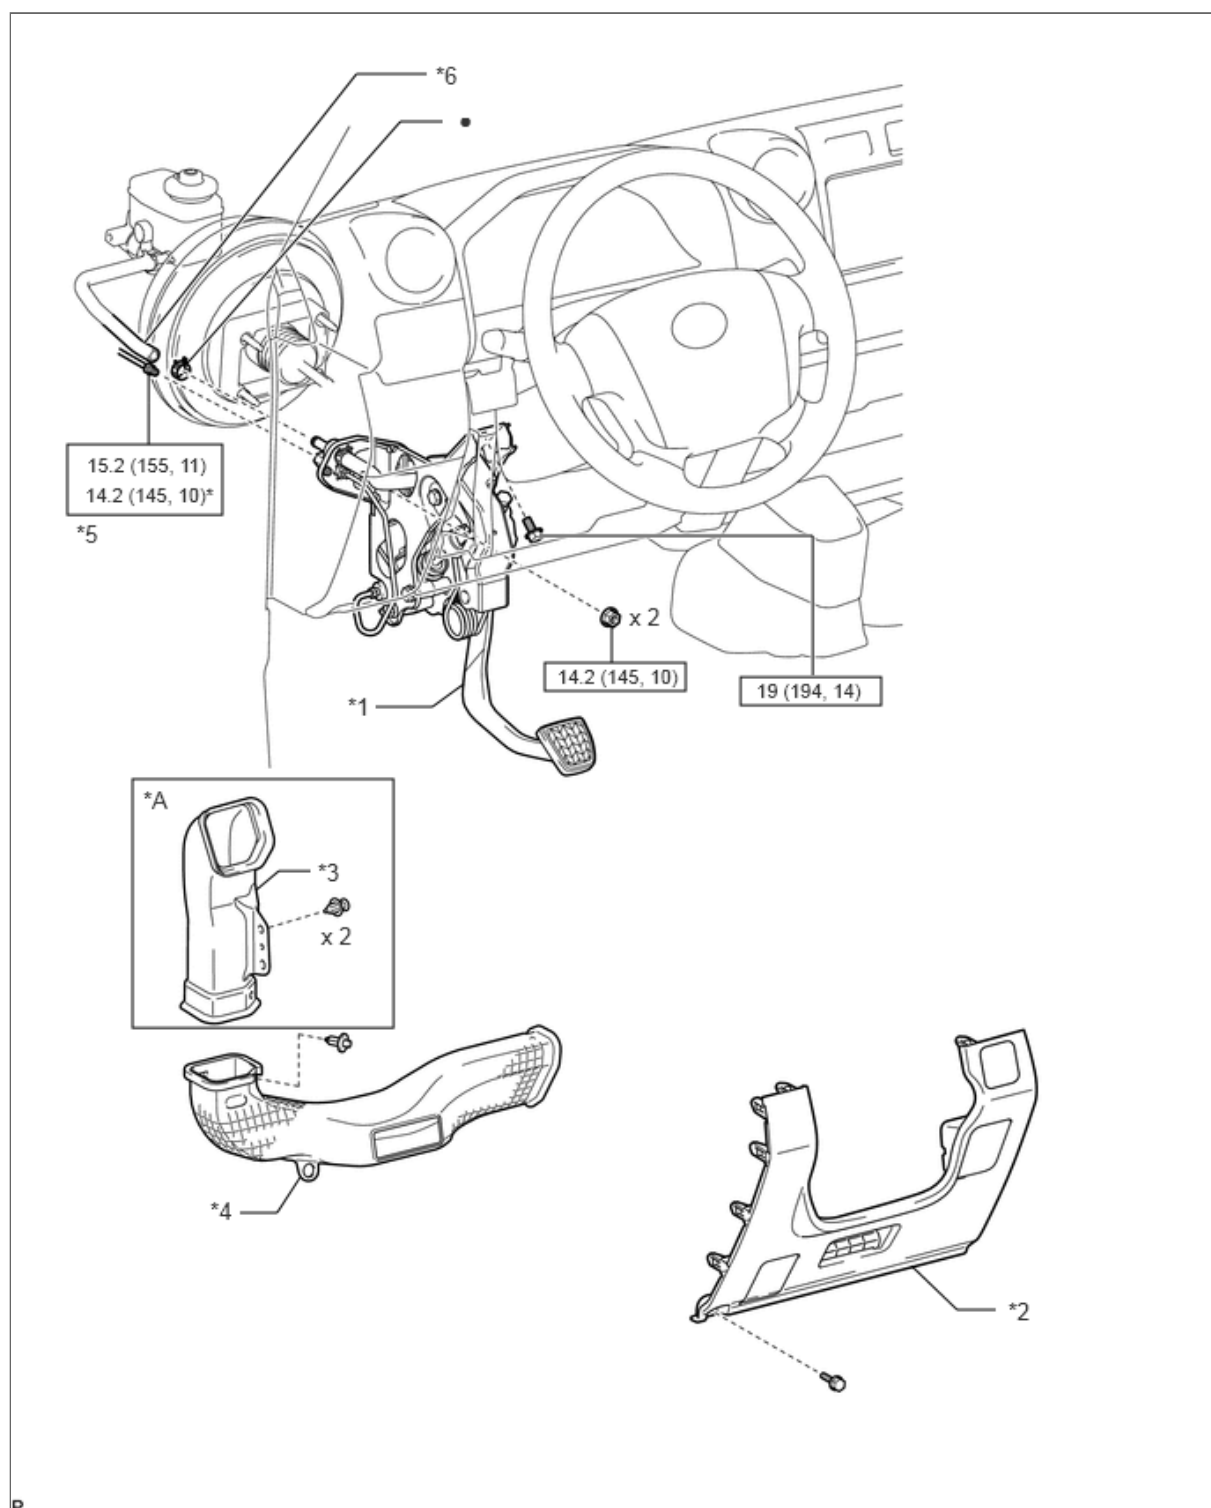


P

| | | | |
|----|---|----|--|
| *A | w/ Heater | - | - |
| *1 | CLUTCH PEDAL SUPPORT ASSEMBLY WITH CLUTCH MASTER CYLINDER | *2 | LOWER INSTRUMENT PANEL FINISH PANEL ASSEMBLY |
| *3 | NO. 1 INSTRUMENT PANEL REGISTER CONNECTOR | *4 | NO. 2 HEATER TO REGISTER DUCT |
| *5 | CLUTCH MASTER CYLINDER TO FLEXIBLE HOSE TUBE | *6 | CLUTCH RESERVOIR TUBE |
| | N*m (kgf*cm, ft.*lbf): Specified torque | * | For use with union nut wrench |



| | | | |
|---|-------------------|---|---|
| • | Non-reusable part | - | - |
|---|-------------------|---|---|

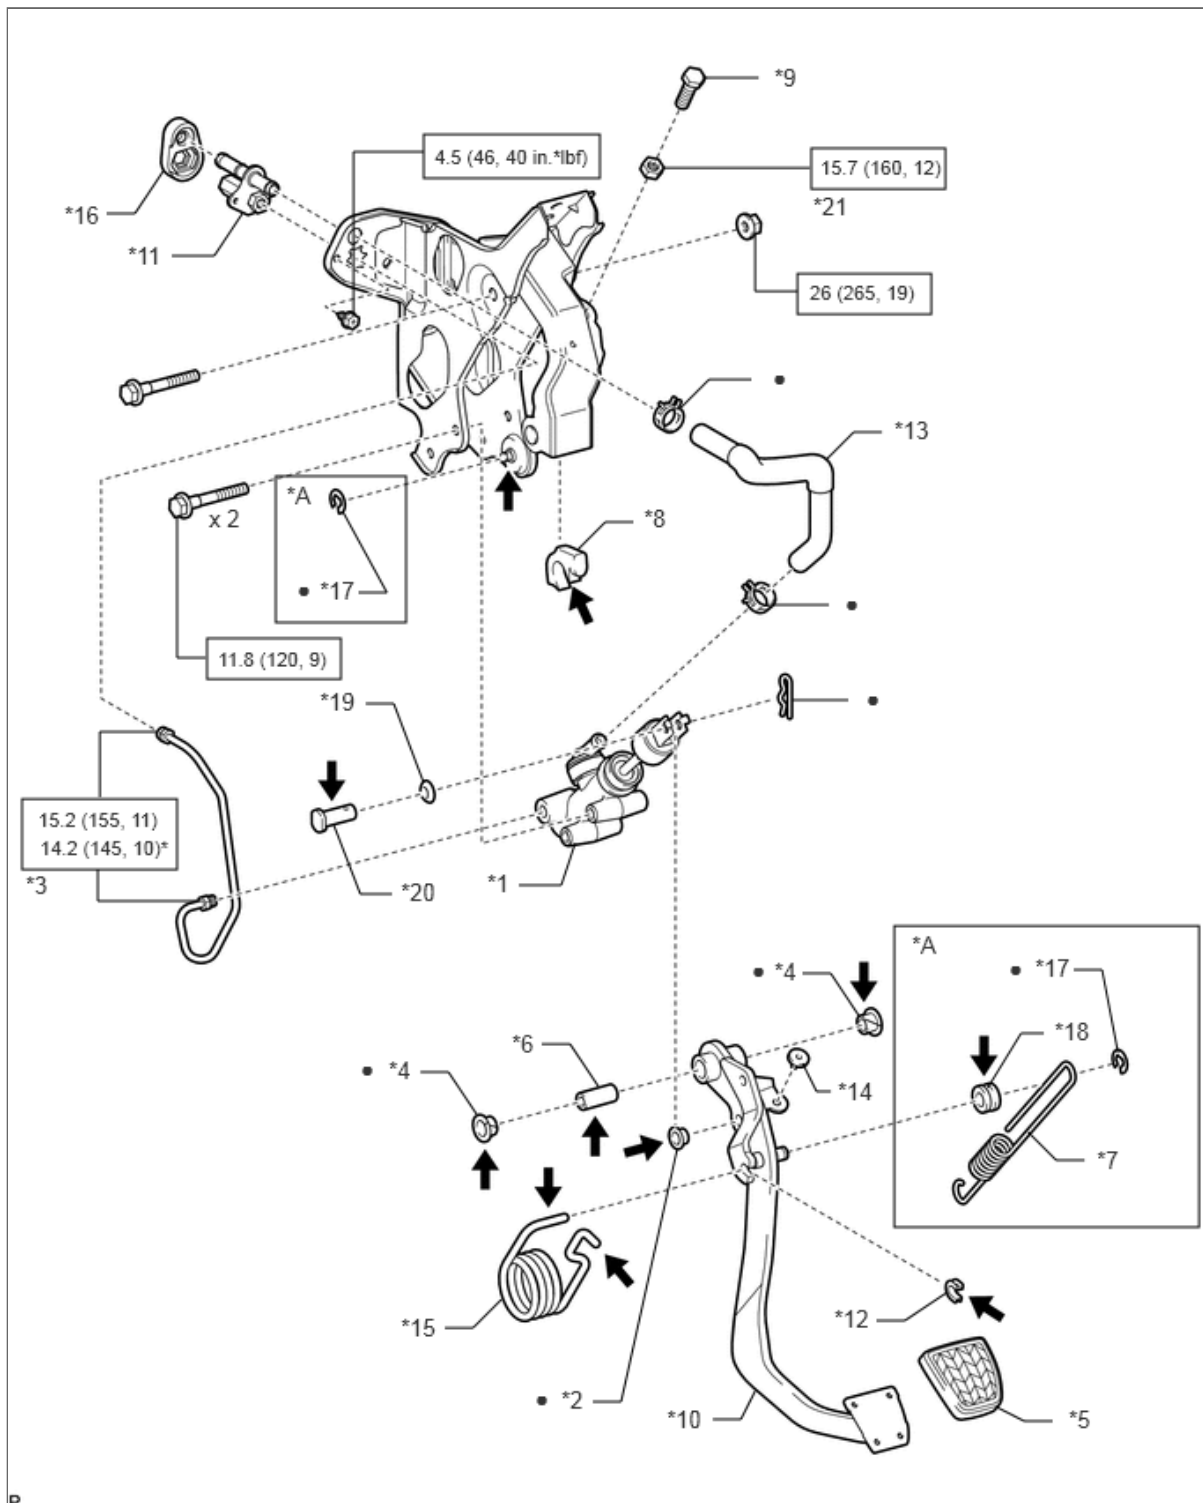ILLUSTRATION



P

| | | | |
|-----|--------------------------------------|-----|---|
| *A | for 1GR-FE | - | - |
| *1 | CLUTCH MASTER CYLINDER ASSEMBLY | *2 | CLUTCH MASTER CYLINDER PUSH ROD CLEVIS BUSH |
| *3 | CLUTCH MASTER CYLINDER TO 2 WAY TUBE | *4 | CLUTCH PEDAL BUSH |
| *5 | CLUTCH PEDAL PAD | *6 | CLUTCH PEDAL SHAFT COLLAR |
| *7 | CLUTCH PEDAL SPRING | *8 | CLUTCH PEDAL SPRING HOLDER |
| *9 | CLUTCH PEDAL STOPPER BOLT | *10 | CLUTCH PEDAL SUB-ASSEMBLY |
| *11 | CLUTCH PEDAL SUPPORT WAY | *12 | CLUTCH PEDAL TURNOVER BUSH |
| *13 | CLUTCH RESERVOIR TUBE | *14 | NO. 1 CLUTCH PEDAL CUSHION |
| *15 | TURN OVER SPRING SEAT COMPRESSION | *16 | CLUTCH PEDAL SUPPORT GROMMET |

| | | | |
|---|---|---|---|
| SPRING | | | |
| *17 | E-RING | *18 | SPACER |
| *19 | WAVE WASHER | *20 | CLUTCH MASTER CYLINDER PUSH ROD CLEVIS PIN |
| *21 | LOCK NUT | - | - |
|  | N*m (kgf*cm, ft.*lbf): Specified torque | * | For use with union nut wrench |
| • | Non-reusable part |  | MP grease |