



ILLUSTRATION

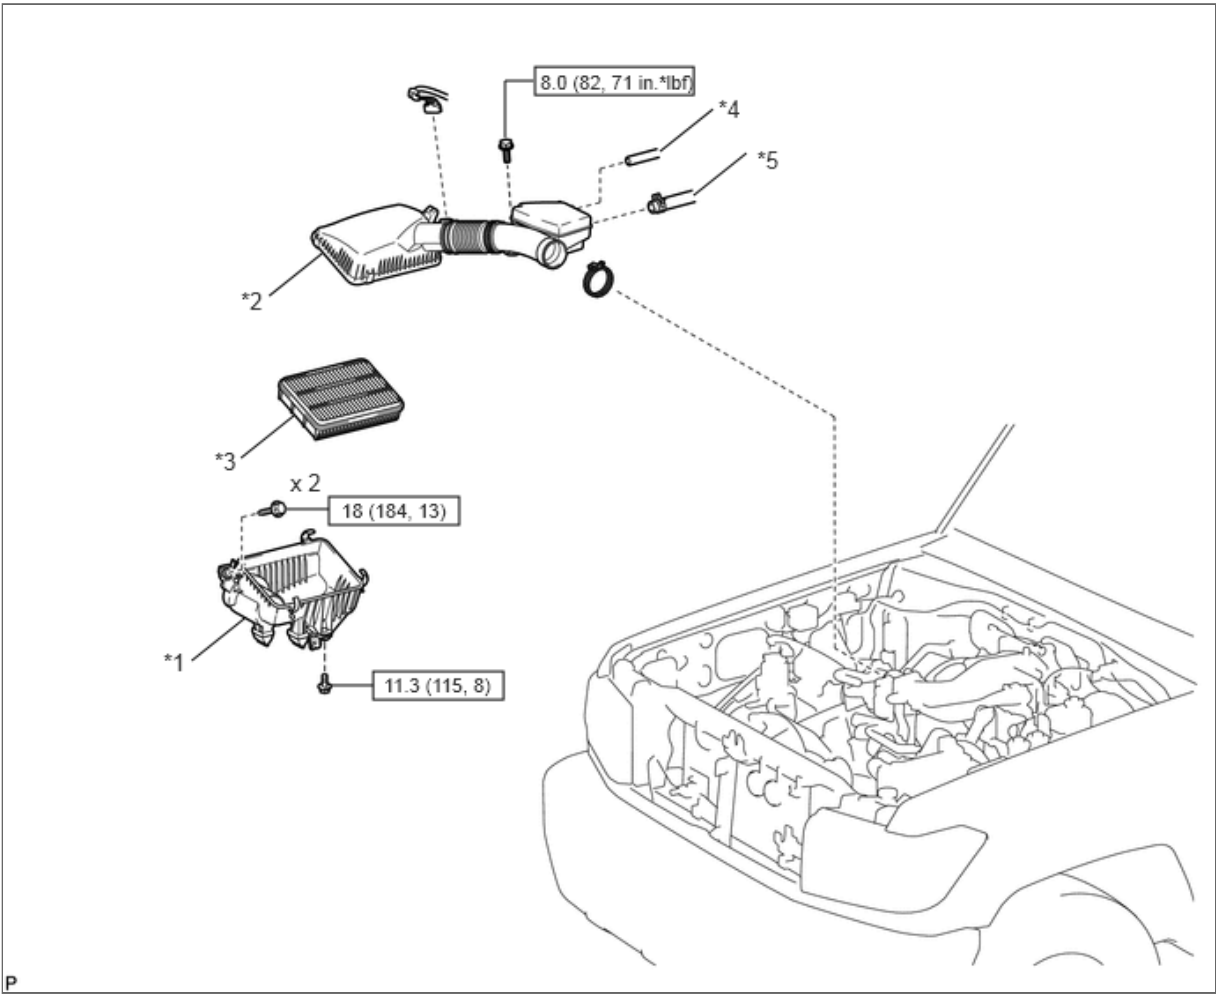


*1	AIR CLEANER ASSEMBLY	*2	AIR CLEANER CAP SUB-ASSEMBLY WITH NO. 1 AIR CLEANER HOSE
*3	AIR CLEANER FILTER ELEMENT SUB-ASSEMBLY	*4	VACUUM HOSE
*5	NO. 2 VENTILATION HOSE	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	-	-


ILLUSTRATION

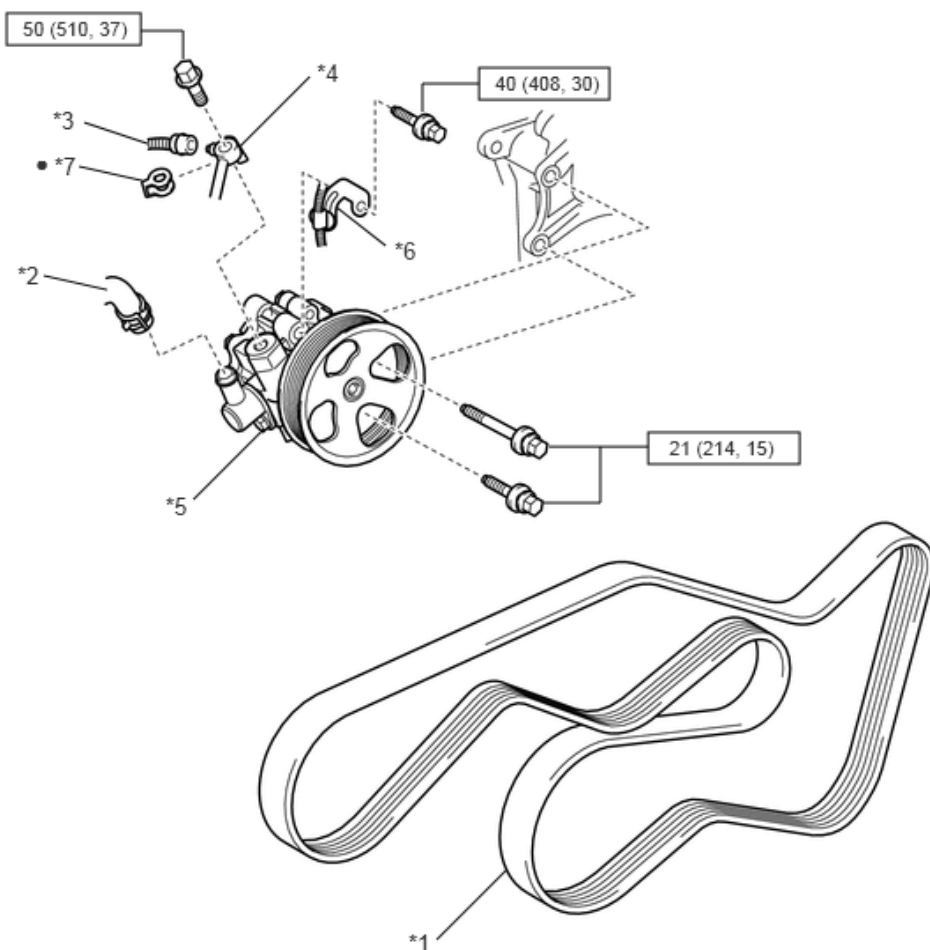

P

*1	FAN AND GENERATOR V BELT	*2	NO. 1 OIL RESERVOIR TO PUMP HOSE
*3	POWER STEERING OIL PRESSURE SWITCH CONNECTOR	*4	PRESSURE FEED TUBE ASSEMBLY
*5	VANE PUMP ASSEMBLY	*6	WIRE HARNESS BRACKET
*7	GASKET	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part

## ILLUSTRATION

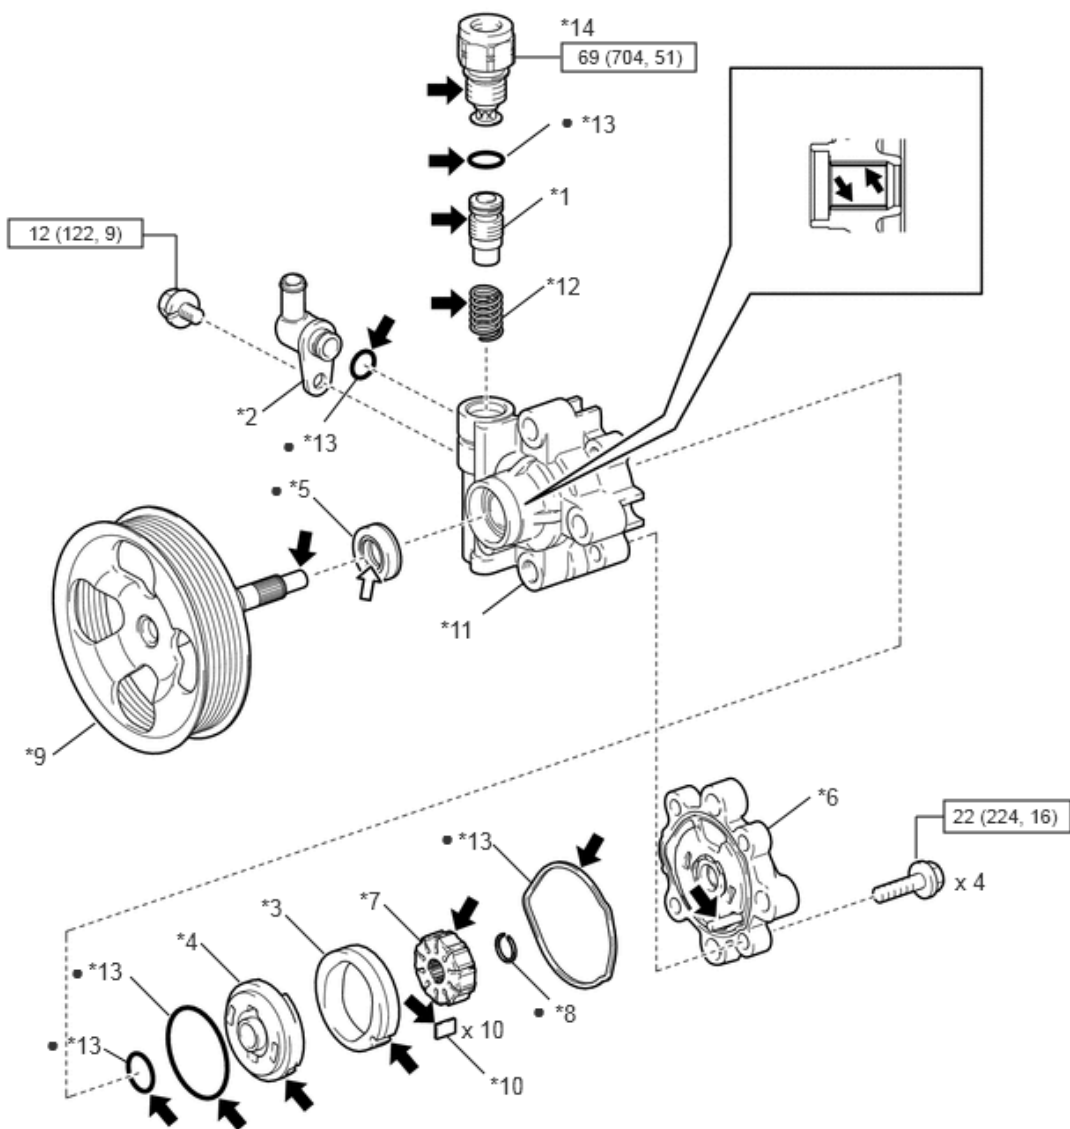

P

*1	FLOW CONTROL VALVE ASSEMBLY	*2	POWER STEERING SUCTION PORT UNION
*3	VANE PUMP CAM RING	*4	VANE PUMP FRONT SIDE PLATE
*5	VANE PUMP HOUSING OIL SEAL	*6	VANE PUMP REAR HOUSING
*7	VANE PUMP ROTOR	*8	VANE PUMP SHAFT SNAP RING
*9	VANE PUMP SHAFT WITH PULLEY	*10	VANE PUMP PLATE
*11	VANE PUMP FRONT HOUSING	*12	FLOW CONTROL COMPRESSION SPRING
*13	O-RING	*14	PRESSURE PORT UNION
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
	Power steering fluid		MP grease