


PROCEDURE**1.INSPECT PCV VALVE SUB-ASSEMBLY****12204**

- a. Install a clean hose to the PCV valve sub-assembly.
- b. Check the PCV valve sub-assembly operation.

i.

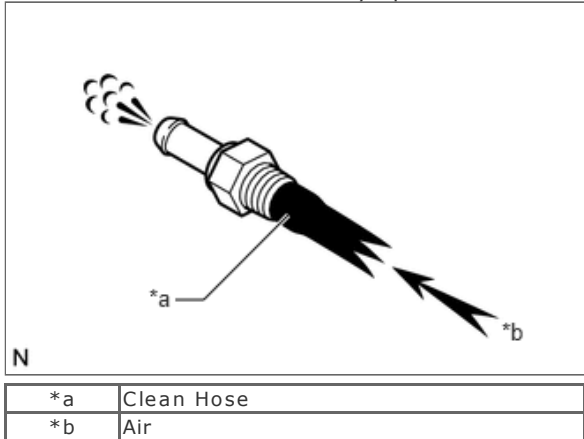


Blow air into the cylinder head sub-assembly side and check that air passes through easily.

CAUTION:

Do not suck air through the PCV valve sub-assembly.

Petroleum substances inside the PCV valve sub-assembly are hazardous to your health.

ii.

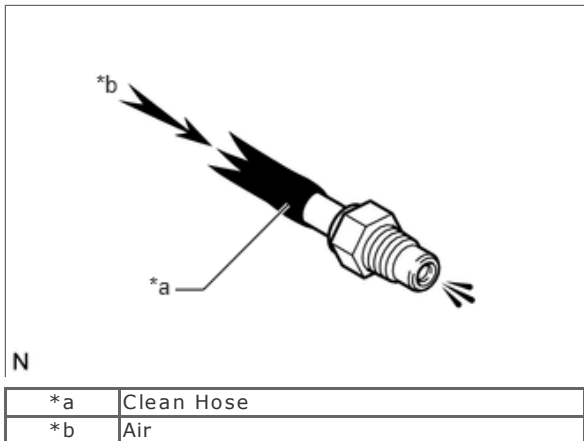

Blow air into the intake air surge tank side and check that air passes through with difficulty.
If the result is not as specified, replace the PCV valve sub-assembly.

- c. Remove the clean hose from the PCV valve sub-assembly.