


## ILLUSTRATION

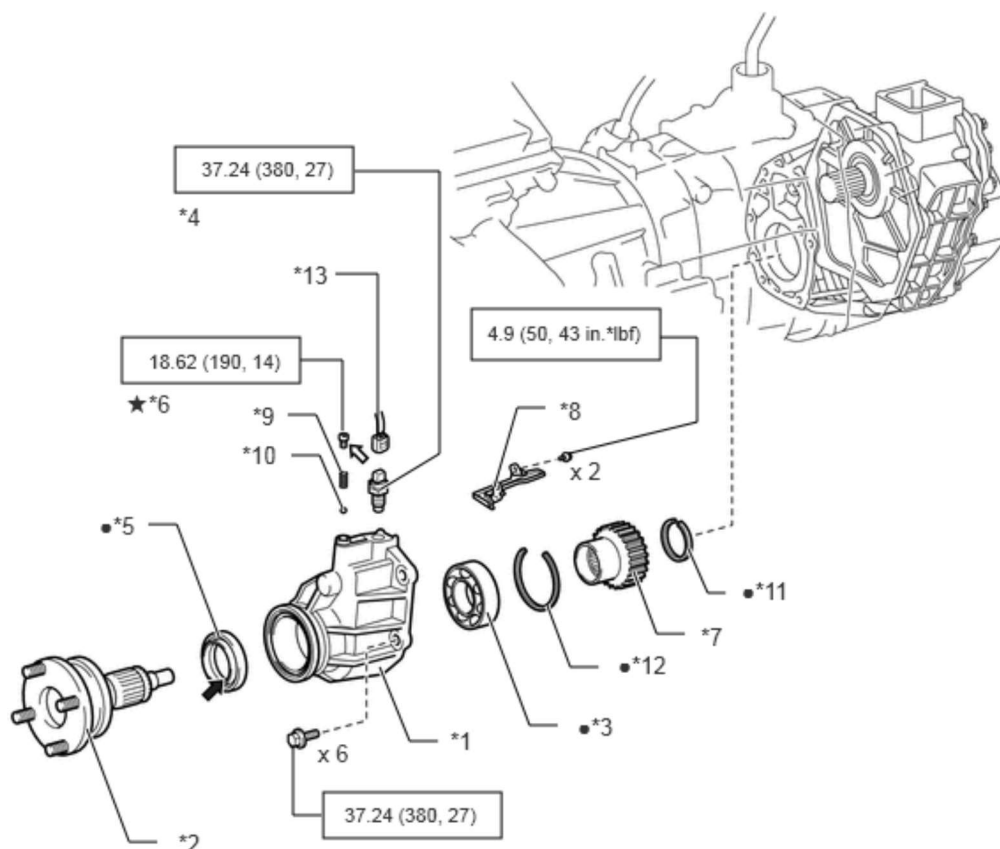

0

*1	FRONT TRANSFER EXTENSION HOUSING SUB-ASSEMBLY	*2	FRONT TRANSFER OUTPUT SHAFT
*3	FRONT TRANSFER OUTPUT SHAFT RADIAL BALL BEARING	*4	NO. 1 TRANSFER INDICATOR SWITCH
*5	OIL SEAL (FRONT TRANSFER EXTENSION HOUSING SUB-ASSEMBLY)	*6	SHIFT DETENT BALL SPRING PLUG
*7	TRANSFER DRIVE CLUTCH HUB	*8	TRANSFER OIL RECEIVER PIPE
*9	SHIFT DETENT BALL COMPRESSION SPRING	*10	SHIFT DETENT BALL
*11	TRANSFER DRIVE CLUTCH HUB SHAFT SNAP RING	*12	FRONT TRANSFER OUTPUT SHAFT BEARING SNAP RING
*13	CONNECTOR	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
	MP grease		Toyota Genuine Adhesive 1344
★	Precoated part	-	-

