

CAUTION / NOTICE / HINT**HINT:**

- Use the same procedure for RHD and LHD vehicles.
- The procedure listed below is for LHD vehicles.


PROCEDURE**1.INSTALL STEERING PAD****45130**

- Check that the ignition switch is off.
- Check that the cable is disconnected from the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

- Support the steering pad with one hand.

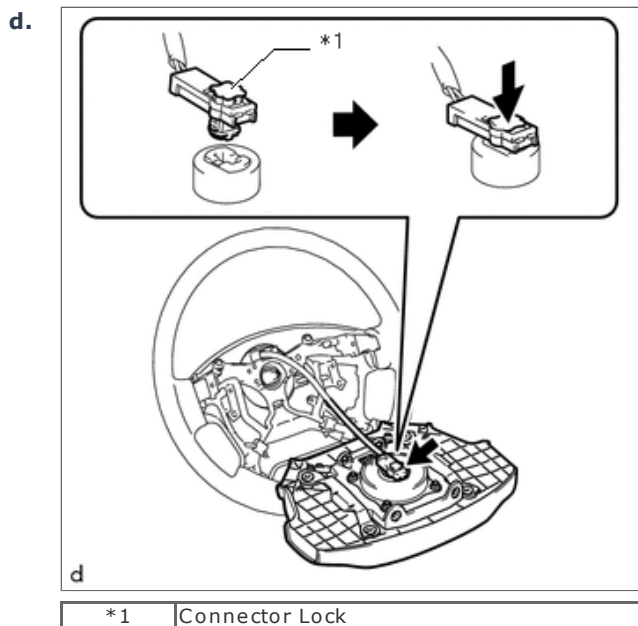


Connect the airbag connector and lock the connector lock.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- Connect the horn connector.
- Set the steering pad to the steering wheel assembly.
- Check that the airbag wire harness and horn wire harness are not pinched.

h.

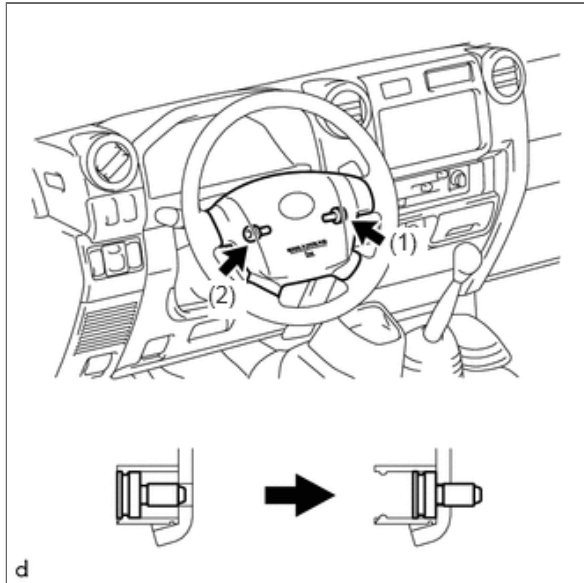

Confirm that the circumference groove of the "TORX" screw fits in the screw case, and place the steering pad onto the steering wheel.

- i. Using a T30 "TORX" socket wrench, tighten the 2 "TORX" screws order shown in the illustration.

Torque:

8.8 N*m (90 kgf*cm, 78 in.*lbf)


NOTICE:

After installation, try to pull the steering pad and check that the steering pad is securely installed.

2.INSTALL LOWER NO. 3 STEERING WHEEL COVER

45187

a.

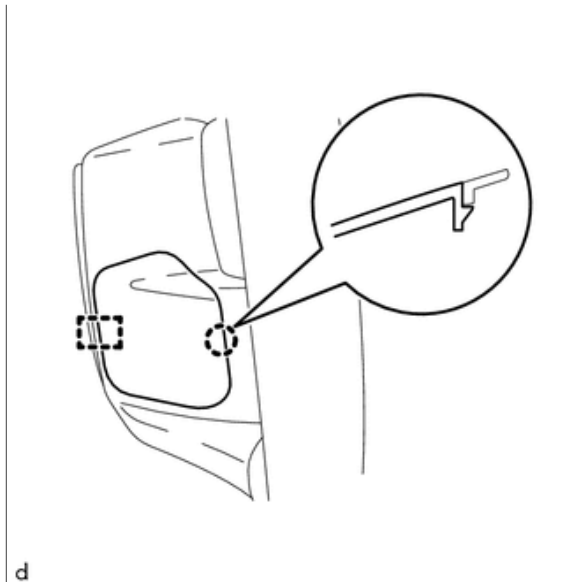


Attach the guide and claw to install the lower No. 3 steering wheel cover.

3.INSTALL LOWER NO. 2 STEERING WHEEL COVER

45186

a.

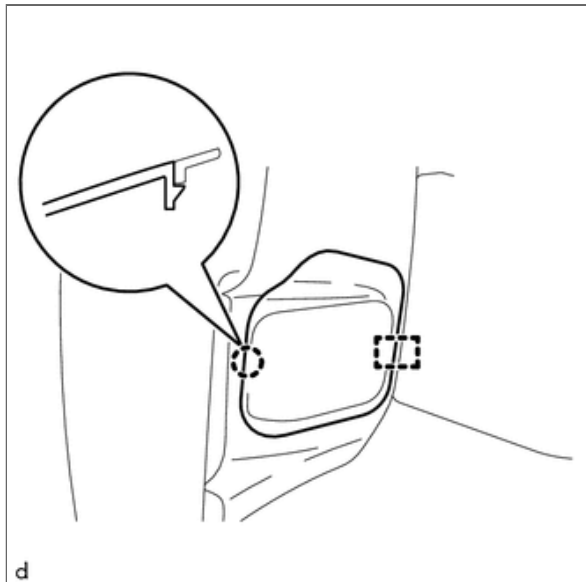

Attach the guide and claw to install the lower No. 2 steering wheel cover.

4.CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

5.INSPECT STEERING PAD

45130

- a. With the steering pad installed to the vehicle, perform a visual check. If there are any defects as mentioned below, replace the steering pad with a new one:
Cuts, minute cracks or marked discoloration on the steering pad top surface or in the grooved portion.

- b. Make sure that the horn sounds.

HINT:

If the horn does not sound, inspect the horn system.

[Click hereVehicle Exterior>HORN>HORN SYSTEM>PROBLEM SYMPTOMS TABLE](#)

6.PERFORM DIAGNOSTIC SYSTEM CHECK

[Click hereVehicle Interior>SUPPLEMENTAL RESTRAINT SYSTEMS>AIRBAG SYSTEM>DTC CHECK / CLEAR](#)

7.CHECK SRS WARNING LIGHT

[Click hereVehicle Interior>SUPPLEMENTAL RESTRAINT SYSTEMS>AIRBAG SYSTEM>DIAGNOSIS SYSTEM](#)