



PROCEDURE

1.INSPECT REMOTE CONTROL SWITCH ASSEMBLY

38640

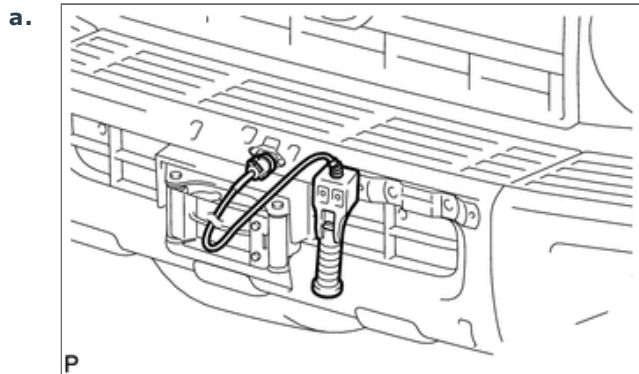

Connect the remote control switch connector.

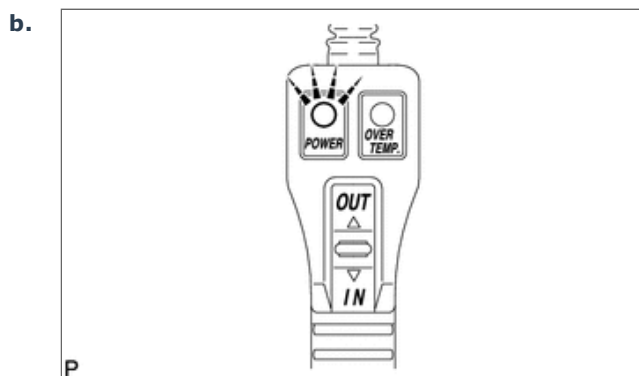

Turn the ignition switch to ON and check that the power indicator light illuminates.

- c. Press the remote control switch, and check that the winch operates.

NOTICE:

Be careful not to tighten or strain the winch wire.

- d. Turn the ignition switch off.

2.REMOVE RADIATOR GRILLE

53111

[Click here](#)Vehicle Exterior>EXTERIOR PANELS / TRIM>RADIATOR GRILLE>REMOVAL

3.REMOVE FRONT VALANCE PANEL

53911

[Click here](#)Vehicle Exterior>EXTERIOR PANELS / TRIM>FRONT BUMPER(for Step Type)>REMOVAL

4.REMOVE FRONT BUMPER COVER

52119A

[Click here](#)Vehicle Exterior>EXTERIOR PANELS / TRIM>FRONT BUMPER(for Step Type)>REMOVAL

5.REMOVE FRONT BUMPER BRACKET SUB-ASSEMBLY LH

52016B

[Click here](#)Vehicle Exterior>EXTERIOR PANELS / TRIM>FRONT BUMPER(for Step Type)>REMOVAL

6.REMOVE FRONT BUMPER BRACKET SUB-ASSEMBLY RH


52015B

7.REMOVE FRONT BUMPER REINFORCEMENT PLATE SUB-ASSEMBLY

52101B


8.INSPECT OVERHEAT TEMPERATURE INDICATOR

a.

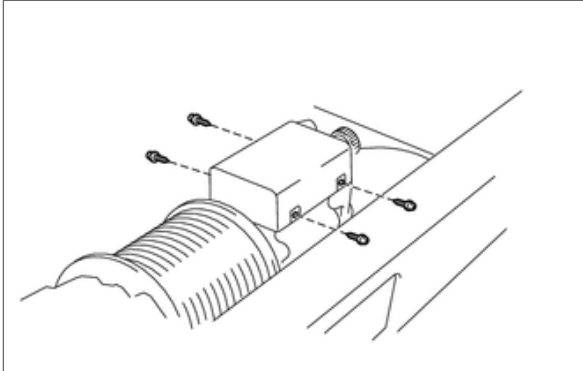


Remove the 4 screws and cover.

b.

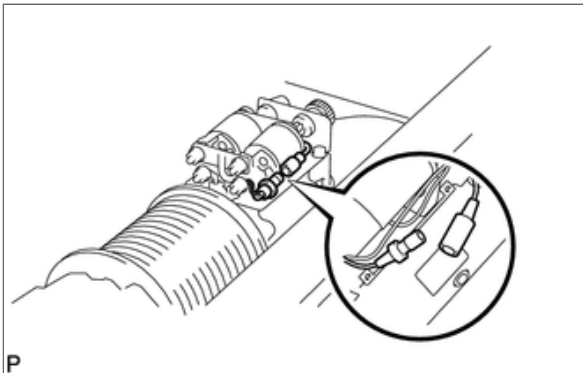

Disconnect the motor relay connector.

c.

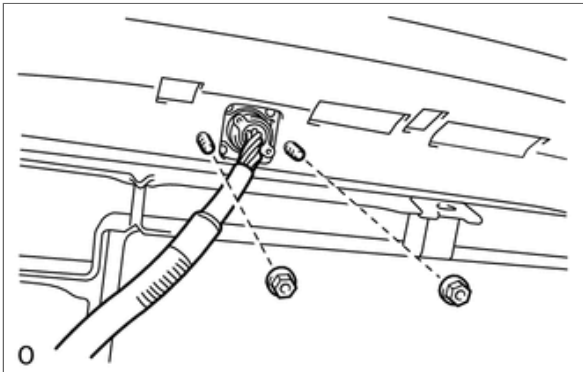


Remove the 2 nuts.

d. Pull the bumper side winch control wire out of the bumper.

e. Connect the bumper side winch control wire connector to the vehicle side winch control wire connector.

f. Connect the bumper side winch control wire connector to the winch control switch connector.

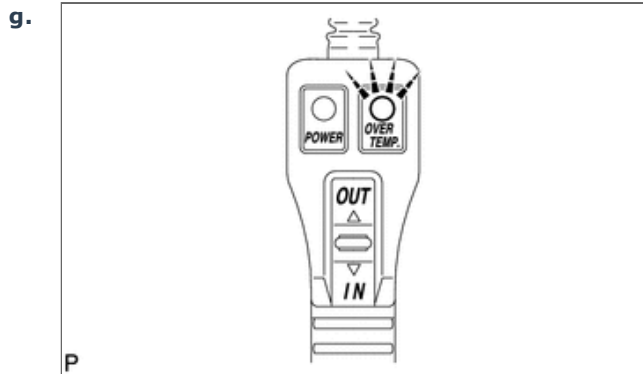

Turn the ignition switch to ON and check that the overheat temperature indicator light illuminates and the buzzer sounds.

- h.** Turn the ignition switch off.
- i.** Disconnect the bumper side winch control wire connector from the winch control switch connector.
- j.** Disconnect the bumper side winch control wire connector from the vehicle side winch control wire connector.
- k.** Pass the bumper side winch control wire through the bumper.
- l.** Install the 2 nuts.
Torque:
5.0 N*m (51 kgf*cm, 44 in.*lbf)
- m.** Connect the motor relay connector.
- n.** Install the cover with the 4 screws.

9.INSTALL FRONT BUMPER REINFORCEMENT PLATE SUB-ASSEMBLY	52101B
--	---------------

Click here[Vehicle Exterior>EXTERIOR PANELS / TRIM>FRONT BUMPER\(for Step Type\)>INSTALLATION](#)

10.INSTALL FRONT BUMPER BRACKET SUB-ASSEMBLY LH	52016B
--	---------------

Click here[Vehicle Exterior>EXTERIOR PANELS / TRIM>FRONT BUMPER\(for Step Type\)>INSTALLATION](#)

11.INSTALL FRONT BUMPER BRACKET SUB-ASSEMBLY RH	52015B
--	---------------

Click here[Vehicle Exterior>EXTERIOR PANELS / TRIM>FRONT BUMPER\(for Step Type\)>INSTALLATION](#)

12.INSTALL FRONT BUMPER COVER	52119A
--------------------------------------	---------------

Click here[Vehicle Exterior>EXTERIOR PANELS / TRIM>FRONT BUMPER\(for Step Type\)>INSTALLATION](#)

13.INSTALL FRONT VALANCE PANEL	53911
---------------------------------------	--------------

Click here[Vehicle Exterior>EXTERIOR PANELS / TRIM>FRONT BUMPER\(for Step Type\)>INSTALLATION](#)

14.INSTALL RADIATOR GRILLE	53111
-----------------------------------	--------------

Click here[Vehicle Exterior>EXTERIOR PANELS / TRIM>RADIATOR GRILLE>INSTALLATION](#)