



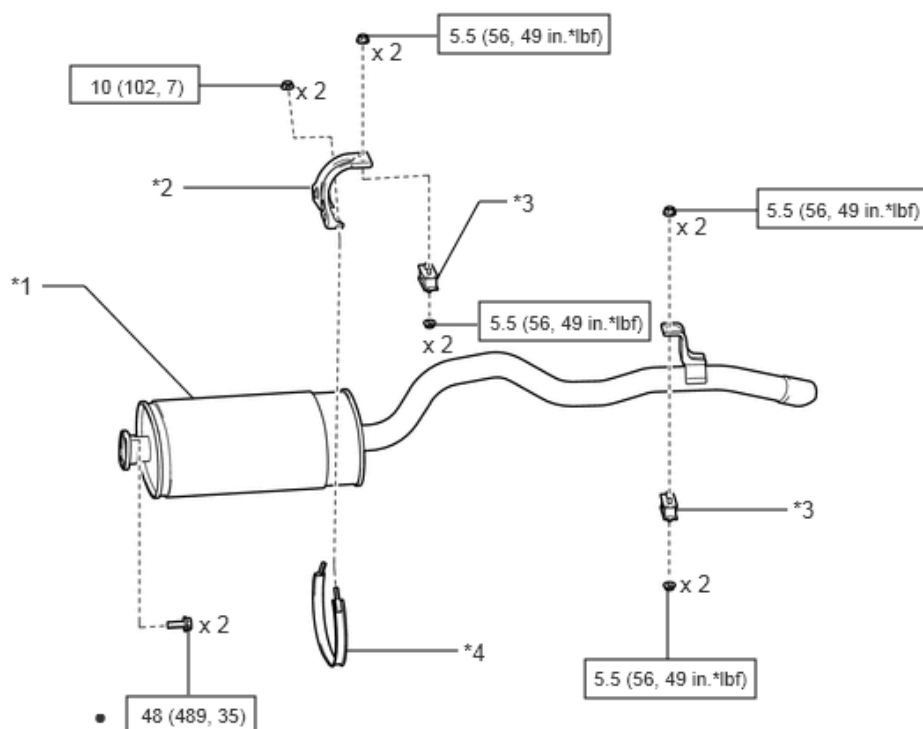
ILLUSTRATION

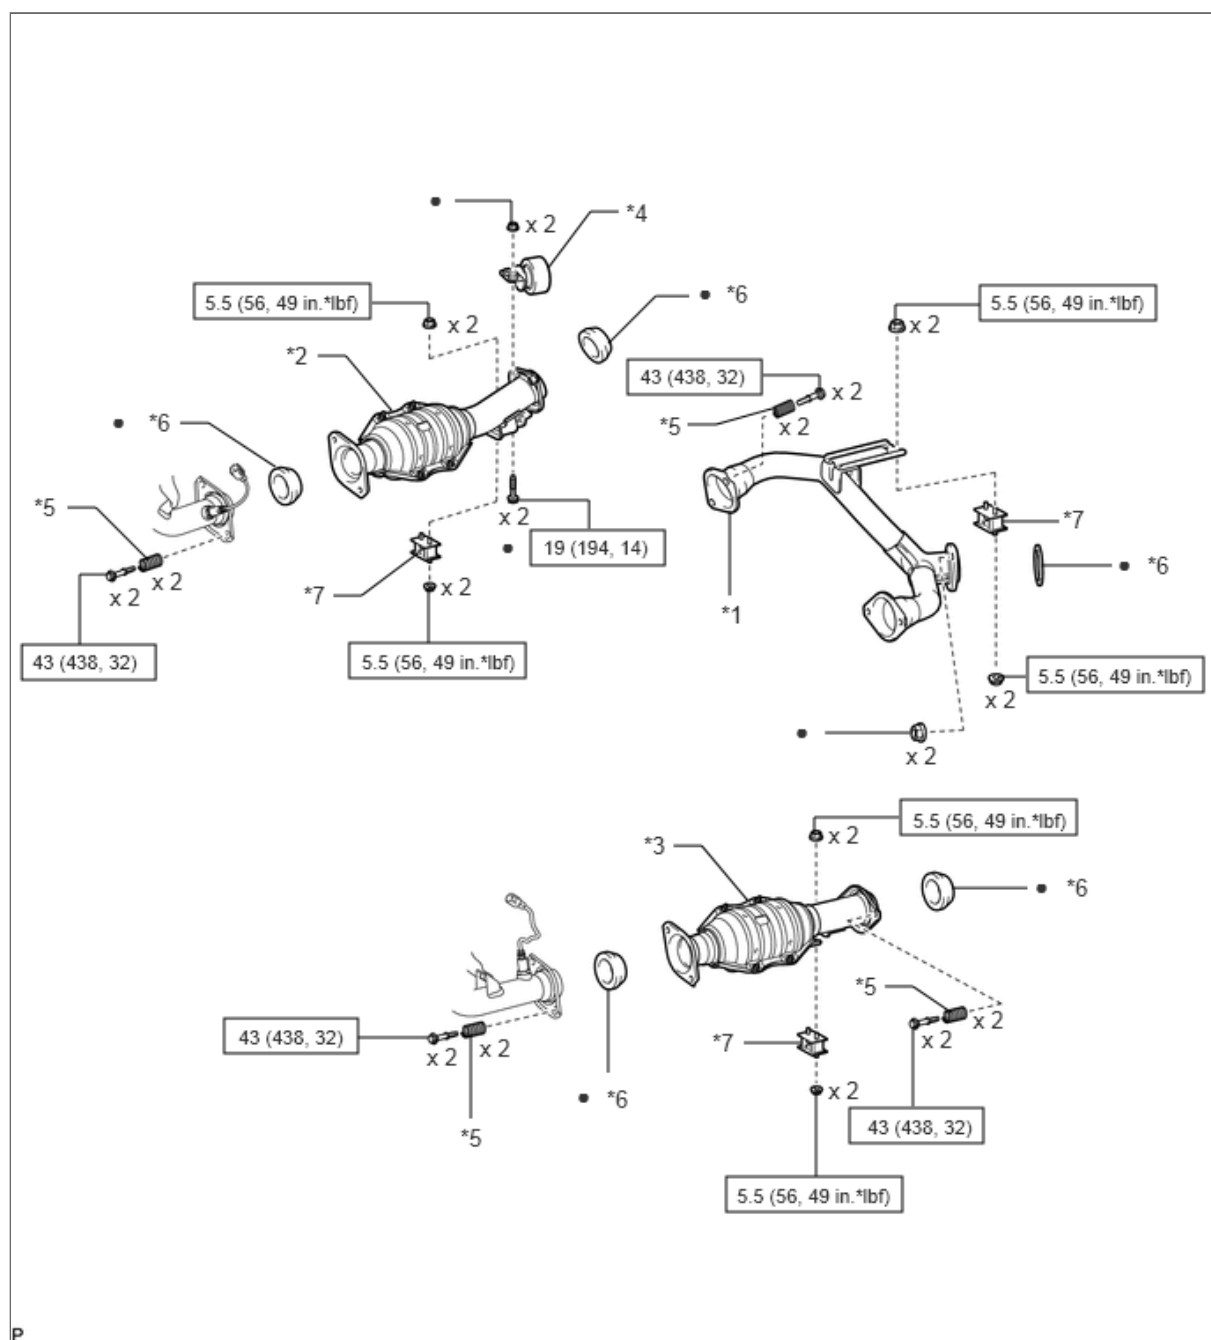


*1	CENTER EXHAUST PIPE ASSEMBLY	*2	FRONT EXHAUST PIPE ASSEMBLY
*3	NO. 2 FRONT EXHAUST PIPE ASSEMBLY	*4	EXHAUST PIPE DAMPER
*5	COMPRESSION SPRING	*6	GASKET
*7	EXHAUST PIPE SUPPORT CUSHION	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part

ILLUSTRATION

*A




P


*A	for Model Code #J71 Series	-	-
*1	TAILPIPE ASSEMBLY	*2	NO. 2 EXHAUST PIPE SUPPORT STAY
*3	EXHAUST PIPE SUPPORT CUSHION	*4	EXHAUST PIPE CLAMP
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part

ILLUSTRATION

*A

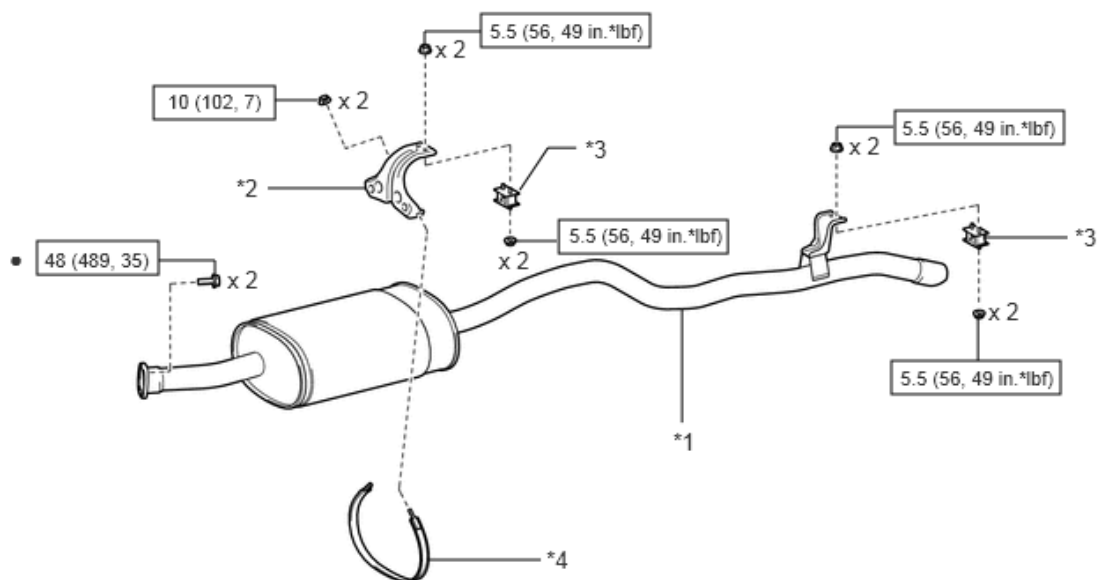

P

*A	for Model Code #J76 Series	-	-
*1	TAILPIPE ASSEMBLY	*2	NO. 2 EXHAUST PIPE SUPPORT STAY
*3	EXHAUST PIPE SUPPORT CUSHION	*4	EXHAUST PIPE CLAMP
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part