



## PROCEDURE

### 1.DRAIN MANUAL TRANSMISSION OIL

a. Stop the vehicle on a level surface.

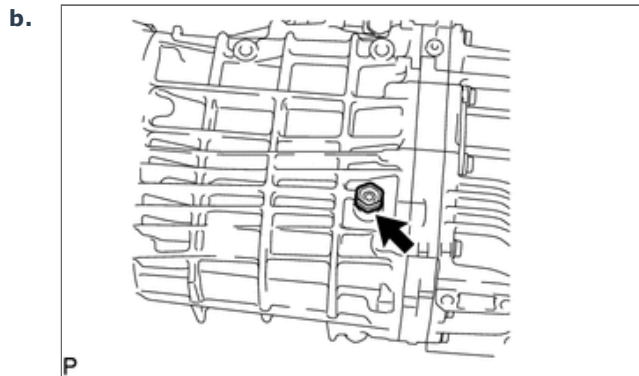

Remove the manual transmission case plug and gasket.

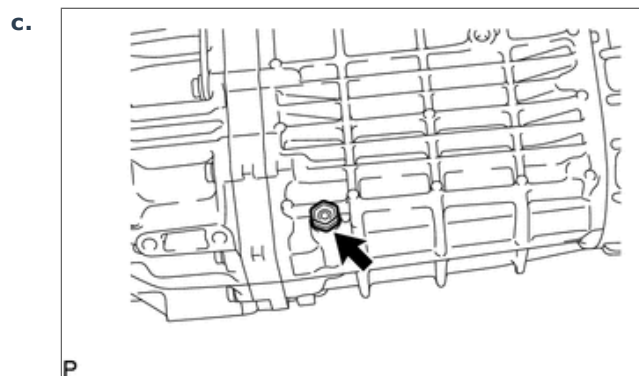


Remove the drain plug sub-assembly and gasket to drain the manual transmission oil.

d. Install a new gasket and the drain plug sub-assembly.

**Torque:**

**37.24 N\*m (380 kgf\*cm, 27 ft.\*lbf)**

### 2.ADD MANUAL TRANSMISSION OIL

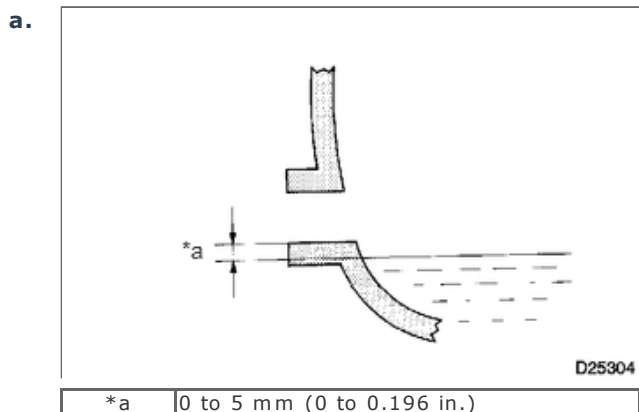


Add manual transmission oil until the oil level is within 0 to 5 mm (0 to 0.196 in.) from the bottom of the manual transmission case plug opening.

**Manual transmission oil:**

Oil grade	Oil viscosity	Standard capacity
GL-4	SAE 75W-90	2.9 liters (3.1 US qts, 2.6 Imp. qts)

**b.**

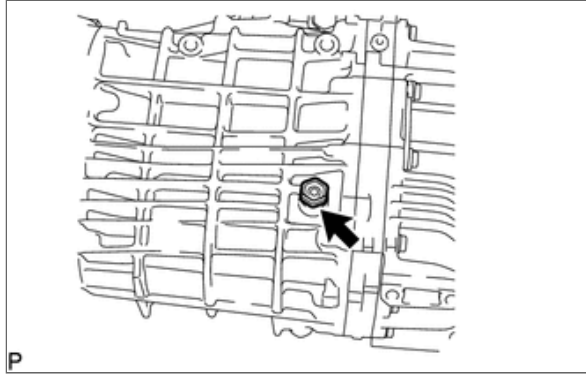

Install a new gasket and the manual transmission case plug.

**Torque:**

**37.24 N\*m (380 kgf\*cm, 27 ft.\*lbf)**