


ILLUSTRATION

*A

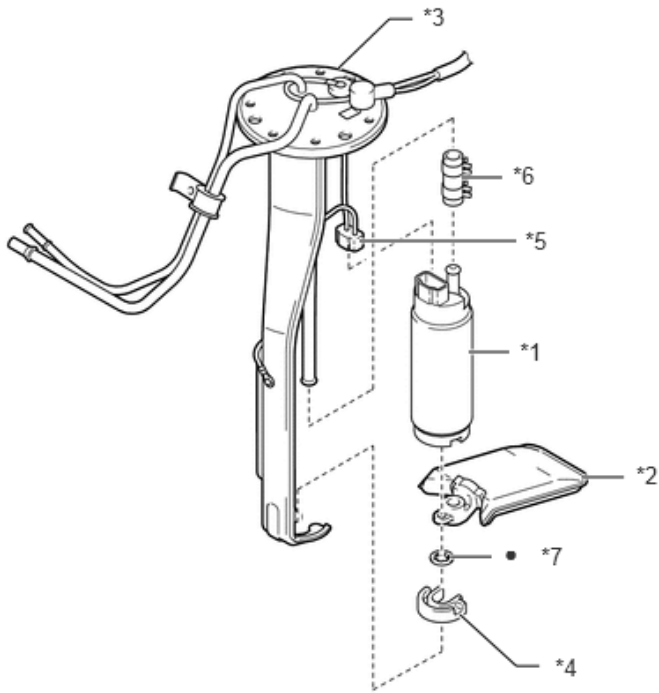


P

*A	for 90 L Tank Carried in Rear	-	-
*1	FUEL PUMP	*2	FUEL PUMP FILTER
*3	FUEL SUCTION TUBE SUB-ASSEMBLY	*4	RUBBER CUSHION
*5	LEAD WIRE CONNECTOR	*6	FUEL HOSE
*7	CLIP	-	-
•	Non-reusable part	-	-

ILLUSTRATION

*A

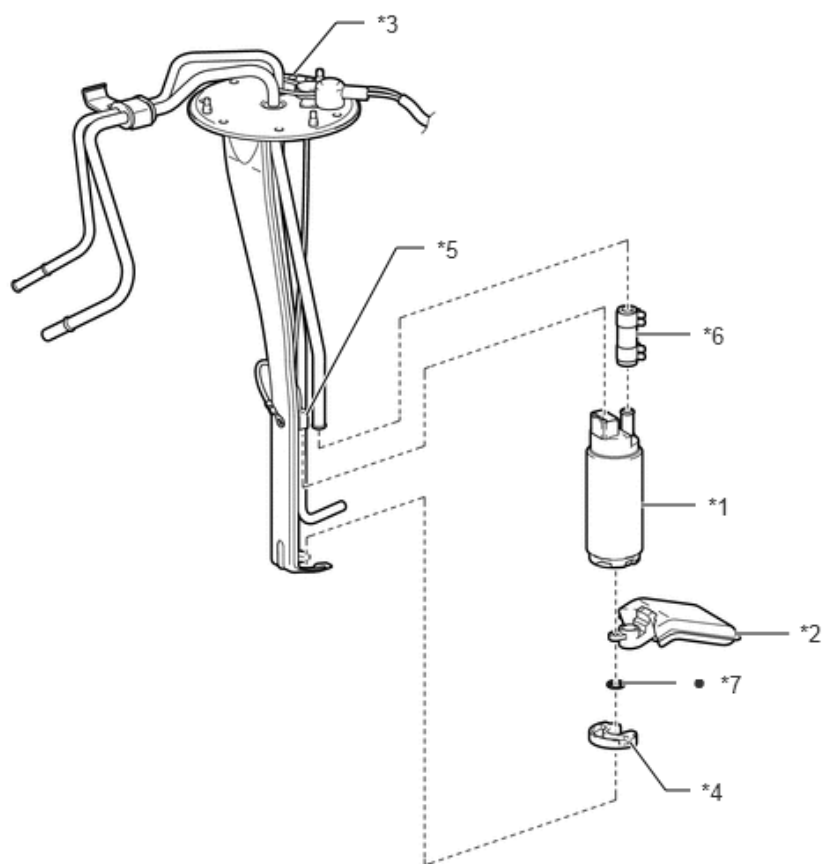


P


*A	for 130 L Tank	-	-
*1	FUEL PUMP	*2	FUEL PUMP FILTER
*3	FUEL SUCTION TUBE SUB-ASSEMBLY	*4	RUBBER CUSHION
*5	LEAD WIRE CONNECTOR	*6	FUEL HOSE
*7	CLIP	-	-
•	Non-reusable part	-	-

ILLUSTRATION

*A

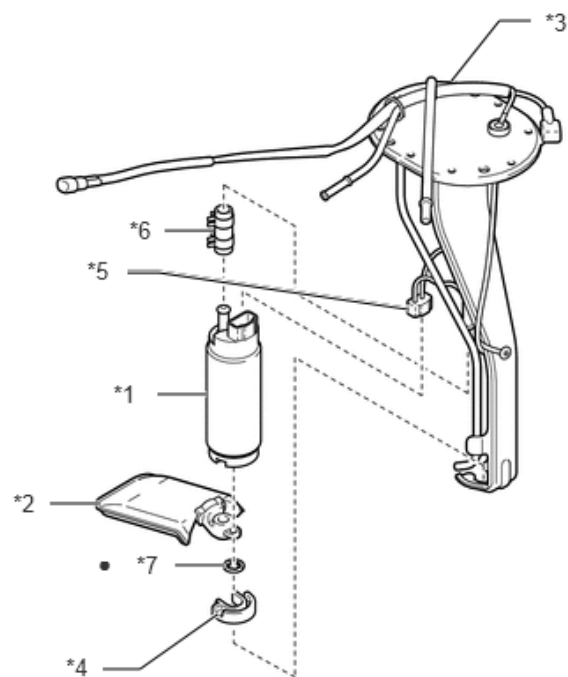

*B

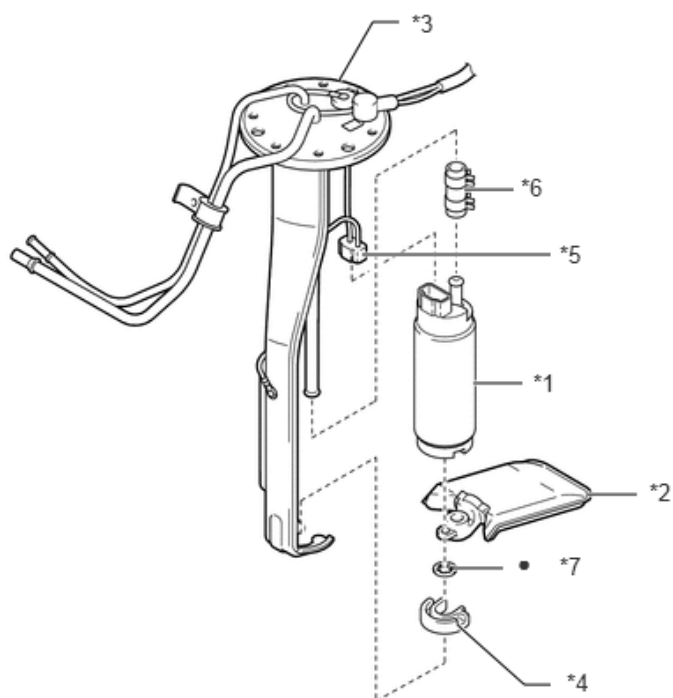

P

*A	for 90 L Tank Carried in Middle	*B	for Fuel Sub Tank
*1	FUEL PUMP	*2	FUEL PUMP FILTER
*3	FUEL SUCTION TUBE SUB-ASSEMBLY	*4	RUBBER CUSHION
*5	LEAD WIRE CONNECTOR	*6	FUEL HOSE
*7	CLIP	-	-
•	Non-reusable part	-	-