


## FRONT SUSPENSION FRONT LATERAL CONTROL ROD INSTALLATION

## PROCEDURE

## 1.INSTALL FRONT LATERAL CONTROL ROD BUSHING SUB-ASSEMBLY

48706

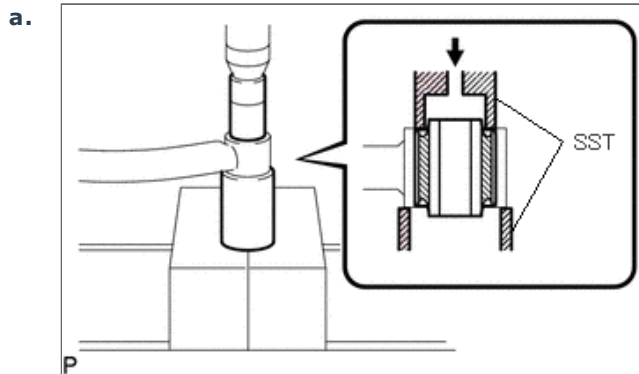

Using a press, install 2 new front lateral control rod bushing sub-assemblies into the front lateral control rod assembly.

**SST****09710-22042 (09710-02051, 09710-02071)**

## 2.TEMPORARILY INSTALL FRONT LATERAL CONTROL ROD ASSEMBLY

48740A

- a. Temporarily install the front lateral control rod assembly to the frame with a new bolt and nut.
- b. Temporarily install the front lateral control rod assembly to the front axle housing assembly with a new bolt.

## 3.INSTALL FRONT WHEEL


[Click here](#)Suspension>TIRE / WHEEL>TIRE AND WHEEL>INSTALLATION

## 4.STABILIZE SUSPENSION

[Click here](#)Suspension>FRONT SUSPENSION>FRONT COIL SPRING>INSTALLATION

## 5.TIGHTEN FRONT LATERAL CONTROL ROD ASSEMBLY


48740A

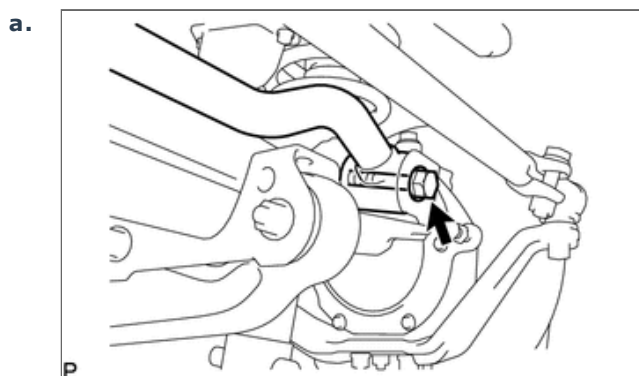

Tighten the bolt.

**Torque:****171.6 N\*m (1750 kgf\*cm, 127 ft.\*lbf)**

b.

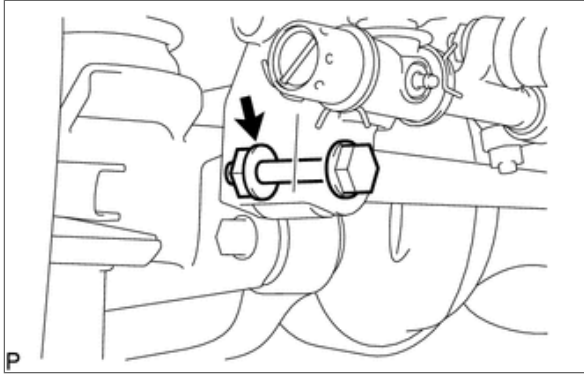

Tighten the bolt and nut.

**Torque:**

**171.6 N\*m (1750 kgf\*cm, 127 ft.\*lbf)**