

CAUTION / NOTICE / HINT

HINT:

- Use the same procedure for the RH and LH sides.
- The procedure listed below is for the LH side.


PROCEDURE

1.REMOVE FRONT WHEEL

Click here [Suspension>TIRE / WHEEL>TIRE AND WHEEL>REMOVAL](#)

2.REMOVE FRONT SHOCK ABSORBER ASSEMBLY LH


48520

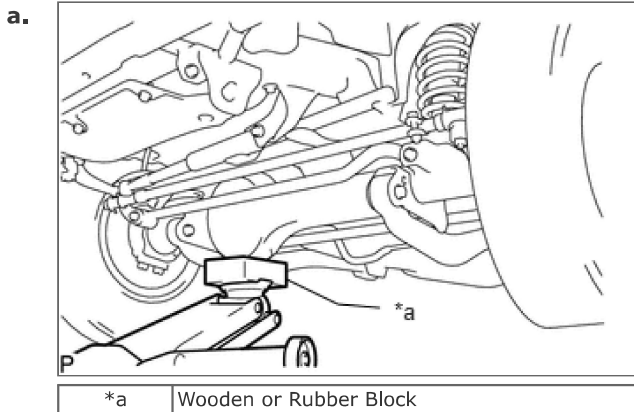

Support the front axle housing assembly with a jack.

NOTICE:


Place a wooden or rubber block between the jack and arm.

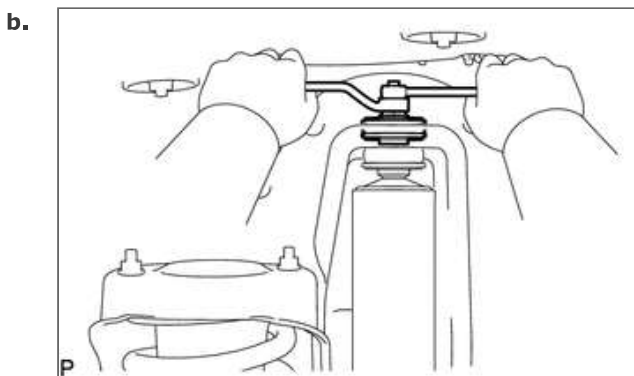

Hold the piston rod and remove the nut.

- c. Remove the front No. 2 shock absorber cushion retainer and front No. 1 shock absorber cushion retainer.


d.

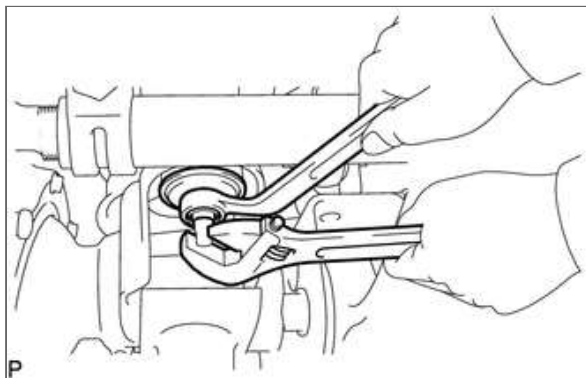

Hold the front shock absorber assembly LH and remove the nut.

e. Remove the front shock absorber assembly LH and front No. 2 shock absorber cushion retainer.

f.

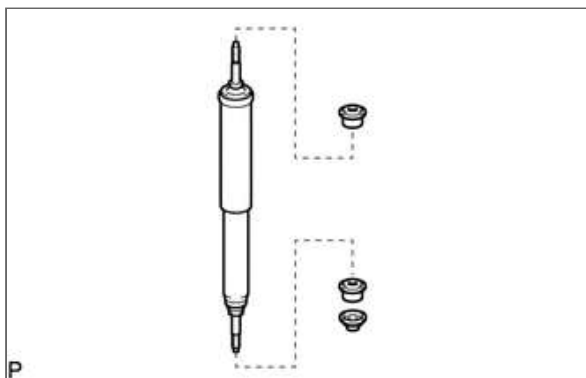

Remove the 2 front No. 2 shock absorber cushion retainers and front No. 1 shock absorber cushion retainer from the front shock absorber assembly LH.