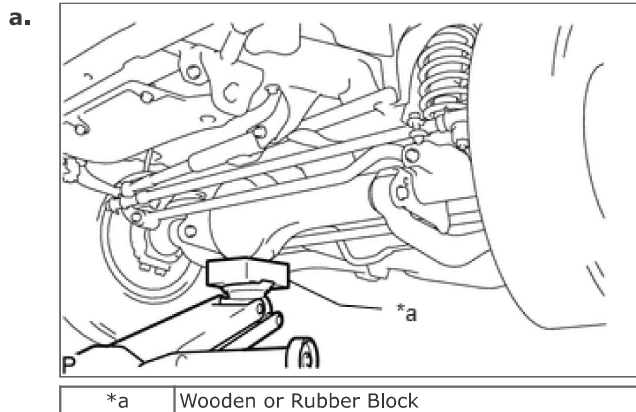


PROCEDURE

1.REMOVE FRONT WHEEL


[Click here](#)Suspension>TIRE / WHEEL>TIRE AND WHEEL>REMOVAL

2.REMOVE FRONT LATERAL CONTROL ROD ASSEMBLY**48740A**


Support the front axle housing assembly with a jack.

NOTICE:

Place a wooden or rubber block between the jack and arm.

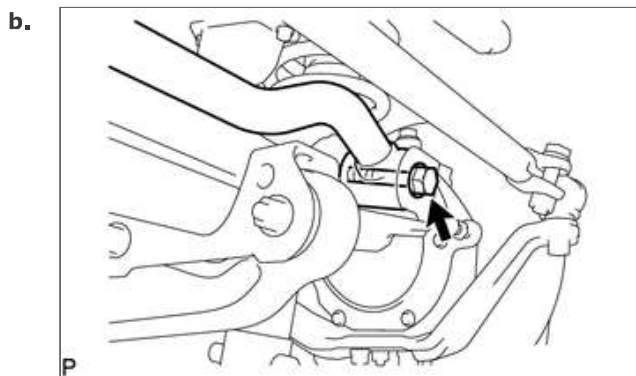


Remove the front lateral control rod assembly from the front axle housing assembly with the bolt.

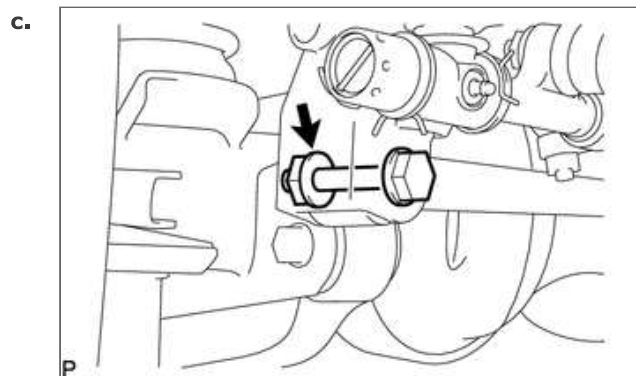

Remove the front lateral control rod assembly from the frame with the bolt and nut.



a.

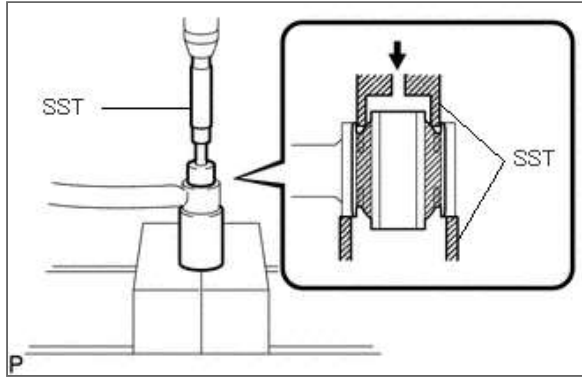

Using SST and a press, remove the 2 front lateral control rod bushing sub-assemblies from the front lateral control rod assembly.

SST

09710-22042 09950-70010 (09710-02051, 09710-02071, 09951-07150)