
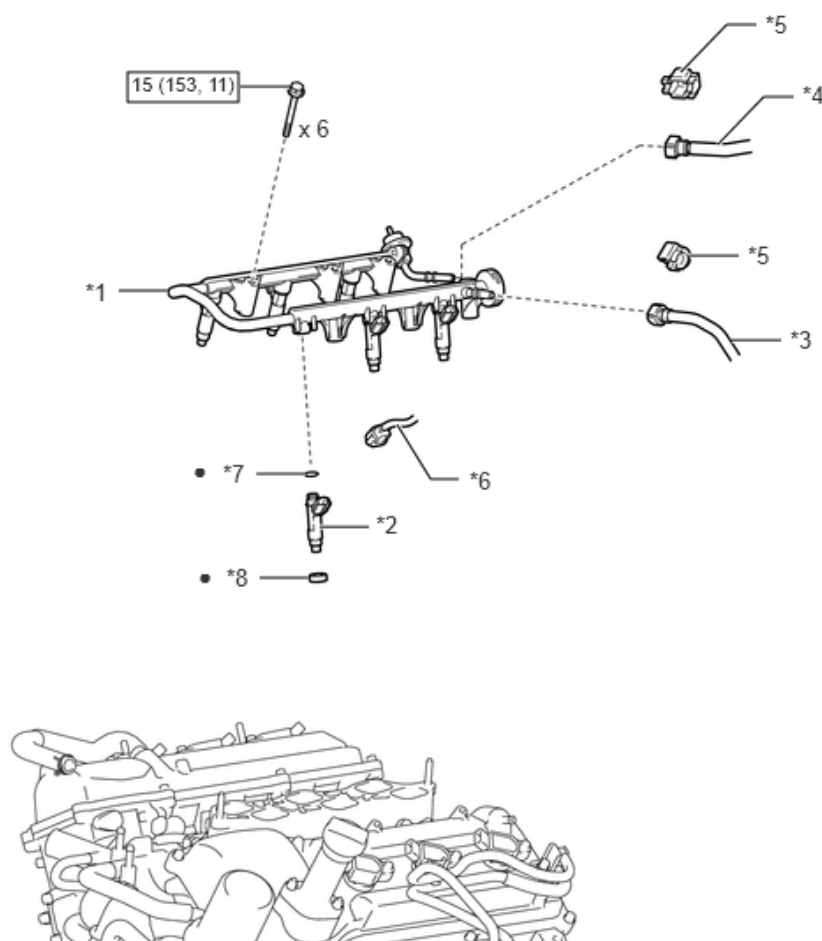


## ILLUSTRATION



P

*1	FUEL DELIVERY PIPE SUB-ASSEMBLY	*2	FUEL INJECTOR ASSEMBLY
*3	NO. 1 FUEL PIPE SUB-ASSEMBLY	*4	NO. 2 FUEL PIPE SUB-ASSEMBLY
*5	NO. 2 FUEL PIPE CLAMP	*6	FUEL INJECTOR CONNECTOR
*7	O-RING	*8	FUEL VIBRATION INSULATOR
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part