


ILLUSTRATION

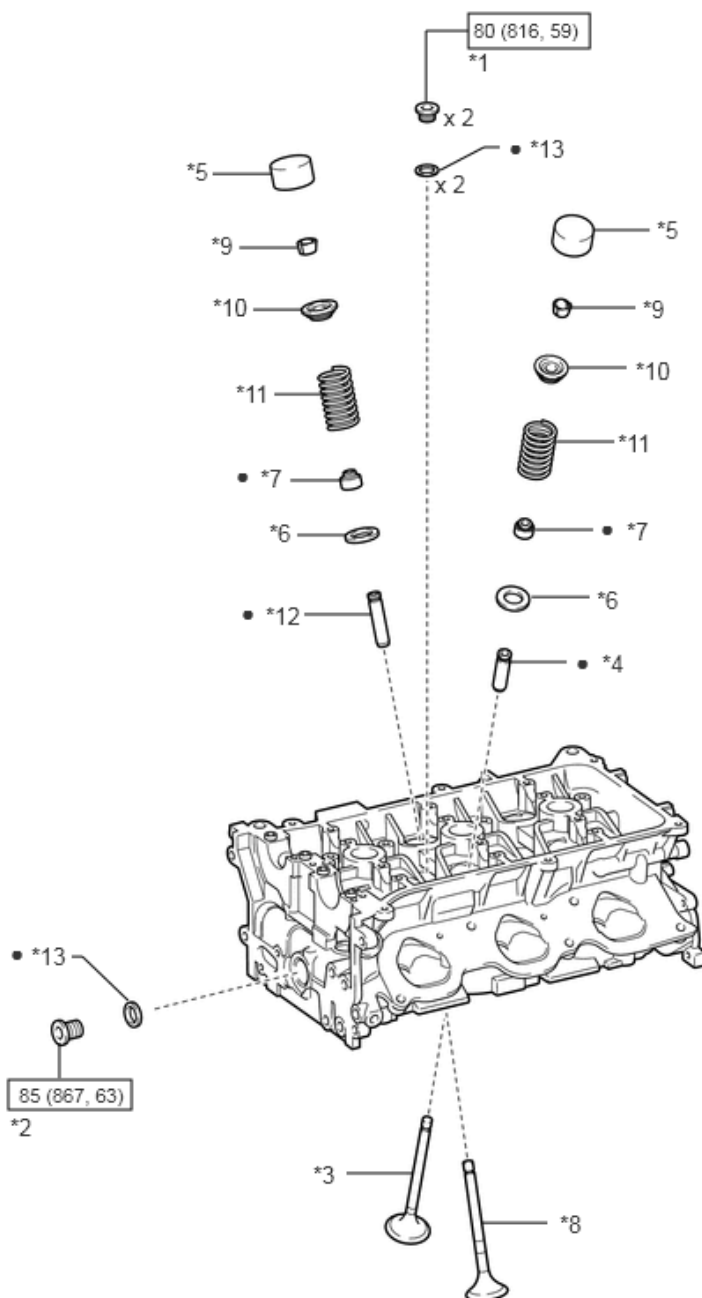


P

*1	NO. 1 STRAIGHT SCREW PLUG	*2	NO. 2 STRAIGHT SCREW PLUG
*3	INTAKE VALVE	*4	INTAKE VALVE GUIDE BUSH
*5	VALVE LIFTER	*6	VALVE SPRING SEAT
*7	VALVE STEM OIL SEAL	*8	EXHAUST VALVE
*9	VALVE SPRING RETAINER LOCK	*10	VALVE SPRING RETAINER
*11	INNER COMPRESSION SPRING	*12	EXHAUST VALVE GUIDE BUSH
*13	GASKET	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part

--	--	--	--

ILLUSTRATION

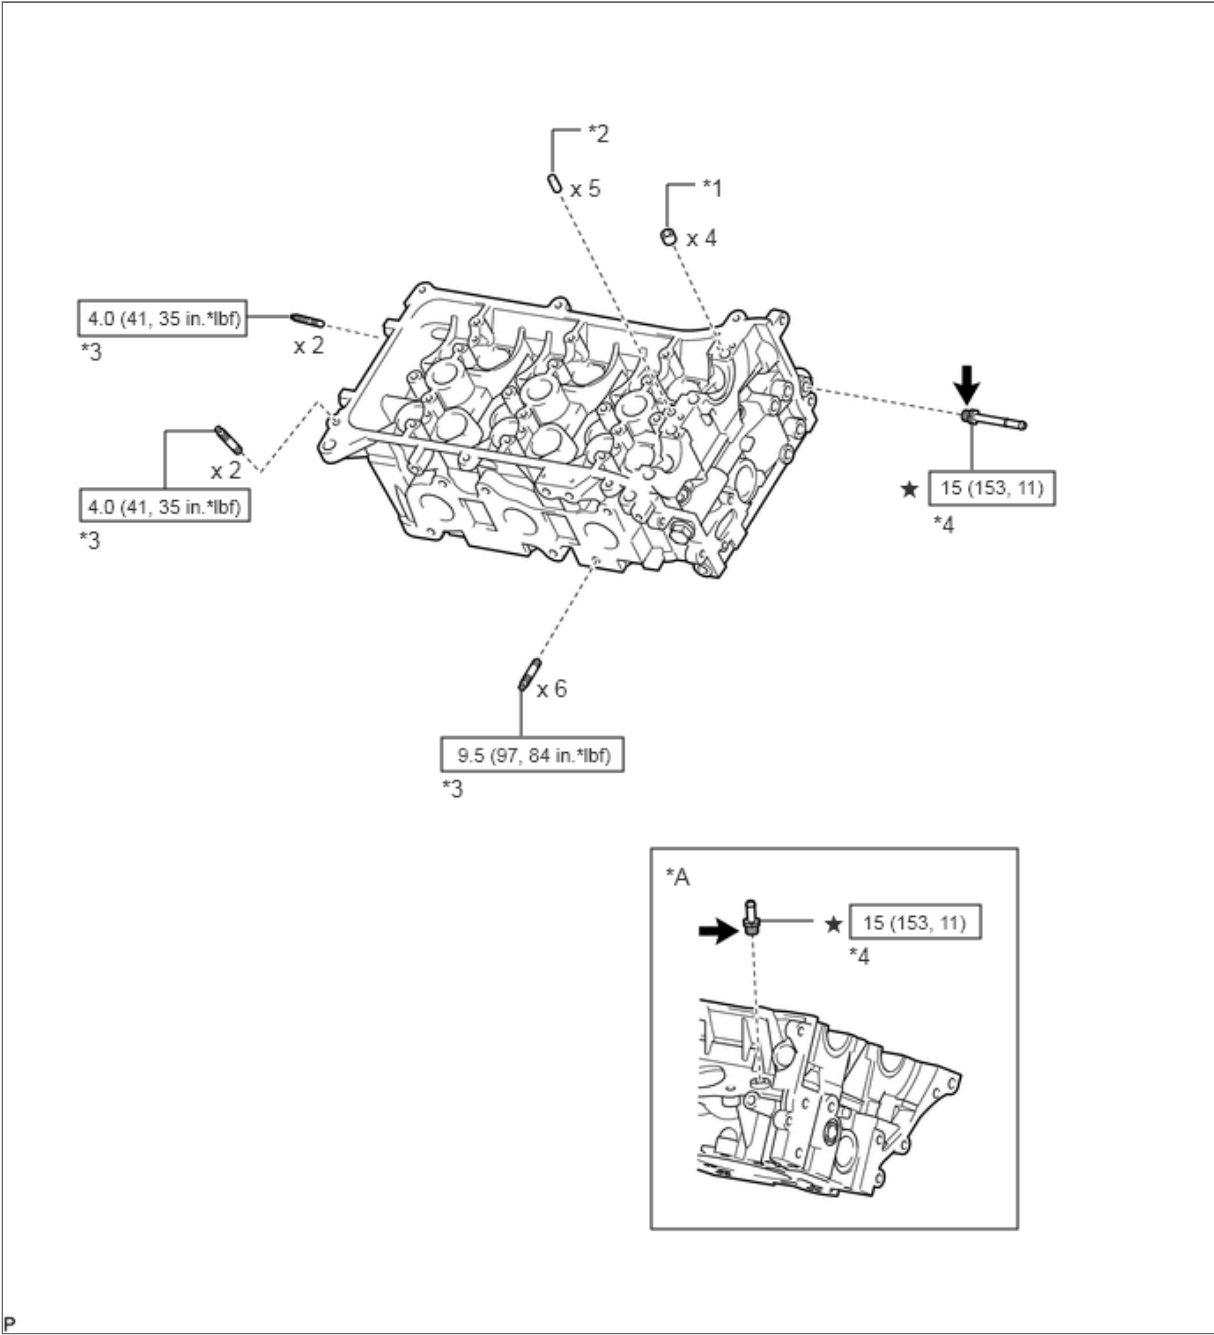

<div> <div></div> </div>	*A	for LH	-	-
	*1	RING PIN	*2	STRAIGHT PIN
	*3	STUD BOLT	*4	UNION
<div> <div></div> </div>	N*m (kgf*cm, ft.*lbf): Specified torque		<div> <div></div> </div>	Toyota Genuine Adhesive 1324, Three Bond 1324 or equivalent
★	Precoated part		-	-