


PROCEDURE

**1.REMOVE CLUTCH RELEASE CYLINDER KIT****04313**

- a. Remove the boot together with the push rod from the clutch release cylinder body.
- b. Remove the push rod from the boot.

c.

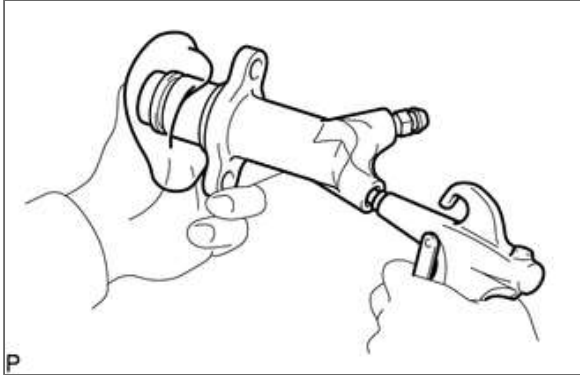

Using compressed air, remove the piston together with the spring from the clutch release cylinder body.

NOTICE:

Do not damage the inside of the cylinder body.

- d. Remove the 2 cylinder cups from the piston.

**2.REMOVE RELEASE CYLINDER BLEEDER PLUG****31477**

- a. Remove the bleeder plug cap.
- b. Remove the release cylinder bleeder plug from the clutch release cylinder body.