

## CAUTION / NOTICE / HINT

## HINT:

- Use the same procedure for the RH and LH sides.
- The procedure listed below is for the LH side.

## PROCEDURE

**1.REMOVE FRONT WHEEL**

Click here [Suspension>TIRE / WHEEL>TIRE AND WHEEL>REMOVAL](#)


**2.REMOVE FRONT SHOCK ABSORBER ASSEMBLY LH**

48520

Click here [Suspension>FRONT SUSPENSION>FRONT SHOCK ABSORBER>REMOVAL](#)

**3.DISCONNECT FRONT STABILIZER BAR**


48811

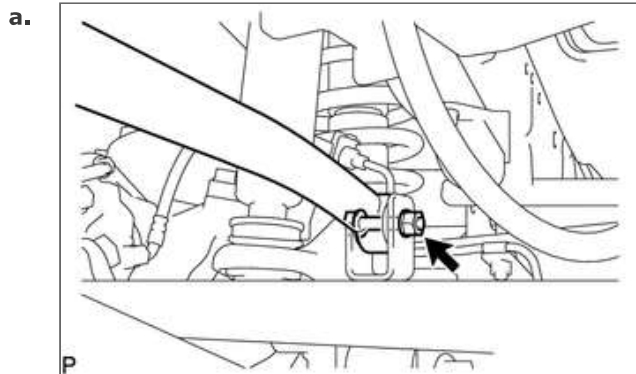

Remove the bolt, nut and disconnect the front stabilizer bar from the front axle housing assembly.

**4.REMOVE FRONT COIL SPRING LH**

48132

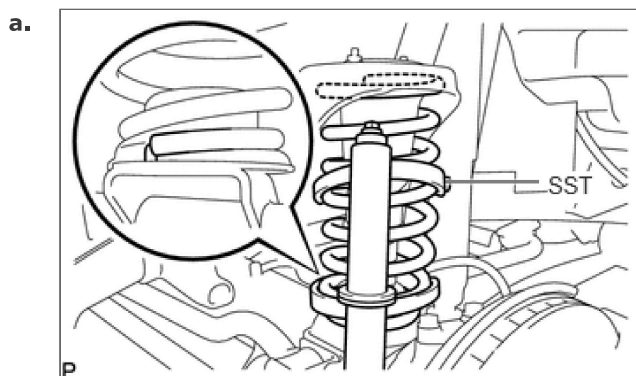

Using SST, compress the front coil spring LH.

**SST**

**09727-30022 (09727-00022, 09727-00031)**

**NOTICE:**

Do not use an impact wrench.

b. While lowering the front axle housing assembly, remove the front coil spring LH.

c. Remove SST from the front coil spring LH.

**NOTICE:**


Do not use an impact wrench.



## 5.REMOVE FRONT SUSPENSION HOLLOW SPRING ASSEMBLY LH

48310A

a.

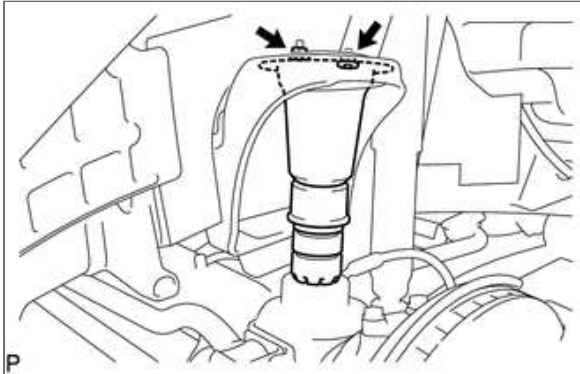


Remove the 2 nuts and front suspension hollow spring assembly LH from the frame.



## 6.REMOVE FRONT SPRING BUMPER LH

48331C

a.

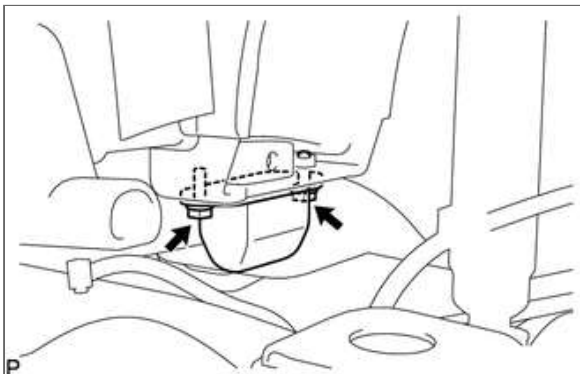

Remove the 2 bolts and front spring bumper LH.