




BRAKE SYSTEM (OTHER) LOAD SENSING PROPORTIONING VALVE COMPONENTS

ILLUSTRATION

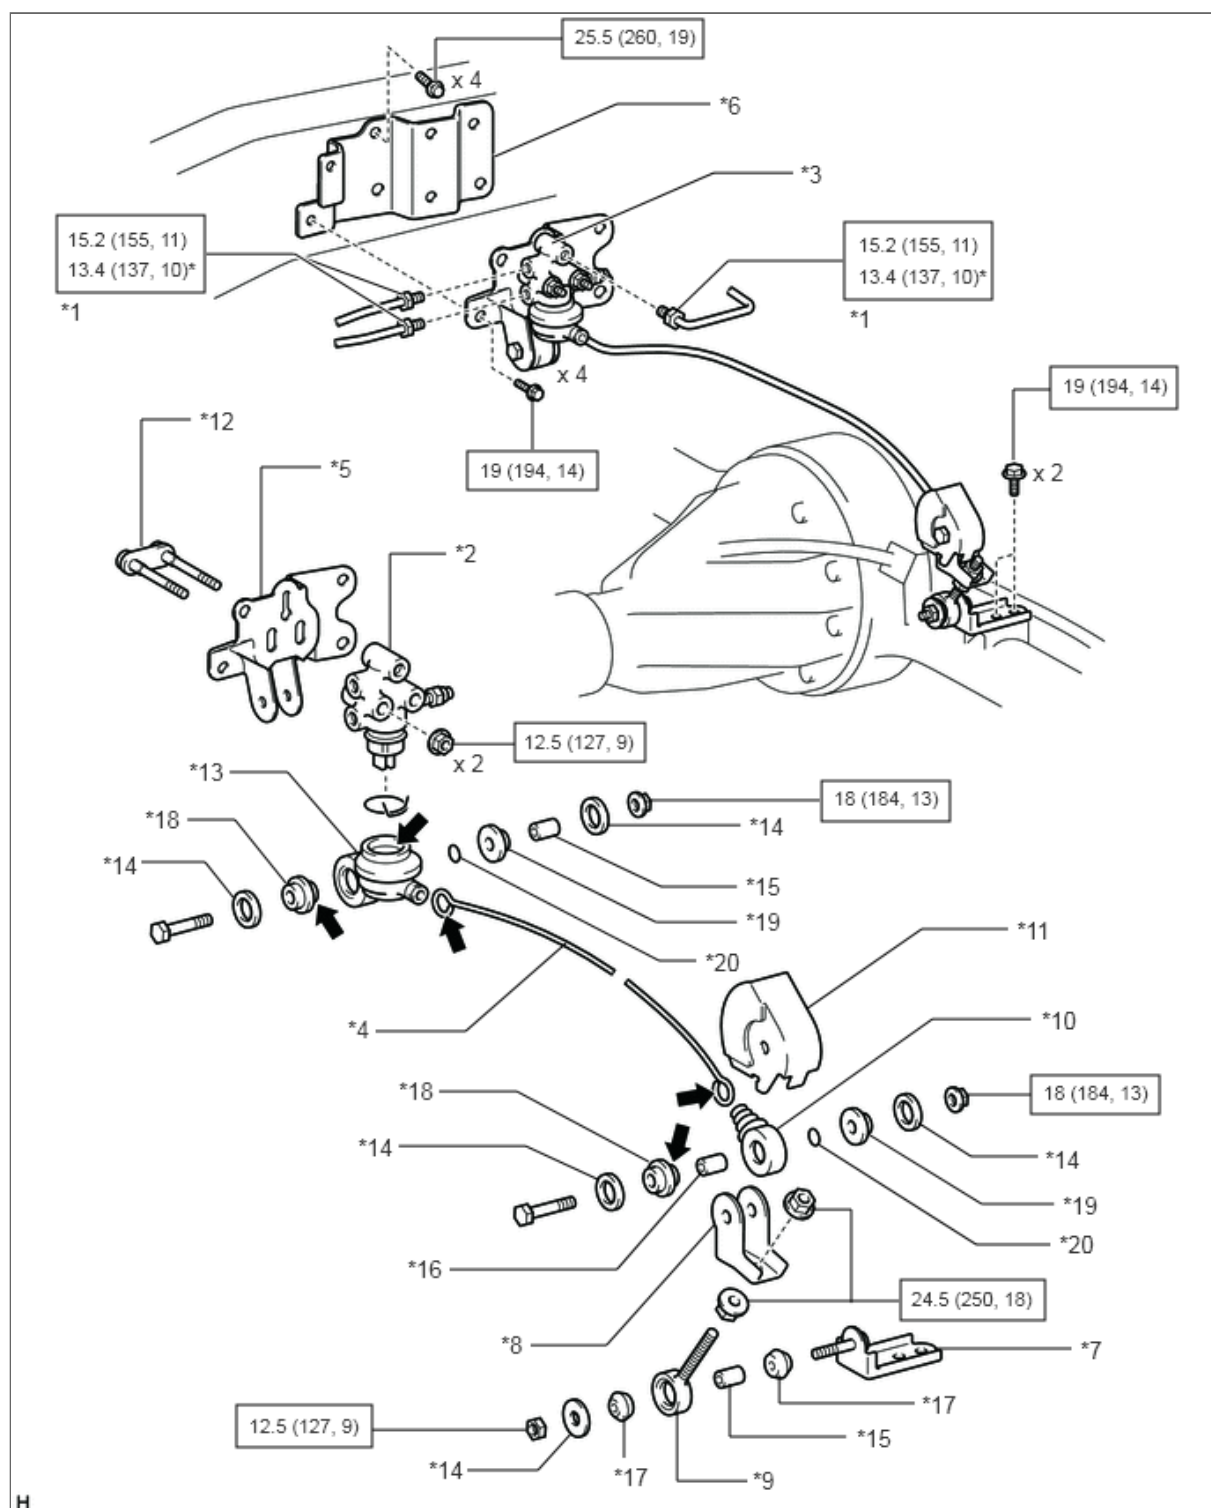

H

*1	BRAKE TUBE	*2	LOAD SENSING PROPORTIONING VALVE
*3	LOAD SENSING PROPORTIONING VALVE ASSEMBLY	*4	LOAD SENSING SPRING ASSEMBLY
*5	LOAD SENSING VALVE BRACKET	*6	LOAD SENSING VALVE UNION BRACKET
*7	NO. 1 LOAD SENSING SHACKLE BRACKET	*8	NO. 1 LOAD SENSING SPRING SHACKLE
*9	NO. 2 LOAD SENSING SPRING SHACKLE	*10	LOAD SENSING SPRING BOOT
*11	LOAD SENSING SPRING SHACKLE HEAT INSULATOR	*12	SET PLATE
*13	LOAD SENSING VALVE BOOT	*14	PLATE WASHER
*15	LOAD SENSING SPRING SHACKLE COLLAR	*16	LOAD SENSING SPRING COLLAR

*17	LOAD SENSING SPRING SHACKLE BUSH	*18	NO. 1 LOAD SENSING SPRING BUSH
*19	NO. 2 LOAD SENSING SPRING BUSH	*20	LOAD SENSING SPRING WASHER
	N*m (kgf*cm, ft.*lbf) : Specified torque	*	For use with union nut wrench
	Lithium soap base glycol grease	-	-